

## Set up LAN and WAN for TurboSpeed TCG220-T

1. Type **192.168.1.1** then press Enter, type Username = admin, Password = password and press Login



Residential Gateway Logo x

192.168.1.1

**TURBOSPEED**

### Login

**Login**  
Please enter username and password to login.

Username

Password

Login

2. On top, click Basic > Setup, it'll display Basic Setup as follows:

2.1. LAN settings

2.1.1. IP Address > set IP Gateway to access Config Router

Modem page

2.1.2. DNS Server > Proxy DNS, can change to other DNS

values e.g. DNS Google 8.8.8.8

2.2. WAN settings > will display values e.g. received IP Wan,

received DNS

**TURBOSPEED**

Status **Basic** Advanced Firewall Parental Control Wireless

**Basic Setup**

This page allows configuration of the basic features of the broadband gateway related to

**Network Configuration**

**LAN**

IP Address: 192 . 168 . 1 . 1  
 IP Mask: 255 . 255 . 255 . 0  
 DNS Server: 0 (Disabled)  0 (Disabled)   
 Primary DNS: 192 . 168 . 1 . 1  
 MAC Address: b4:74:9f:93:c3:2d

**Interface/Prefix**  
 None Specified

**WAN**

IP Address: 10.91.56.7  
 MAC Address: b4:74:9f:93:c3:2b  
 Duration: D: 00 H: 00 M: 10 S: 00  
 Expires: Thu Apr 23 03:27:28 2015  
 IPv4 DNS Servers: 10.92.192.130  
 10.92.192.2

Release WAN Lease Renew WAN Lease

WAN Connection Type: DHCP  DHCP   
 Static IP   
 L2TP (dhcp)   
 L2TP (static)

IPv4 MTU Size: 0 (256-1500 octets, 0 = use default)  
 Apply

- On top, click Basic > DHCP, it'll display Basic DHCP and can set up DHCP as well as knowing the Client who's using

The screenshot shows the TurboSpeed router's configuration interface. At the top, there are tabs for Status, Basic, Advanced, Firewall, Parental Control, and Wireless. The 'Basic' tab is selected and highlighted with a red arrow. On the left side, there is a sidebar with buttons for Setup, DHCP, DDNS, SNTP, and Backup. The 'DHCP' button is also highlighted with a red arrow. The main content area is titled 'Basic DHCP' and contains the following configuration options:

- DHCP Server:  Yes  No
- Starting Local Address:
- Number of CPEs:
- Lease Time:
- Apply:

Below these settings is a table titled 'DHCP Clients' with the following data:

| MAC Address  | IP Address      | Subnet Mask     | Duration            | Expires                  | Select                |
|--------------|-----------------|-----------------|---------------------|--------------------------|-----------------------|
| 5cf9dd4ddc04 | 192.168.001.033 | 255.255.255.000 | D:-- H:-- M:-- S:-- | *** STATIC IP ADDRESS ** | <input type="radio"/> |

At the bottom of the page, it shows the 'Current System Time: Thu Apr 23 03:25:55 2015' and a 'Force Available' button.