

Unboxing True SMART 4G M1 Plus

Front





Back





Front of device (screen protector attached)

- 1) Speaker
- 2) Front camera





Back of device

- 1) Back Camera
- 2) Flash
- 3) Speaker





Top of device

- 1) USB port
- 2) Headphone Jack





Bottom of device


- 1) Microphone
- 2) Slot for opening back cover





Right of device

- 1) Volume Up/Down
- 2) Power On/Off

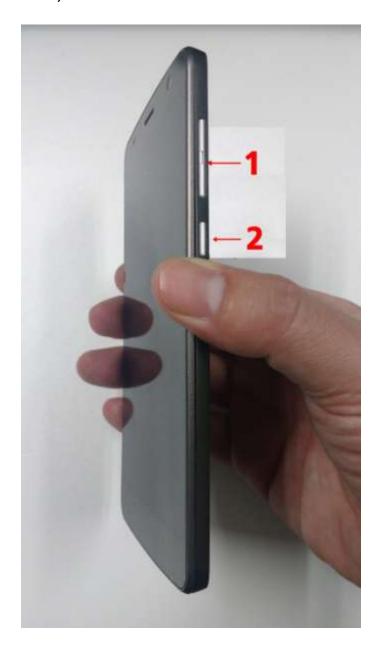



On the left (no button)





SIM Card slot

- 1) SIM1 slot
- 2) SIM2 slot
- 3) micro SD card slot





Equipments in a box

- True SMART 4G M1 Plus
- Clear case 1 pc.
- USB cable for charging and data sync
- Charger plug
- Headphone 3.5 mm.
- Batter 3,000 mAh
- User guide
- Warranty

