


Set up Dynamic DNS for ZTE F612C

1. Open a Browser e.g. IE, Chrome and type <http://192.168.1.1> then press **Enter**

- Username = **admin**
- Password = **password**
- Press **Login**

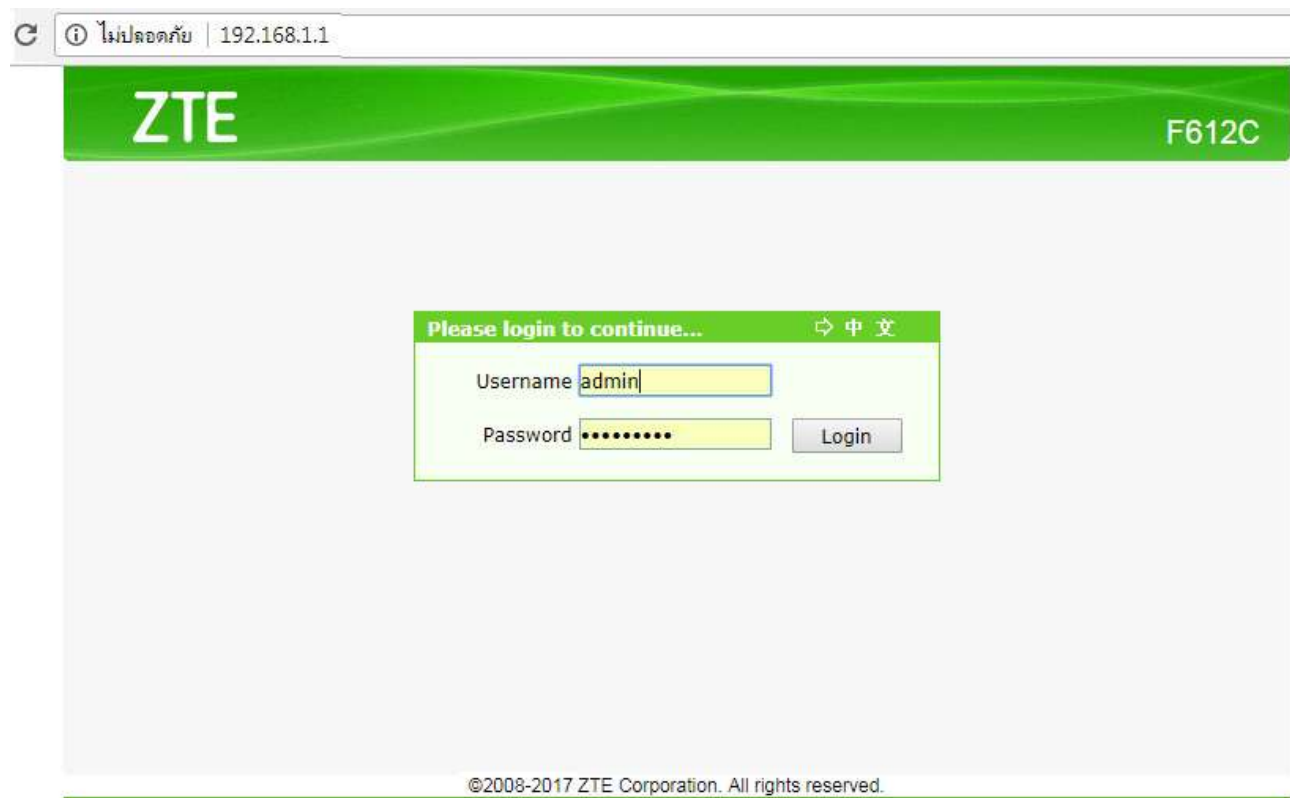

- Go to **Application > DDNS** > set up per received information from **DDNS** service provider, once completed, press **Submit** to save the settings

