


Set up IP Gateway for HUAWEI HG8247H

1. Open a Browser, type <http://192.168.1.1> in URL bar then press Enter. A Login wizard will appear,
Enter Account = admin and Password = password



2. Select LAN > LAN Host Configuration

- Change IP Address as desired
- Press Apply

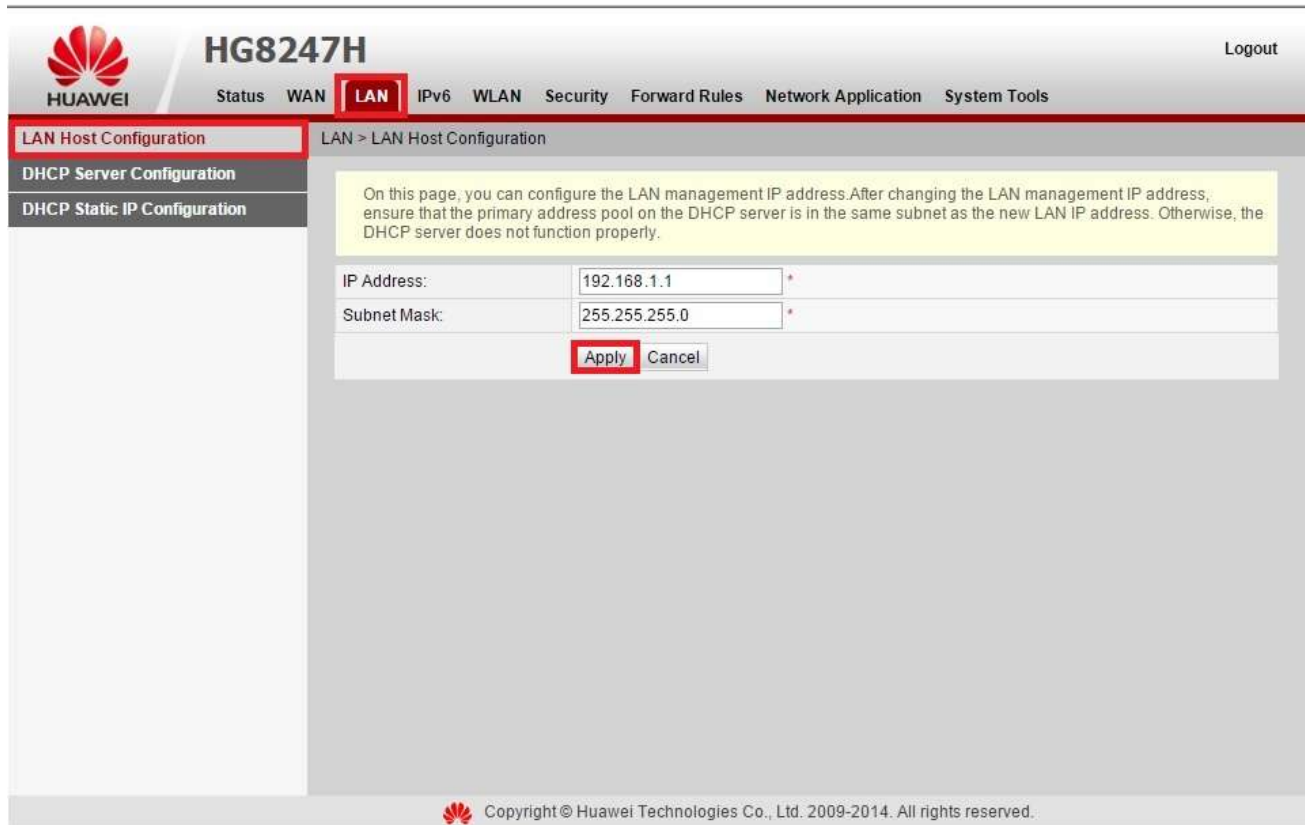

The screenshot shows the web management interface for a Huawei HG8247H device. The top navigation bar includes the Huawei logo, the model number 'HG8247H', and a 'Logout' link. Below this is a menu with options: Status, WAN, LAN (highlighted), IPv6, WLAN, Security, Forward Rules, Network Application, and System Tools. The left sidebar contains 'LAN Host Configuration' (highlighted), 'DHCP Server Configuration', and 'DHCP Static IP Configuration'. The main content area is titled 'LAN > LAN Host Configuration' and contains a yellow warning box: 'On this page, you can configure the LAN management IP address. After changing the LAN management IP address, ensure that the primary address pool on the DHCP server is in the same subnet as the new LAN IP address. Otherwise, the DHCP server does not function properly.' Below the warning are two input fields: 'IP Address:' with the value '192.168.1.1' and 'Subnet Mask:' with the value '255.255.255.0'. At the bottom of these fields are 'Apply' and 'Cancel' buttons, with 'Apply' highlighted by a red box. The footer of the page reads: 'Copyright © Huawei Technologies Co., Ltd. 2009-2014. All rights reserved.'