

How to set up Port Forwarding on GPON ZTE F668

1. Open a Browser and type `http://192.168.1.1` and press 'Enter'

Type Username = admin/ Password = password and press 'Login'



2. Click 'Application' menu



3. At 'Port Forwarding' click 'Enable' and set up according to the usage

Path:Application-Port Forwarding 中文 Logout

Enable

Name

Protocol TCP → TCP
UDP
TCP AND UDP

WAN Host Start IP Address

WAN Host End IP Address

WAN Connection omci_ipv4_pppoe_1

WAN Start Port (1 ~ 65535)

WAN End Port (1 ~ 65535)

Enable MAC Mapping

LAN Host IP Address

LAN Host Start Port (1 ~ 65535)

LAN Host End Port (1 ~ 65535)

Enable	Name	WAN Host Start IP Address	WAN Start Port	LAN Host Start Port	WAN Connection	Modify	Delete
	Protocol	WAN Host End IP Address	WAN End Port	LAN Host End Port	LAN Host Address		
There is no data, please add one first.							