

How to check LAN on GPON ZTE F668

1. Open a Browser and type `http://192.168.1.1` and press 'Enter'
 Type Username = admin/ Password = password and press
 'Login'



2. After log-in, on the first page, click 'Network'



- Click at LAN > DHCP Server, it will be as shown ('Allocated Address' refers to clients' device which has been connected with)

ZTE中兴 F668

Path: Network-LAN-DHCP Server 中文 Logout

+Status

-Network

- +WAN
- +WLAN
- LAN**
 - DHCP Server**
 - DHCP Server(IPv6)
 - DHCP Binding
 - DHCP Port Service
 - Prefix Management
 - DHCP Port Service(IPv6)
 - RA Service
- +PON
- +Routing(IPv4)
- +Routing(IPv6)
- Port Locating

+Security

+Application

+Administration

+Help

NOTE:
The DHCP Start IP Address and DHCP End IP address should be in the same subnet as the LAN IP.

LAN IP Address: 192.168.1.1
Subnet Mask: 255.255.255.0

Enable DHCP Server:

DHCP Start IP Address: 192.168.1.2
DHCP End IP Address: 192.168.1.254

Assign IspDNS:

DNS Server1 IP Address: 192.168.1.1
DNS Server2 IP Address:
DNS Server3 IP Address:
Default Gateway: 192.168.1.1
Lease Time: 86400 sec

Allocated Address

MAC Address	IP Address	Remaining Lease Time	Host Name	Port
There is no data.				

Submit Cancel