

Set up IPsec and VPN on Cisco EPC3928D

1. Open a Browser and type <http://192.168.1.1> in Address bar, Username = admin, Password = password and click Log In



2. On top click Security > VPN Passthrough then click Enable at IPsec Passthrough and click Save Settings

