

Set up Dynamic DNS (DDNS) on SERCOM T3 ST-244F

1. Type 192.168.1.1 and press Enter, User = admin /Password =

enter letters shown below, and press Login

		0			
UserLogin UserName: admin Password:	0	, G	8		

2. At Status, select Services

SE:	RCC	7/T						Firm	Logout ware ver. V3.3.4
Status	LAN	WLAN	Services	-	Advance	Admin	Statistics		
Status			Device Sta This page sho	atus ws the curre	nt status and some ba	asic settings o	f the device.		
510105			System						
Device			Device Nam	ne		ST-244	F		
IPv6			Uptime			51 min			
PON			Firmware V	ersion		V3.3.4			
USB Status	\$		CPU Usage			0%			
			Memory Us	age		34%			
			Name Serve	ers					
			IPv4 Defaul	t Gateway					
			IPv6 Defaul	t Gateway					
			LAN Conf	iguration					
			IP Address			192.16	3.1.1		
			Subnet Mas	sk		255.25	5.255.0		
			DHCP Serve	er		Enable	d		
			MAC Addre	SS		78B213	D24448		
			WAN Con	figuration					
			Interface	VLAN ID	Connection Type	Protocol	IP Address	Gateway	Status
			ppp0_nas0_0	100	INTERNET_TR069	PPPoE			down 0sec / 0sec



3. Select Dynamic DNS

SE								Logout Firmware ver. V3.3.4
Status	LAN	WLAN	Services	Firewall	Advance	Admin	Statistics	
			DHCP Set	t ings sed to configure	DHCP Server and	DHCP Relay.		
Service			DHCP Mode	:		HCP Relay	DHCP Server	
DHCP	_							
Dynamic D	is 🗲		Enable the D	HCP Server if y	ou are using this de	evice as a DHCI	P server. This page lists the IP	address pools available to hosts
IGMP Proxy			on your LAN	. The device dist	ributes numbers in	the pool to hos	ts on your network as they requ	lest internet access.
UPnP			LAN IP Addr	ess: 192.168.1.1	Subnet Mask: 2	55.255.255.0		
RIP			IP Pool Ran	ge:	192.168	1. 33 -	192.168.1. 64 Show (Dlient
Samba			Max Lease	lime:	86400	seco	nds (-1 indicates an infinite lea	se)
			DomainNam	ie:	ST-244	F		
			Gateway Ad	dress:	192.16	8.1.1		
			DNS option		Use	DNS Relay 🔘	Set Manually	

Apply Changes Port-Based Filter MAC-Based Assignment

TRUE CORPORATION PUBLIC COMPANY LIMITED 18 TRUE TOWER, RATCHADAPHISEK ROAD, HUAI KHWANG, BANGKOK10310 THAILAND WWW.TRUECORP.CO.TH



- 4. Set up as follows:
 - Time Interval : set time for Router to update IP Address by second, by default is 86400
 - Enable : click a check mark
 - DDNS Provider : choose service provider
 - Hostname : enter Host or Domain registered with service provider
 - Interface : choose ppp0
 - Username & Password : enter Username and Password registered with service provider
 - press Add

SE		7/T						Logout Firmware ver. V3.3.4
Status	LAN	WLAN	Services	Firewall	Advance	Admin	Statistics	
Service			Dynamic I This page is us configure Dyna	ONS Configues sed to configures amic DNS.	Iration the Dynamic DNS	address from D	ynDNS.org or TZO or	No-IP. Here you can Add/Remove to
DHCP	16		Time Interv	al:	86400		1	
IGMP Proxy	15		Apply					
UPnP			Enable:					2
RIP			DDNS Provi	der:	DynDl	NS.org V		3
Samba			Hostname:		demo.o	dyndns.org		4
			Interface		ppp0	•		5
			DynDns/N	o-lp Settings				
			UserName:		demo			6
			Password:					
			TZO Settin	igs				
			Email:					
			Key:					
		2	Add Mod	ify Remove				
			Dynamic I	NS Table				



5. Setup information will be shown in below table

Dynamic DNS Configurate This page is used to configure the Dy	DN namic DNS address from Dv	nDNS org or TZO or No-IF	P Here you can Add/Remove to
ervice configure Dynamic DNS.	name pro dalless for by		. Here you can Additionere to
HCP Time Interval:	86400		
ynamic DNS			
MP Proxy			
PnP Enable:			
DDNS Provider:	DynDNS.org v		
amba Hostname:			
Interface	ppp0 v		
Dur Davilla la Sattiana			
DynDns/No-Ip Settings			
UserName:			
Password:			
TZO Settings			
Email:			
Key:			
Add Modify Remove			
Dynamic DNS Table			
Select State Hostname	UserName	Service	Status

TRUE CORPORATION PUBLIC COMPANY LIMITED 18 TRUE TOWER, RATCHADAPHISEK ROAD, HUAI KHWANG, BANGKOK10310 THAILAND WWW.TRUECORP.CO.TH