


Check and Remove Reminder Channel on OPENTEL 4K-OP10C


1. Press **MENU** button on remote control



2. Press "Down" arrow to (Reminders) and press OK on remote control

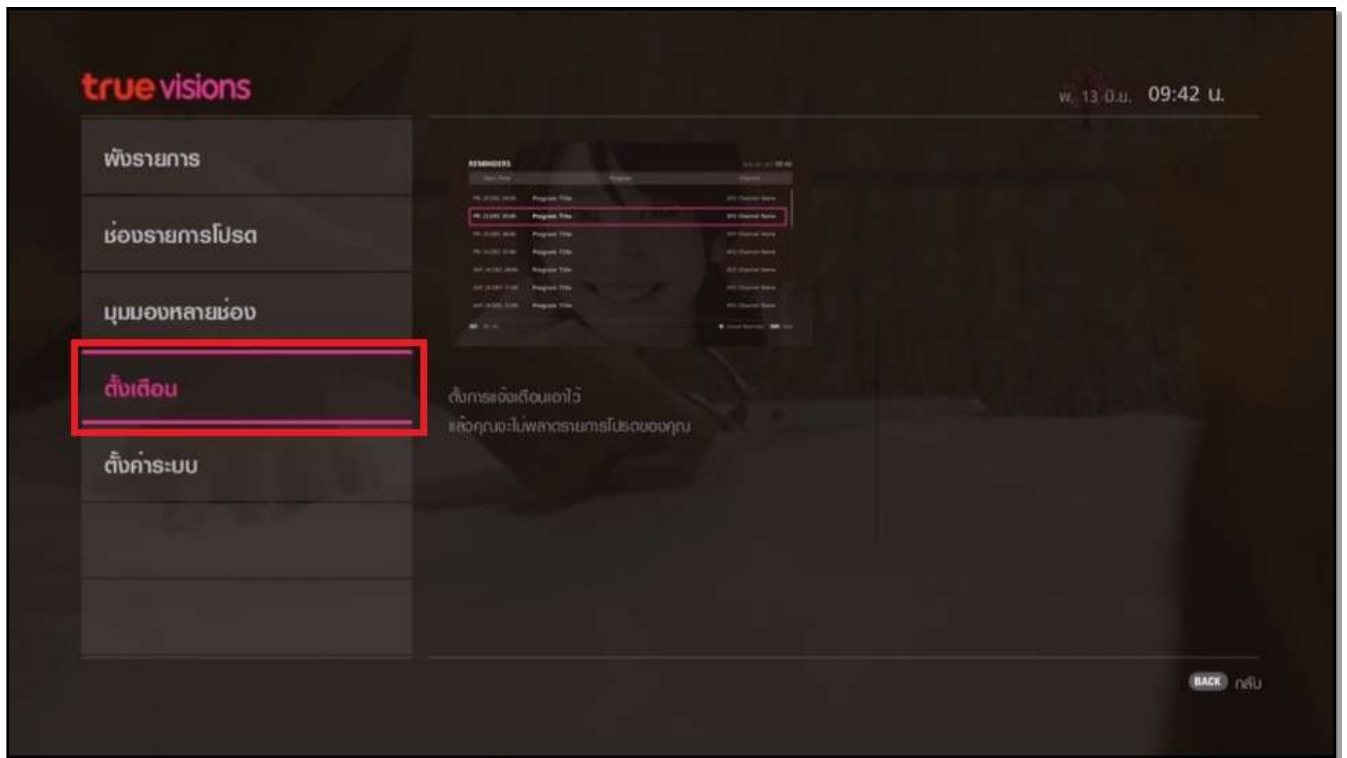

3. Reminder Channel that has been set will appear

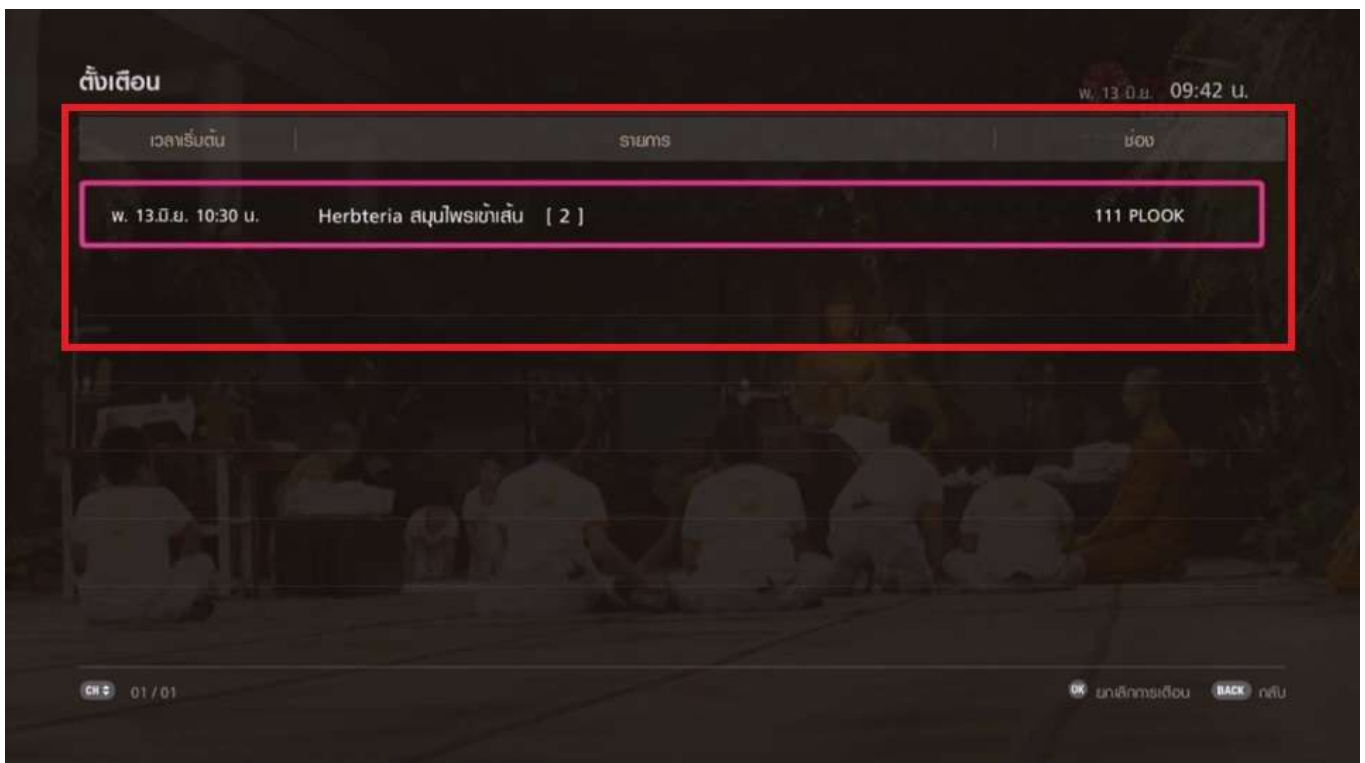

4. Remove Reminder channel : press **OK** on remote control



5. A popup “CANCEL REMINDER”, choose **(Remove)** and then press **OK on remote control**

