

Set up LAN for GCOM GN2000-04GS-2VT

1. Type **192.168.1.1** and press **Enter**, type Username = **admin**, Password = **password** then press **Login**



2. Select **Advanced Setup > LAN Basic** , then check the setting as follows:

- **IP Address:** IP Address or Default Gateway of Router
- **DHCP Server:** set Router to distribute IP Address
- When finished, press **Apply**

Home Gateway

192.168.1.1/index.html

Home Gateway Logout

GCOM
TECHNOLOGY

Gateway Status Advanced Setup Security Setup Utilities

IP Network

LAN Basic

LAN Advanced

LAN IPv6

WAN

NAT

Dynamic DNS

ALG

Bridges Network

Bridge

QoS

USB

FTP Server

Routing

IPv4 Static Routing

IPv6 Static Routing

IPv4 Policy Routing

IPv6 Policy Routing

LAN Basic

1. Set the LAN IP address.

IP Address

Netmask

DHCP Server Enable Disable

Multiple IP Address Mode Single IP Address Pool Multiple IP Address Pool Based on DHCP option 60

2. Enter the DHCP address pool definition.

Start IP Address

End IP Address

3. Enter the DHCP server lease time.

DHCP Server Lease Time Day(s) Hours Minutes

4. (Optional) Specify DNS servers for LAN devices.

Specify DNS Enable Disable

5. Click "Apply" to save your settings.

Apply

Copyright © 2017, GCOM Technologies Co., Ltd. All Rights Reserved.