

Unboxing True Kidz Watch

Front box



Back box



Left



On the left of watch

- 1) SIM slot for micro SIM size
- 2) Power On/Off or press to notify SOS [SOS button]



On the right of watch

1) Microphone

2) Camera



Top of watch

Speaker



Bottom of watch

1) Charge Power



Equipments in box

- 1) Kidz Watch
- 2) Charger
- 3) USB cable
- 4) User manual
- 5) Silicone watchband 4 colors (red, white, blue and pink)

