


## Port Forwarding for HUMAX HV100-02

1. Type 192.168.1.1 in the Address bar on Browser then press **Enter** Username = admin, Password = password then press **Login** 




- 2. Two methods can be done as follows:
  - Click Advanced > NAT(NAPT) > Virtual Server

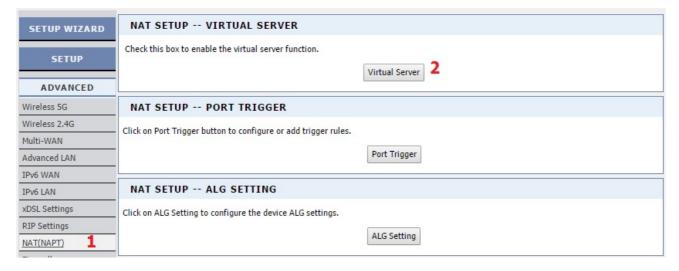




Click Advanced > NAT(NAPT) and click Virtual Server

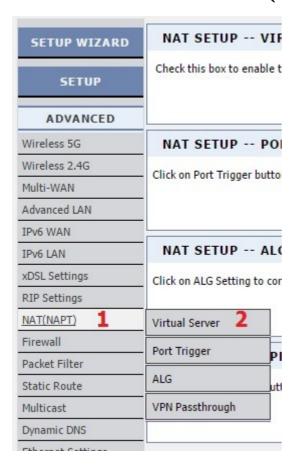

3. If there's no setting, it will show blank table, press **Add** to enter data

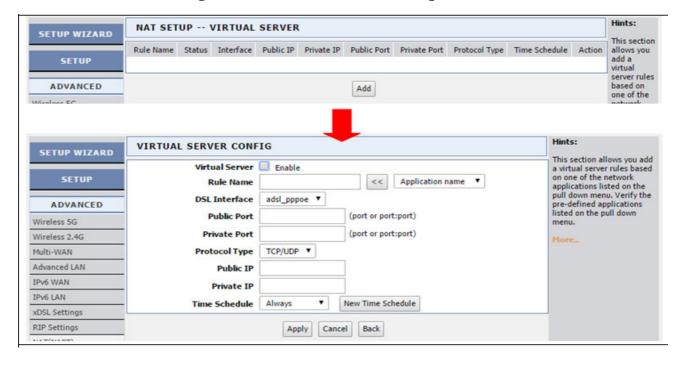



4. Set up as follows:

Virtual Server: tick a check markRule Name: enter name e.g. cam1

• **DSL Interface:** vdsl\_pppoe

• **Public Port and Private Port:** enter Ports to Forward, both to be the same


Protocol Type: choose base on usage type, or choose TCP/UDP

• **Public IP:** not set

• **Private IP:** enter using equipment's IP

• Time Schedule: not set


 Once completed, press **Apply**, it will return to first page and all data will be shown in a table

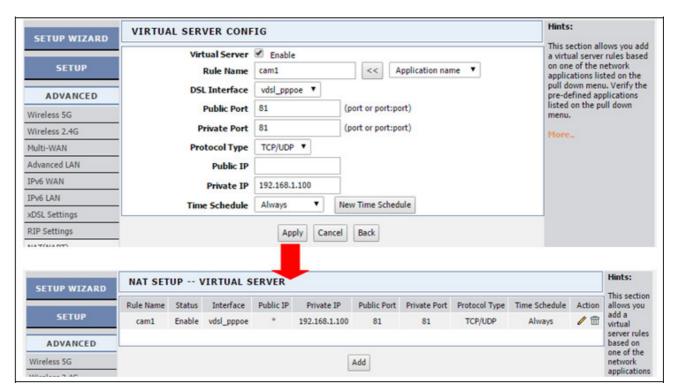



## 5. Edit settings

 Edit settings: click a pencil sign in Action bar, a page to edit will pop up, after editing, press Apply

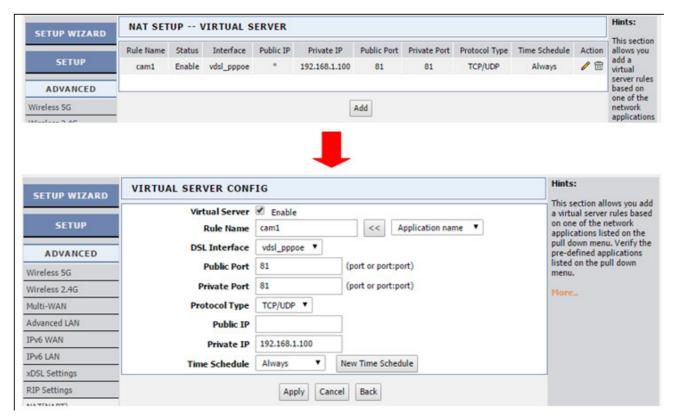

Delete settings: click a bin sign in Action bar

