


Remote Access to ZTE F612C

1. Open a Browser e.g. IE, Chrome and type <http://192.168.1.1> then press **Enter**

- Username = **admin**
- Password = **password**
- Press **Login**

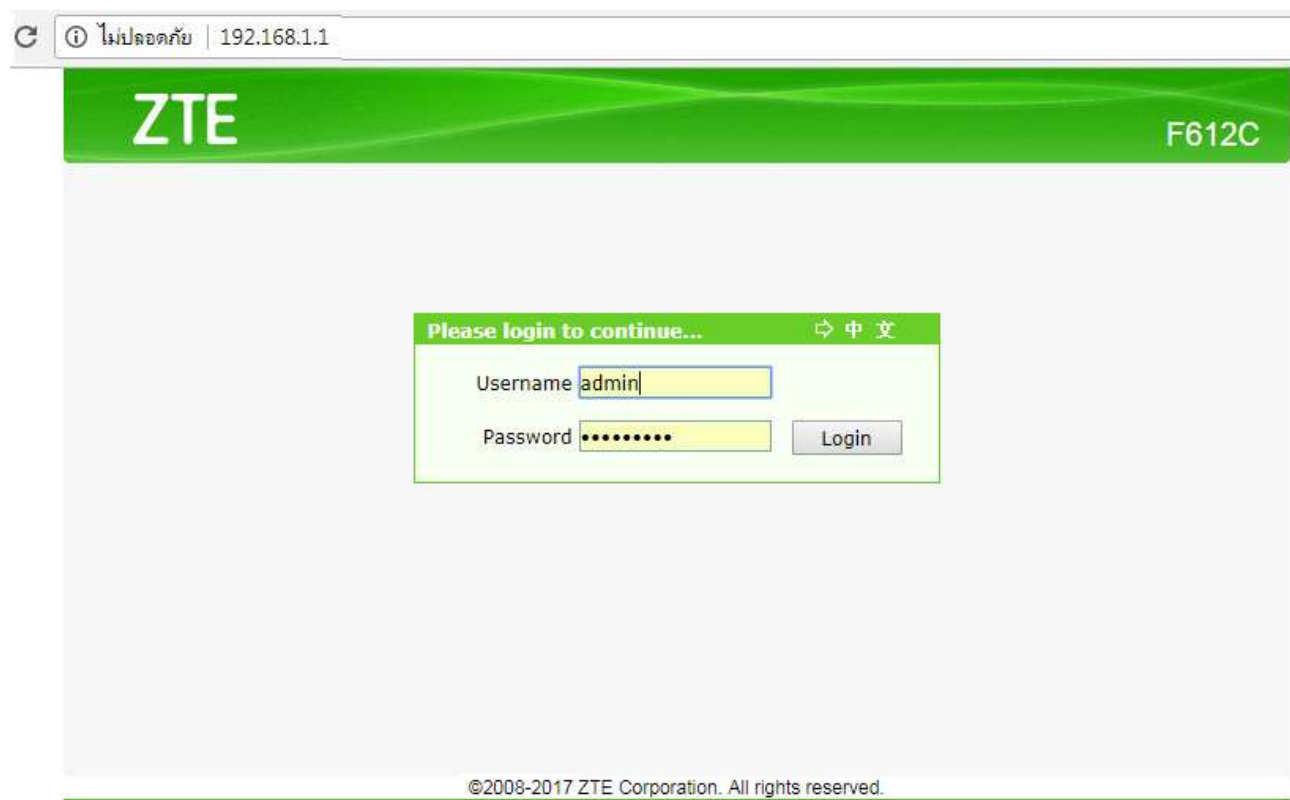

ไม่ปลอดภัย | 192.168.1.1

ZTE F612C

Please login to continue... 中文

Username

Password

©2008-2017 ZTE Corporation. All rights reserved.

2. Go to Security > Service Control

- IP Version : select IPv4
- Enable : click a check mark (✓)
- Ingress : select Profile WAN : INTERNET_VoIP_TR069
- Mode : select Permit
- HTTP : click a check mark (✓) to Remote access via Port 80
- Press Add

The screenshot shows the ZTE F612C web management interface. The left sidebar has 'Security' and 'Service Control' highlighted with red arrows. The main configuration area for 'Service Control' includes the following settings:

- IP Version: IPv4 (1)
- Enable: (2)
- Ingress: INTERNET_VoIP_TR069 (3)
- Start Source IP Address: [Empty field]
- End Source IP Address: [Empty field]
- Mode: Permit (4)
- Service List:
 - HTTP (5)
 - FTP
 - TELNET
 - HTTPS
- Add button (6)

Below the configuration fields is a table with the following headers: Enable, Ingress, Start Source IP Address, End Source IP Address, Mode, Service List, Modify, Delete. The table content is empty, with the message 'There is no data, please add one first.' displayed below it.

Note: If you need to configure the above remote access ports, please click on the hyperlinks below.
[Modify Remote Access Port](#)

©2008-2017 ZTE Corporation. All rights reserved.

3. After pressing Add, data will be shown in below table

The screenshot shows the ZTE F612C web interface for Service Control configuration. The configuration fields are as follows:

- IP Version: IPv4
- Enable:
- Ingress: [Dropdown]
- Start Source IP Address: [Text Field]
- End Source IP Address: [Text Field]
- Mode: Discard
- Service List:
 - HTTP
 - FTP
 - TELNET
 - HTTPS

The table below the configuration shows the result of the 'Add' action:

Enable	Ingress	Start Source IP Address	End Source IP Address	Mode	Service List	Modify	Delete
✓	INTERNE			Permit	HTTP		

Note: If you need to configure the above remote access ports, please click on the hyperlinks below.
[Modify Remote Access Port](#)

©2008-2017 ZTE Corporation. All rights reserved.