


Allow Remote Config from WAN IP for ZTE F668

1. Open a Browser, type <http://192.168.1.1> in Address bar then press Enter. At ZTE page, enter Username = **admin** , Password = **password** then press Login

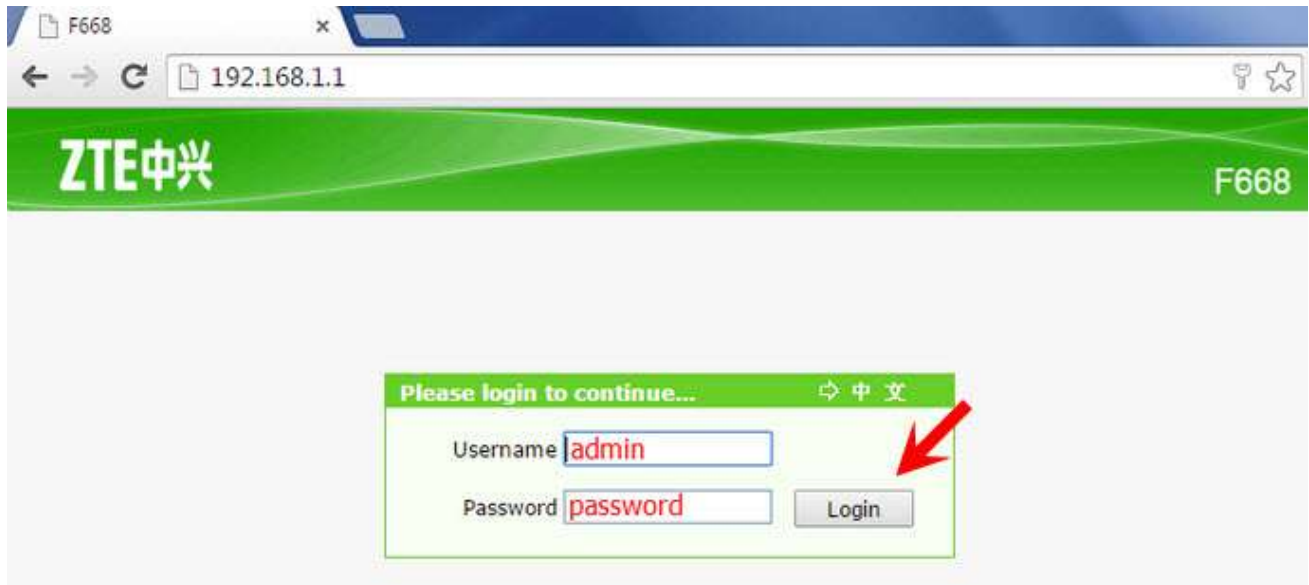

2. Security > Service Control and set up as follows:

- 1) IP Version = IPv4
- 2) Tick a check mark at Enable
- 3) Ingress = omci_ipv4_pppoe_1
- 4) Mode = Permit
- 5) Tick a check mark at HTTP
- 6) Press Add

Path: Security-Service Control 中文 Logout

IP Version: IPv4 **1**

Enable: **2**

Ingress: omci_ipv4_pppoe_1 **3**

Start Source IP Address:

End Source IP Address:

Mode: Permit **4**

Service List: HTTP **5**
 FTP
 TELNET
 HTTPS

Add **6**

Enable	Ingress	Start Source IP Address	End Source IP Address	Mode	Service List	Modify	Delete
There is no data, please add one first.							

Note: If you need to configure the above remote access ports, please click on the hyperlinks below.
[Modify Remote Access Port](#)

©2008-2016 ZTE Corporation. All rights reserved.

3. Once completed, information will be shown in a table that means already allowed Remote config on Router from WAN IP

The screenshot shows the ZTE F668 web interface for Security-Service Control. The configuration includes:

- IP Version: IPv4
- Enable:
- Ingress:
- Start Source IP Address:
- End Source IP Address:
- Mode: Discard
- Service List:
 - HTTP
 - FTP
 - TELNET
 - HTTPS

The following table is displayed below the configuration, with the first row circled in red:

Enable	Ingress	Start Source IP Address	End Source IP Address	Mode	Service List	Modify	Delete
	WAN			Permit	HTTP		

Note: If you need to configure the above remote access ports, please click on the hyperlinks below.
[Modify Remote Access Port](#)

©2008-2016 ZTE Corporation. All rights reserved.