

การตั้งค่า IP Gateway สำหรับ HUAWEI HG8247H

1. เปิด Browser พิมพ์ <http://192.168.1.1> ที่ช่อง URL แล้วกด Enter จะแสดงหน้า Login, พิมพ์ Account = **admin** และ Password = **password**



2. เลือกเมนู LAN > LAN Host Configuration

- เปลี่ยนที่ช่อง IP Address ตามที่ต้องการ
- จากนั้นกด **Apply**

The screenshot displays the web management interface for a Huawei HG8247H device. The top navigation bar includes the Huawei logo, the device model 'HG8247H', and a 'Logout' link. Below this, a menu bar contains 'Status', 'WAN', 'LAN' (highlighted with a red box), 'IPv6', 'WLAN', 'Security', 'Forward Rules', 'Network Application', and 'System Tools'. On the left side, a sidebar menu lists 'LAN Host Configuration' (highlighted with a red box), 'DHCP Server Configuration', and 'DHCP Static IP Configuration'. The main content area is titled 'LAN > LAN Host Configuration' and features a yellow warning box with the text: 'On this page, you can configure the LAN management IP address. After changing the LAN management IP address, ensure that the primary address pool on the DHCP server is in the same subnet as the new LAN IP address. Otherwise, the DHCP server does not function properly.' Below the warning, there are two input fields: 'IP Address:' with the value '192.168.1.1' and 'Subnet Mask:' with the value '255.255.255.0'. Both fields have a red asterisk to their right. At the bottom of the form, there are two buttons: 'Apply' (highlighted with a red box) and 'Cancel'. The footer of the page contains the Huawei logo and the text 'Copyright © Huawei Technologies Co., Ltd. 2009-2014. All rights reserved.'