

Change Password to access Configuration Page on ZTE F668

1. Open a Browser and type **192.168.1.1** in the Address then press Enter
 - Username = admin
 - Password = password
 - Press Login



2. Status page

Technical

F668

192.168.1.1

ZTE F668

Path: Status-Device Information [中文](#) [Logout](#)

Model	F668
Serial Number	8CE117-ZTENQBCH2A06236
Hardware Version	V5.2
Software Version	V5.2.10P3T7
Boot Loader Version	V5.2.10
PON Serial Number	ZTEGC1CE3C06
Password	GC1CE3C06
Batch Number	07e0P3T704cb
CPU Usage	2%
Memory Usage	33%
Power On Time	219: 54: 45

©2008-2016 ZTE Corporation. All rights reserved.

3. Administration > User Management > Web User Management

- Username : unchangeable
- Old Password : enter old Password
- New Password : enter new Password
- Confirmed Password : enter new Password again
- Press **Submit**

Technical [Window Controls]

F668

192.168.1.1

ZTE F668

Path:Administration-User Management-WEB User Management 中文 Logout

+Status
 +Network
 +Security
 +Application
-Administration
 -User Management
 WEB User Management
 +System Management
 Log Management
 +Diagnosis
 +Loopback Detection
 +Help

Username

Old Password

New Password

Confirmed Password

Submit Cancel

©2008-2016 ZTE Corporation. All rights reserved.