



Set up DMZ for DASAN H662GR (No Wireless)

1. Type **192.168.1.1** then press **Enter**, Username = **admin**, Password = **password** and press **LOGIN**

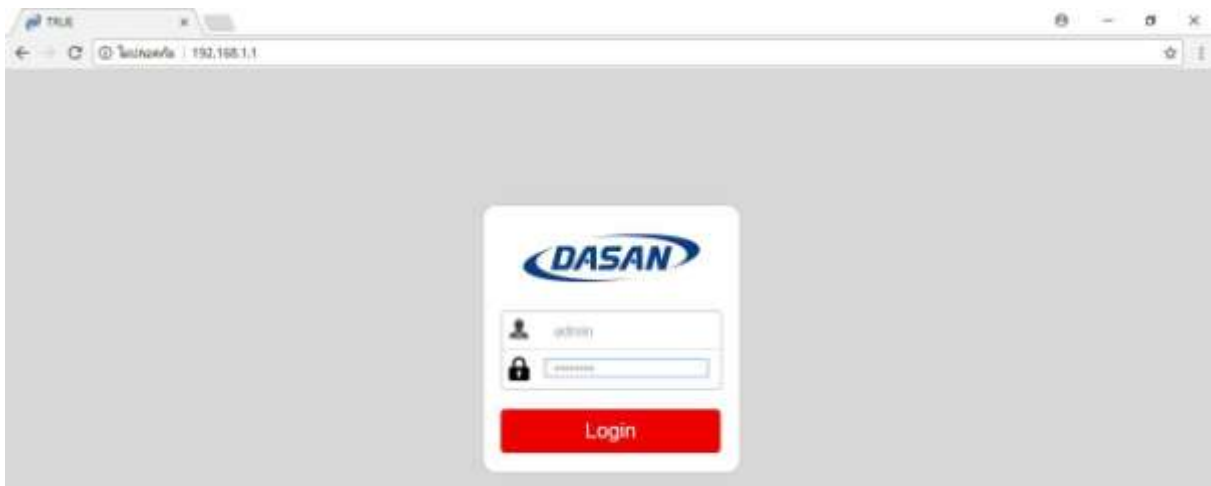

2. On the left, select **Firewall Setup > NAT > DMZ**

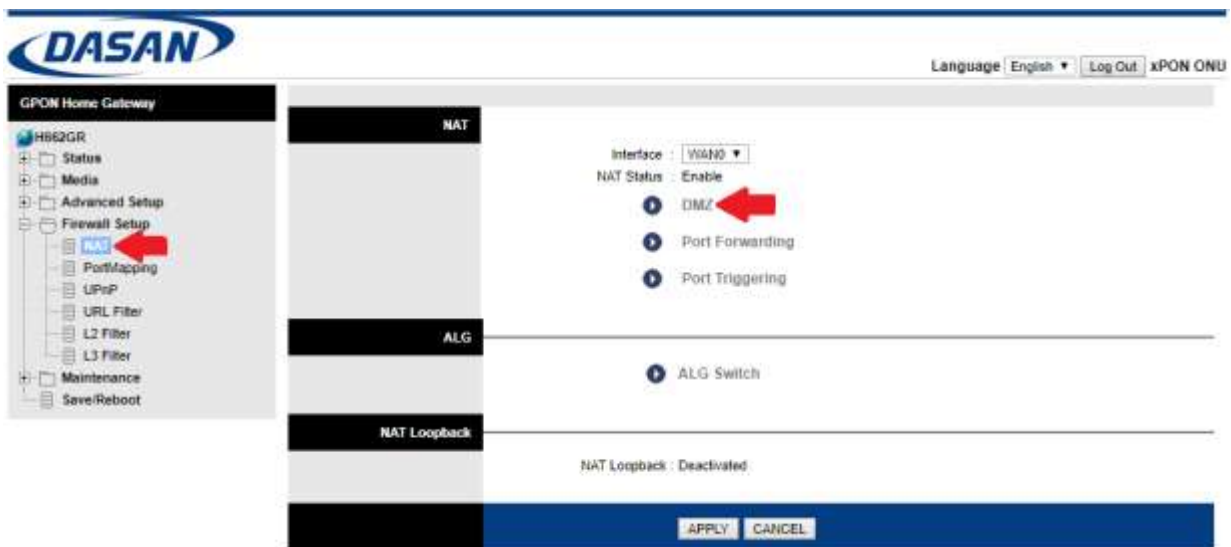

3. Set up as follows:

- **DMZ:** select **Enable**
 - **DMZ Host IP Address:** enter IP Address of device
- remarks :** can set up DMZ only 1 IP Address
- Press **APPLY**

