

How to check WAN on GPON ZTE F668

1. Open a Browser and type `http://192.168.1.1` and press 'Enter'
 Type Username = admin/ Password = password and press
 'Login'



2. After log-in, on the first page, click 'Network'

Model	F668
Serial Number	709F2D-ZTENQBCEC800067
Hardware Version	V5.2
Software Version	V5.2.10P3T1
Boot Loader Version	V5.2.10
PON Serial Number	ZTEGC12FF0DD
Password	GC12FF0DD
Batch Number	07dfP3T100d2

©2008-2013 ZTE Corporation. All rights reserved.

- Click at 'WAN', it will be as shown (Username/ Password are not set at Modem, but it will be created by the system at telephone exchange)

