

Set Port Forwarding for HUMAX HG100RE

1. Type 192.168.1.1 then press Enter, type Username = admin, Password = password and click Login



2. At Advance, on the left select Forwarding and then Help
 - Click Create IPv4 and enter information in a table
 - Once finished, click Apply

