


How to use SMS for 4G CAR WiFi

Send-receive/ delete SMS for 4G CAR WiFi via Huawei HiLink App


[Send SMS]

1. At Home screen, choose Huawei HiLink App
2. Wait a moment, tap on SMS (envelope)

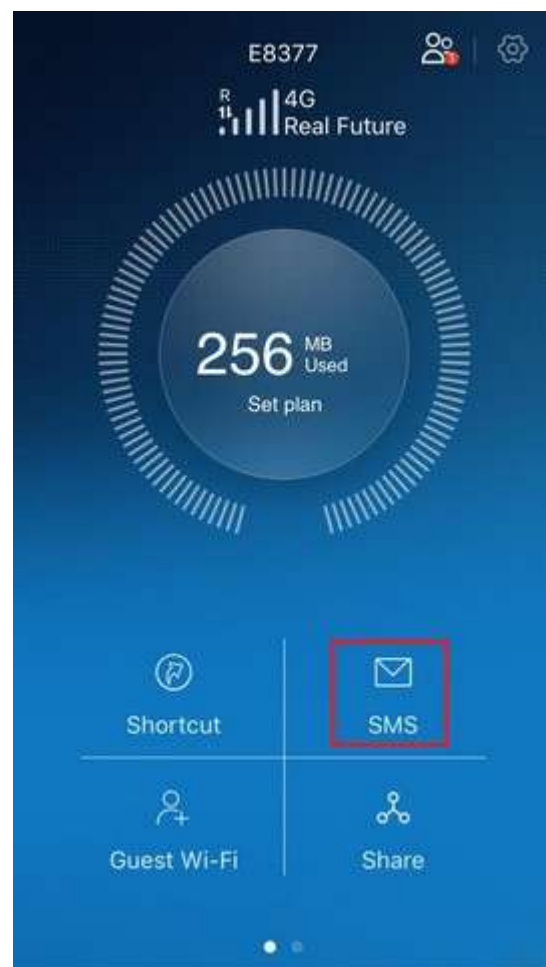


3. To send SMS, choose New (+) 4. New Message

- Phone Number: destination number
- Content: message content

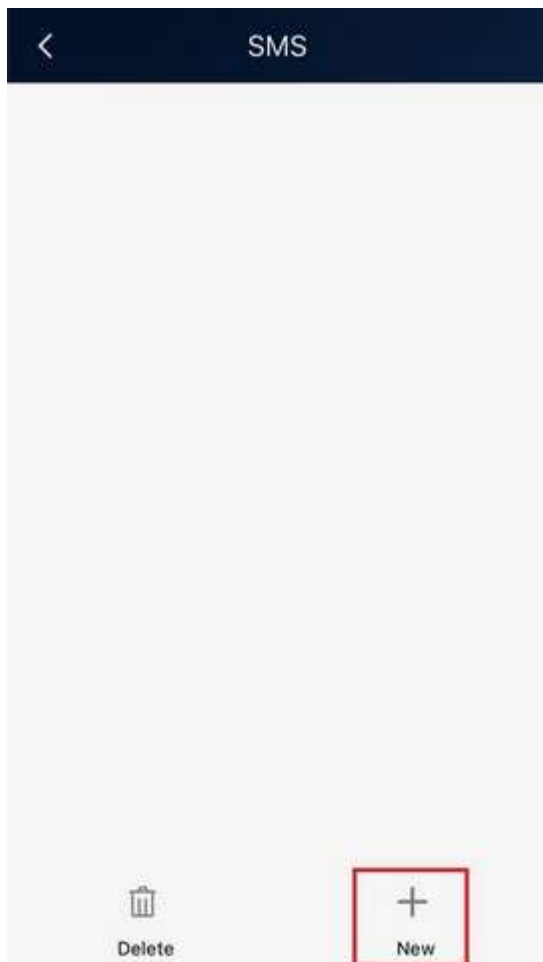

5. Once completed, tap on a paper plane sign (top right corner) to


send message

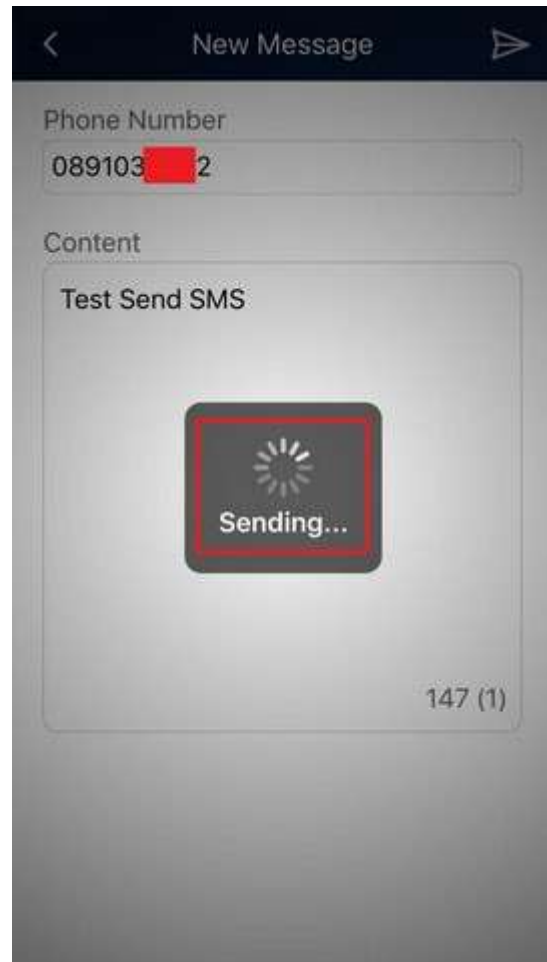

7. After sending, Successful : 1;
failed : 0 = 1 message
successfully sent;
0 message failed

8. Message from destination device

Ex: destination device is iPhone

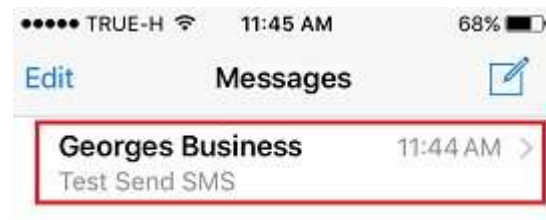


[Receive SMS]

9. Sender number sent message to 10. On the top of Huawei HiLink App, destination number

Ex: sender device is iPhone

there'll be a notification for New message. In SMS page, it will show content/ date-month-time/ sender number/ you can open to read the message



Power light on 4G CAR Wi-Fi will be purple and blink, if there're unread messages or full inbox

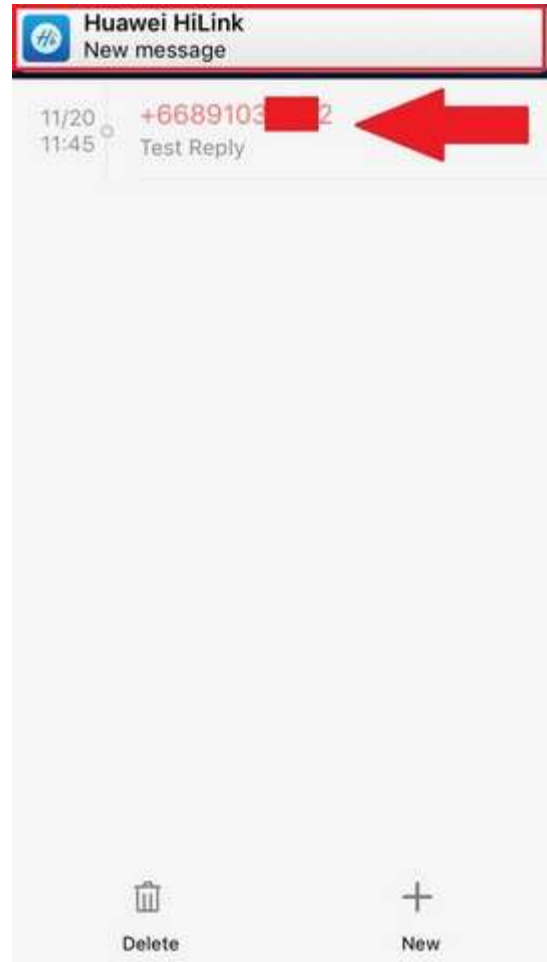

[Delete SMS]



11. To delete, tap on Delete icon at bottom left corner

12. Place a check mark

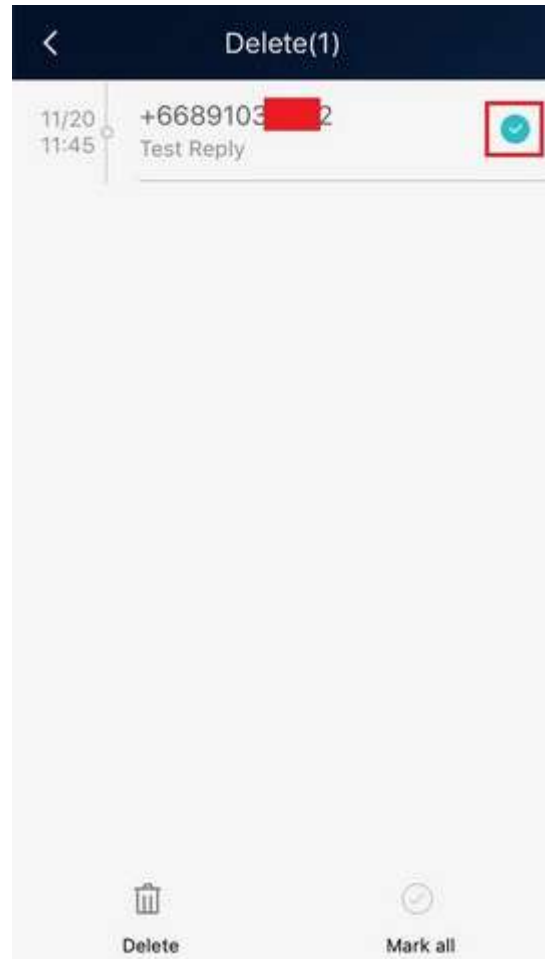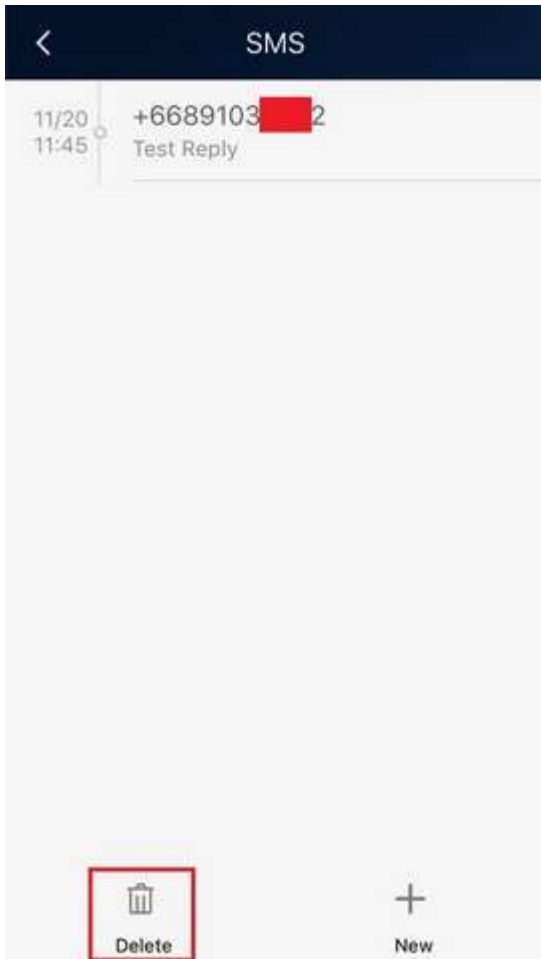

13. Tap on Delete icon at bottom left corner

14. Tap OK to confirm

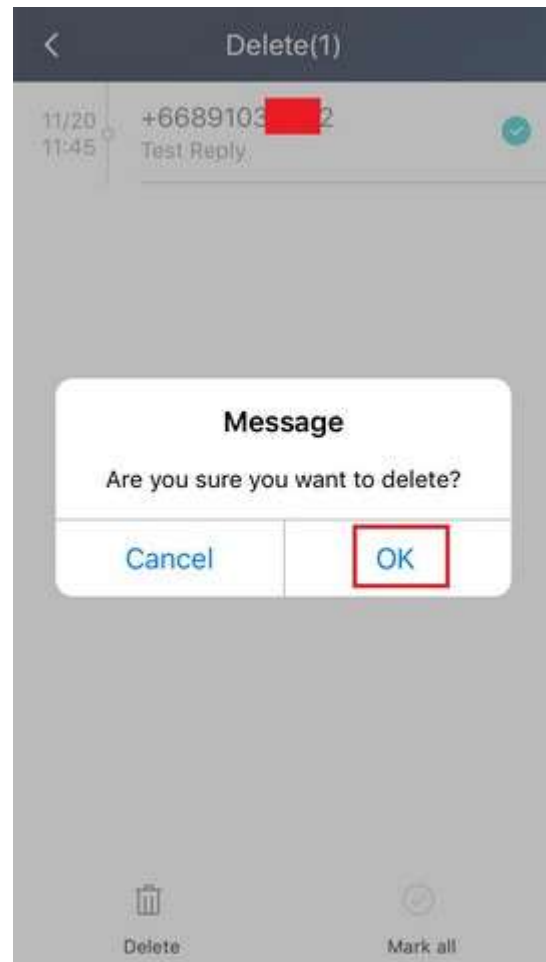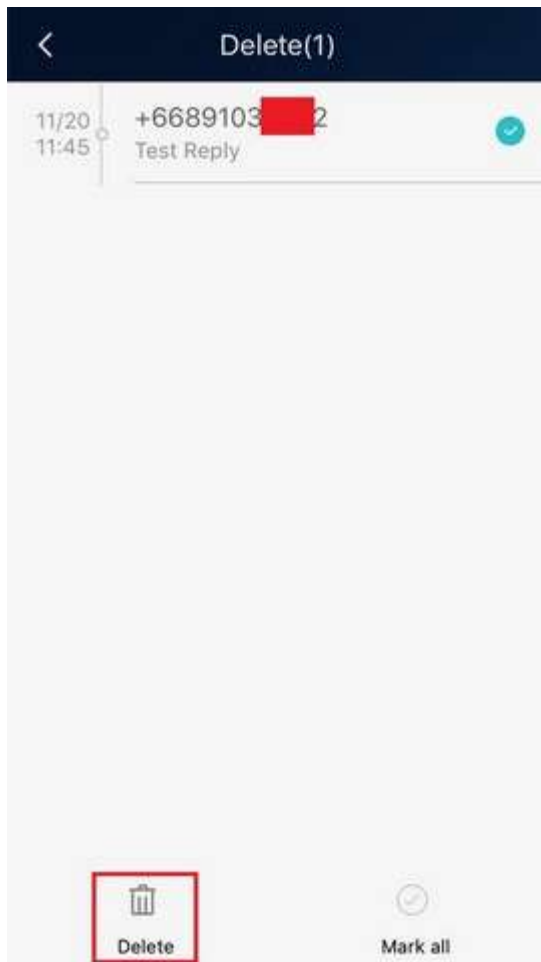

15. Deleted message has been deleted

