


## Set up LAN for Xplor

1. Type **192.168.1.1** on Browser and enter Username = **admin** / Password = **password** then press **Login**

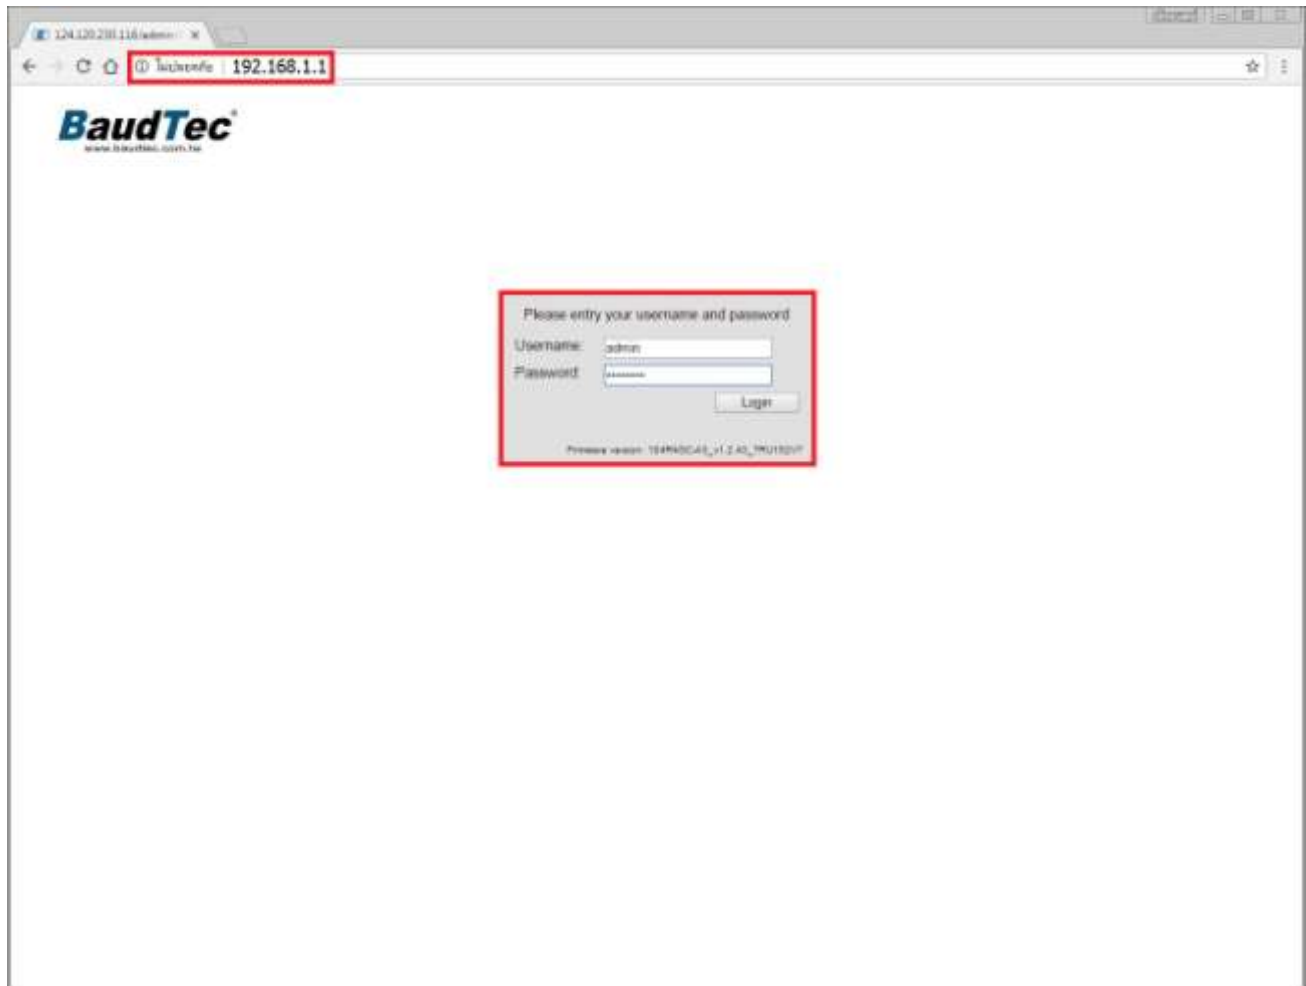

## 2. At Status, select LAN

The screenshot shows the BaudTec Home Gateway web interface. The browser address bar displays 192.168.1.1. The page title is "Home Gateway ADM-VDSL Router". The left sidebar contains a navigation menu with the following items: Status, LAN (highlighted with a red arrow), WLAN, WAN, Services, Advance, Diagnostics, Admin, Statistics, and Logout. The main content area is titled "Router Status" and includes a sub-header "This page shows the current status and some basic settings of the device." Below this, there are three tables: System, DSL, and LAN Configuration.

**System**

Model Name	RN104R40C-A3
Uptime	19:38
Hardware Version	7000-RQ26-XX
DSL Uptime	19:37:53
PPPoE Uptime	19:37:58
CPU Usage (1GHz)	23%
Memory Usage (512Mb)	46%
Software Version	104R40C-A3_v1.2.43_TRU152V7
DSL Firmware Version	v134g204
DNS Server	203.144.207.29, 203.144.207.48
IPv4 Default Gateway	ppp1
IPv6 Default Gateway	

**DSL**

Operational Status	VD912-17A Annex B SHOWTIME
Upstream Speed	11775 kbps
Downstream Speed	36319 kbps
CD Vendor ID	BDCM

**LAN Configuration**

IP Address	192.168.1.1
Subnet Mask	255.255.255.0
DHCP Server	Enabled
LAN MAC Address	94496240913
WAN MAC Address	94496240914

**WAN Configuration**

Interface	VPI/VCI	Encapsulation	Protocol	IP Address	Gateway	Current Connect Status
ppp0_w0_0	8100	LLC	PPPoE			down / Disconnect / Connect
ppp1_pt0_0	--	--	PPPoE	124.120.230.116	124.120.230.1	up / 19:37:58 / 19:37:50 / Disconnect
vt_1_0	0104	LLC	IPvE			down
ptn0_1	--	--	IPvE			down

Refresh

### 3. Set up IP Address or Gateway and press Apply Changes

The screenshot displays the 'LAN Interface Settings' page of a BaudTec Home Gateway. The page is accessed via a web browser at the URL 114.120.130.116. The interface includes a navigation menu on the left with options like Status, LAN, WLAN, WAN, Services, Advanced, Diagnostics, Admin, Statistics, and Logout. The main content area is titled 'LAN Interface Settings' and contains the following configuration fields:

- Interface Name: b0
- IP Address: 192.168.1.1
- Subnet Mask: 255.255.255.0
- Secondary IP:  Disabled  Enabled
- IGMP Snooping:  Disabled  Enabled
- Ethernet to Wireless Blocking:  Disabled  Enabled

Red arrows in the image highlight the IP Address field, the Subnet Mask field, and the 'Apply Changes' button at the bottom of the form.