



## How to disable Wireless function on Cisco EPC2425

### 1. Go to Setup > Wireless > Security

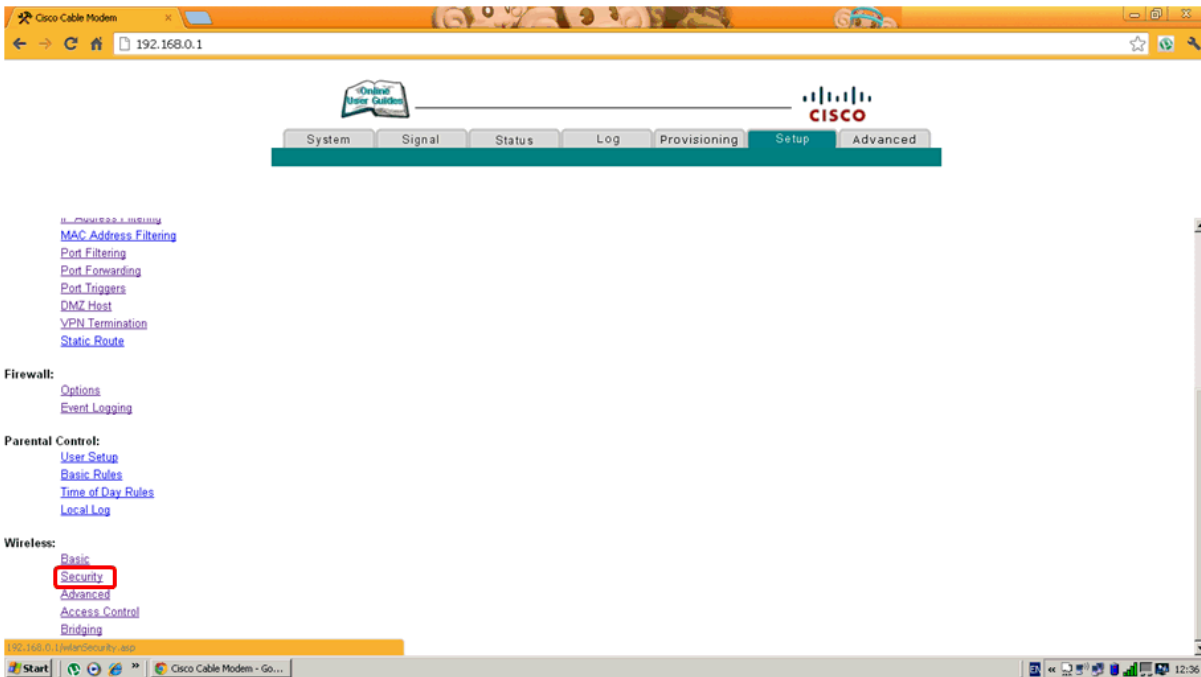

### 2. At Primary Network, select Disable (to enable Wireless, select Enable)

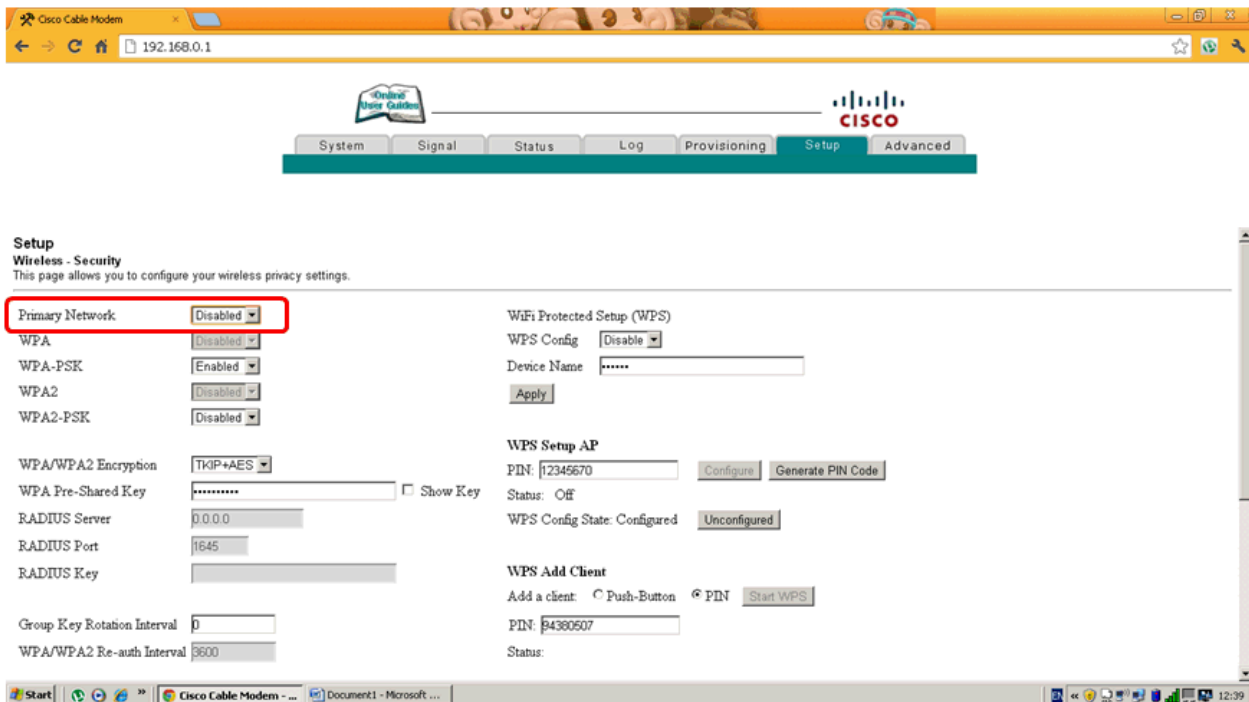

**Note:** For next Firmware you can disable/ enable Wireless function at Basic page, Access Point menu