

## Unbox True SMART 4G MAX 5.5

### Front

1. [Front camera]
2. [Speaker]
3. [Menu]
4. [Home button]
5. [Back]



## Back

1. [Back Camera]
2. [Flash]
3. [Speaker]



## On the top

1. [Headphone Jack]



## Bottom

1. [Microphone]
2. [USB port]
3. Slot to open back cover




## On the left

1. [Volume Up/Down]



## On the right

1. [Power On/Off]

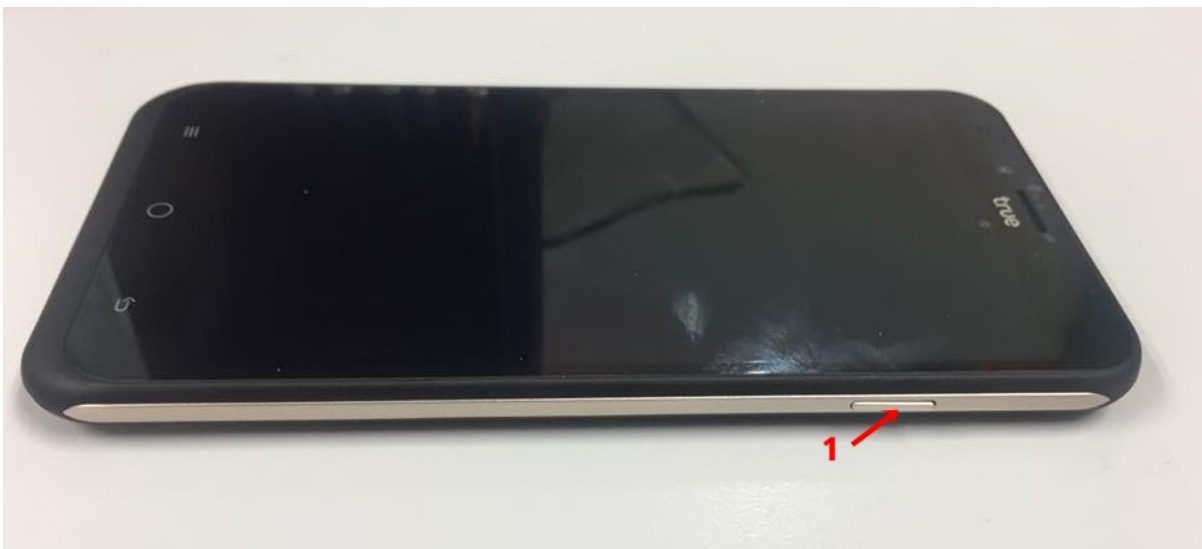

## SIM Card slot

1. [SIM1 slot]
2. [SIM2 slot]
3. [micro SD card slot]

