


การตั้งค่า LAN สำหรับ Xplor

1. พิมพ์ **192.168.1.1** ที่ Browser จากนั้นใส่ Username = **admin** / Password = **password** และกด **Login**

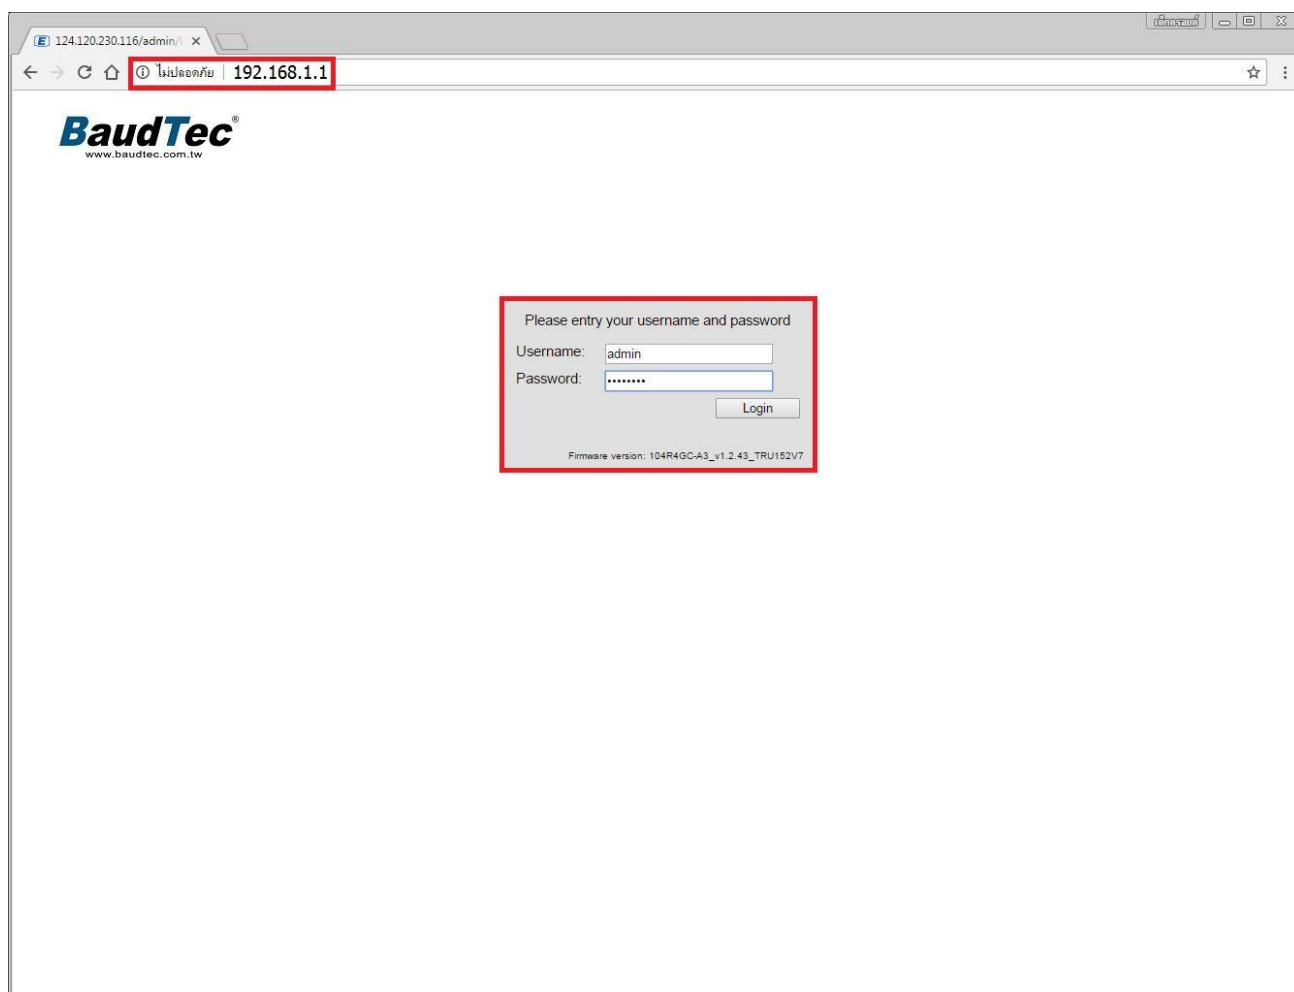

2. ที่หน้า Status เลือกเมนู LAN

The screenshot shows the BaudTec Home Gateway web interface. The browser address bar displays 192.168.1.1. The page title is "Home Gateway ADSL-VDSL Router". On the left sidebar, the "LAN" menu item is highlighted with a red arrow. The main content area displays the "Router Status" page, which includes a "System" section with various device details, a "DSL" section with operational status and speeds, and a "WANConfiguration" table showing interface details and connection status.

Router Status

This page shows the current status and some basic settings of the device.

System	
Model Name	RN104R4GC-A3
Uptime	19:38
Hardware Version	7000-8Q3N-XX
DSL Uptime	19:37:53
PPPoE Uptime	19:37:50
CPU Usage (1.1GHz)	23 %
Memory Usage (512Mb)	46 %
Software Version	104R4GC-A3_v1.2.43_TRU152V7
DSL Firmware Version	v134g204
DNS Server	203.144.207.29, 203.144.207.49
IPv4 Default Gateway	ppp1
IPv6 Default Gateway	

DSL	
Operational Status	VDSL2-17A Annex B, SHOWTIME.
Upstream Speed	11775 kbps
Downstream Speed	35319 kbps
CO Vendor ID	BDCM

LANConfiguration	
IP Address	192.168.1.1
Subnet Mask	255.255.255.0
DHCP Server	Enabled
LAN MAC Address	944696240893
WAN MAC Address	944696240894

WANConfiguration						
Interface	VPI/VCI	Encapsulation	Protocol	IP Address	Gateway	Current Connect Status
ppp0_vc0_0	0/100	LLC	PPPoE			down 0sec / 0sec <input type="button" value="Connect"/>
ppp1_ptm0_0	---	---	PPPoE	124.120.230.116	124.120.230.1	up 19:37:50 / 19:37:50 <input type="button" value="Disconnect"/>
vc1_0	0/104	LLC	IPoE			down
ptm0_1	---	---	IPoE			down

3. ตั้งค่า IP Address หรือ Gateway ที่ต้องการ เสร็จแล้วกดปุ่ม Apply Changes

