

Enable 4G HD Voice (VoLTE) on True Super Talkie 4G

1. On main screen, select **(Menu)**




2. Select **(Settings)**



3. And then **(More)**




4. Select **(Mobile networks)**

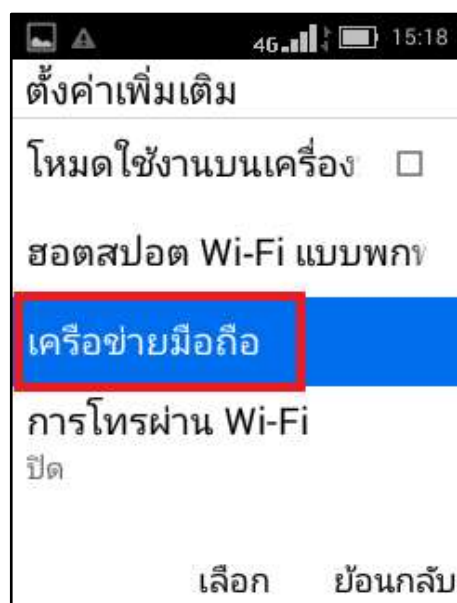

5. And then VoLTE



6. Click enable (VoLTE Call Availability)

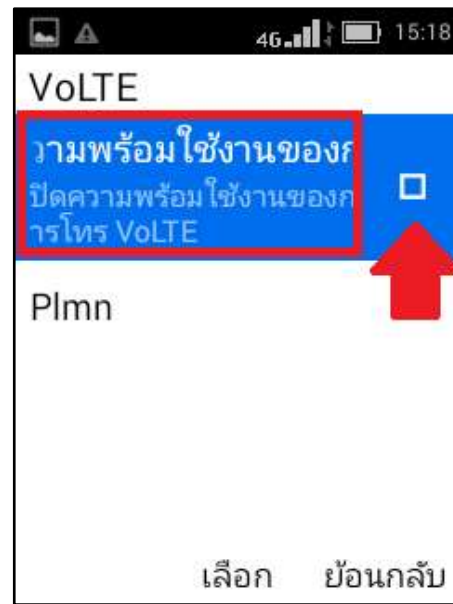

7. VoLTE will appear at top center near 4G

