


Set up Repeater (Extender) Mode for AP Humax Quantum T3A

1. To access AP setup page from a browser

- If not yet connect to main Router, type 192.168.1.1 or <http://dearmyrouter.net>
- If connect to main Router that is Gateway 192.168.1.1, type 192.168.0.1 or <http://dearmyrouter.net>

○ ID: **admin** / Password **enter last 4 digits of serial number**

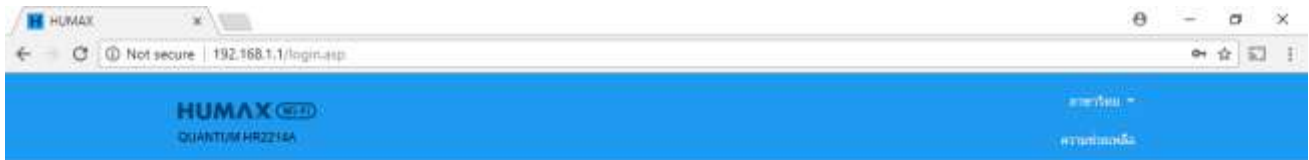

เชิญเข้าสู่การใช้งาน QUANTUM HR2214A


<http://dearmyrouter.net>

ชื่อ	admin
รหัสผ่าน	****


เข้าสู่ระบบ

ⓘ สำหรับ User ID และ Password ให้ใส่ตามคู่มือใช้งานที่แนบมาไว้ด้วย


2. At Easy Setup page, select Advanced Setup

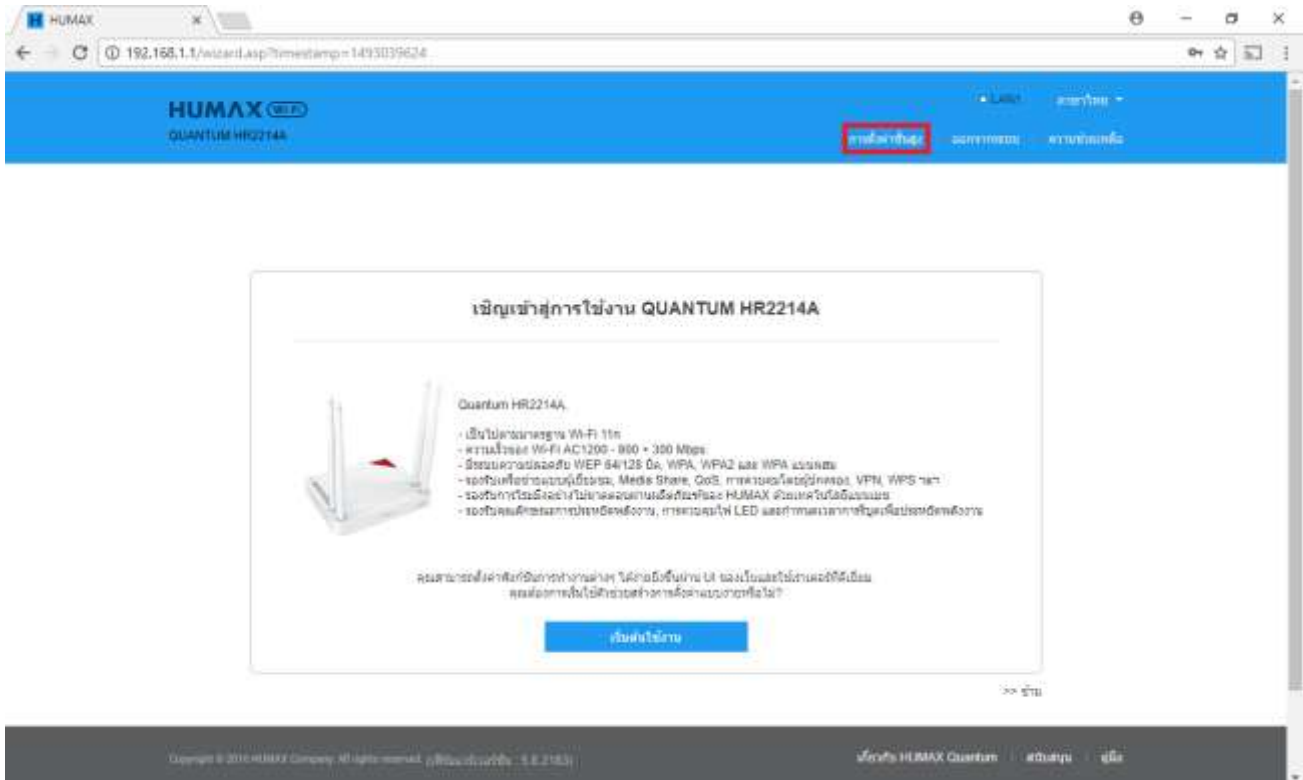


3. Select Management

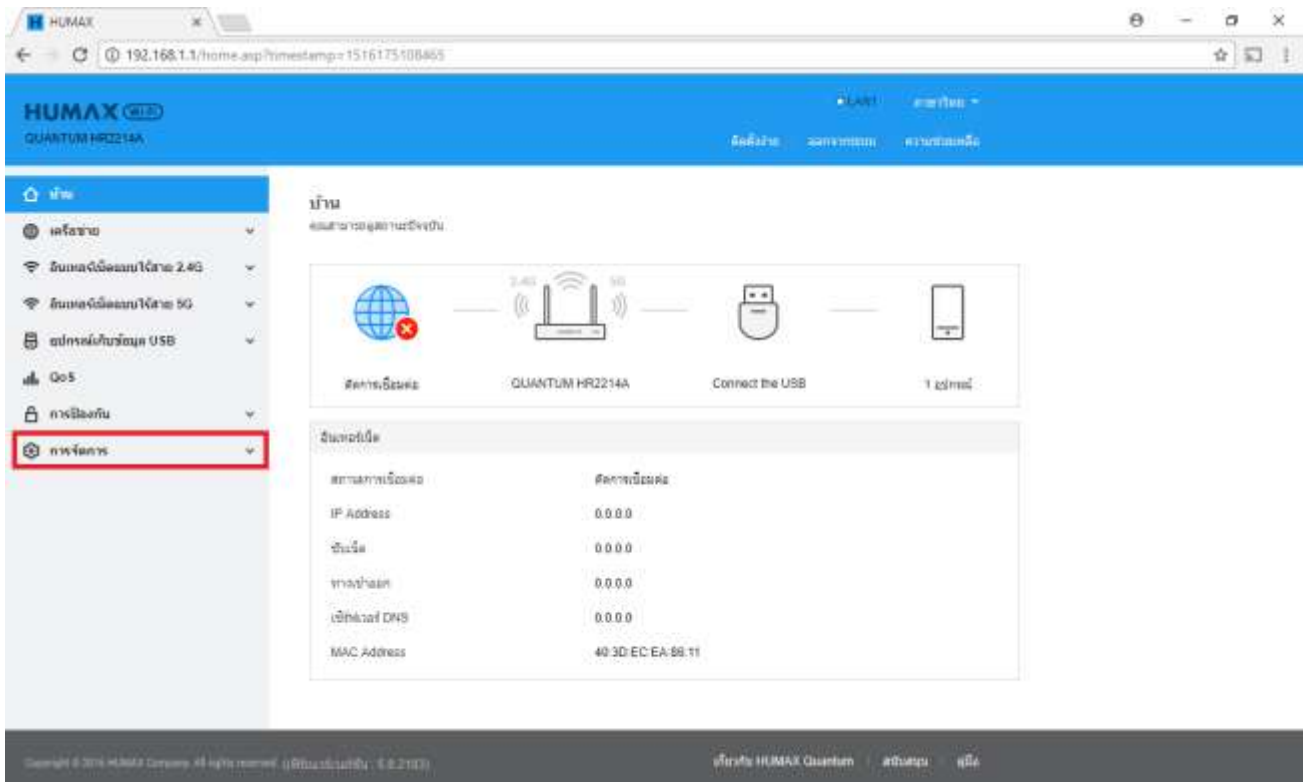


4. And then Mode

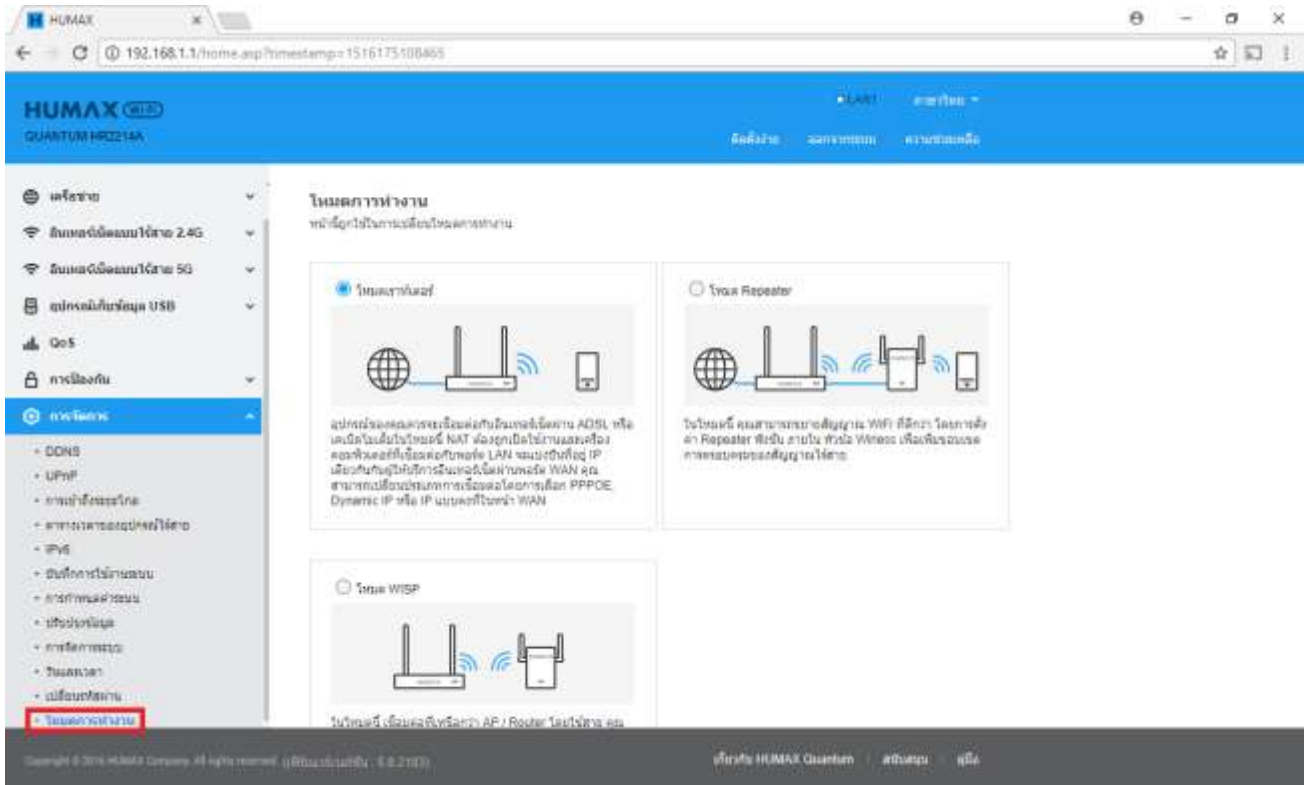

5. Select Repeater Mode and press button Apply

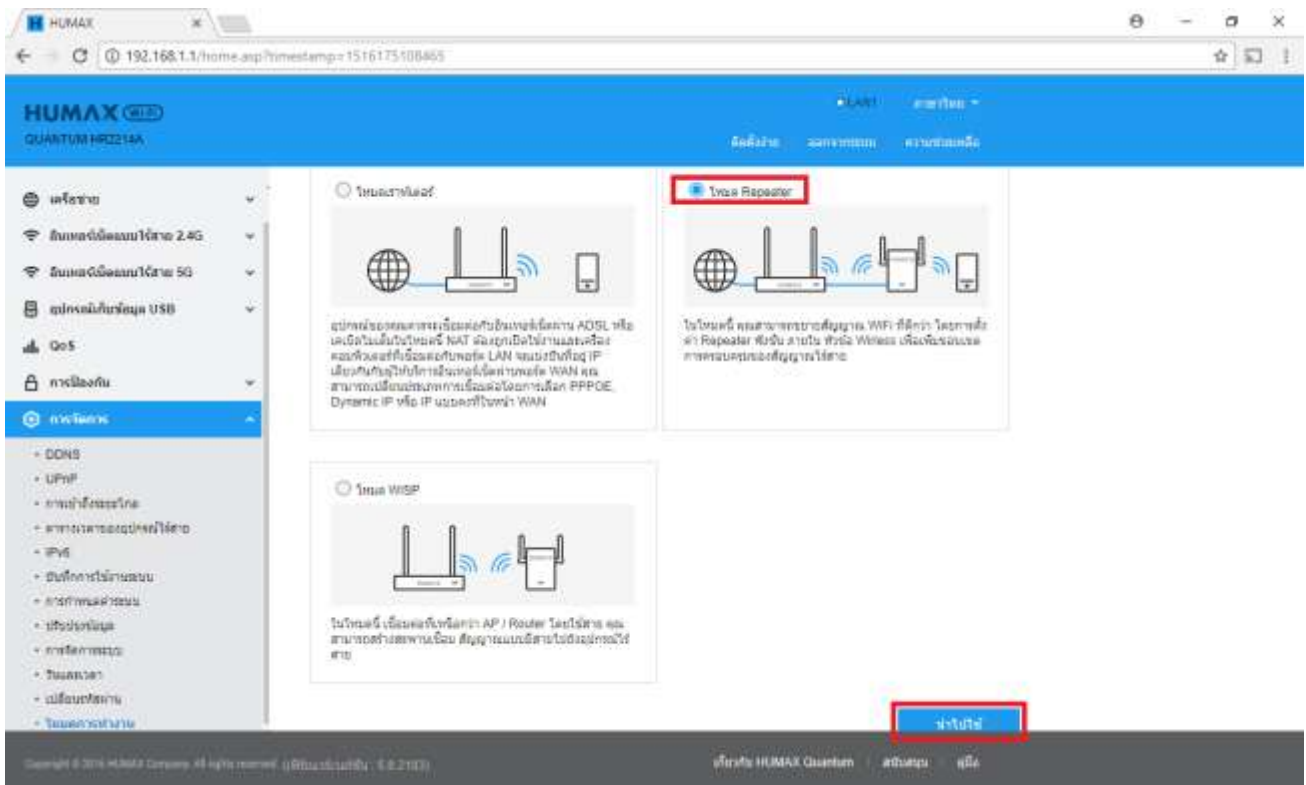


6. Wait for system to restart around 1 minute

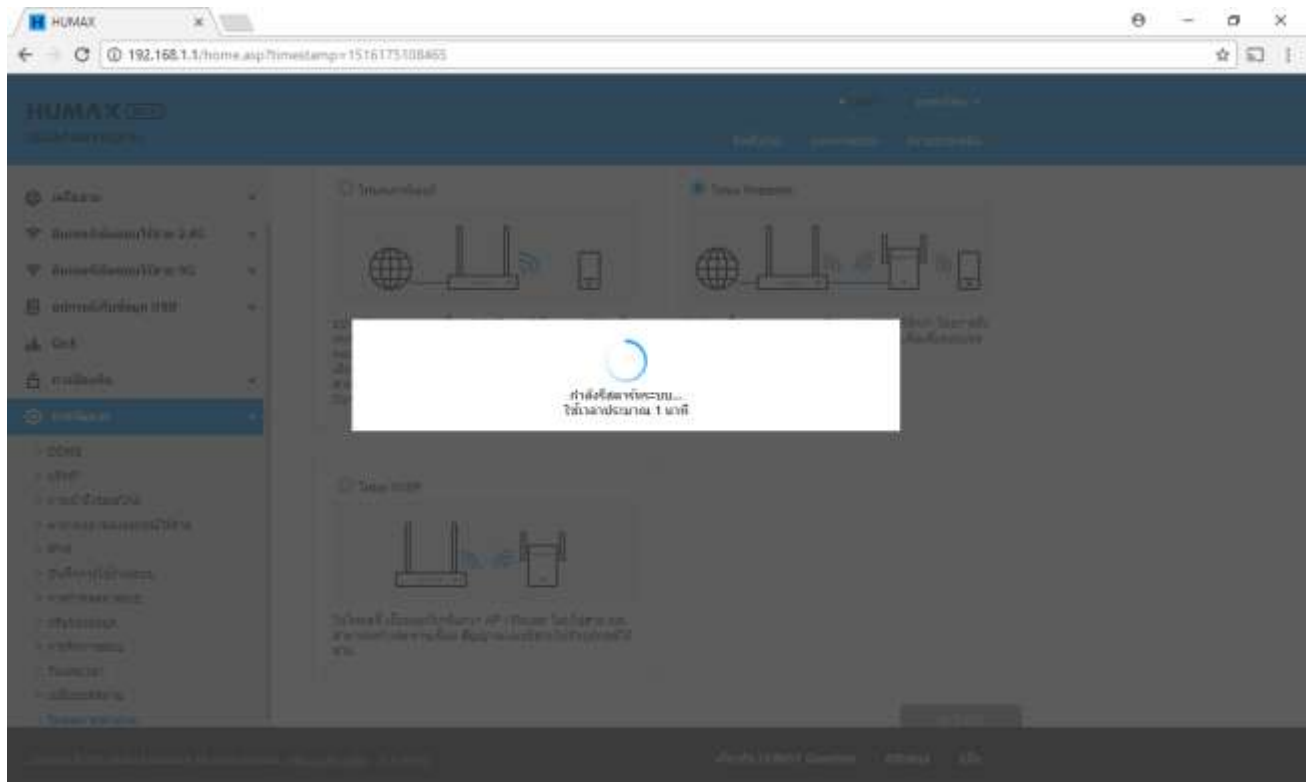


7. A Browser will redirect to Login page again or type `dearmyextender.net`

ID: `admin` / Password: `enter last 4 digits of serial number`


remarks: if change to Repeater mode, to access Setup Page, type `dearmyextender.net` only,
can't access page by using IP Address

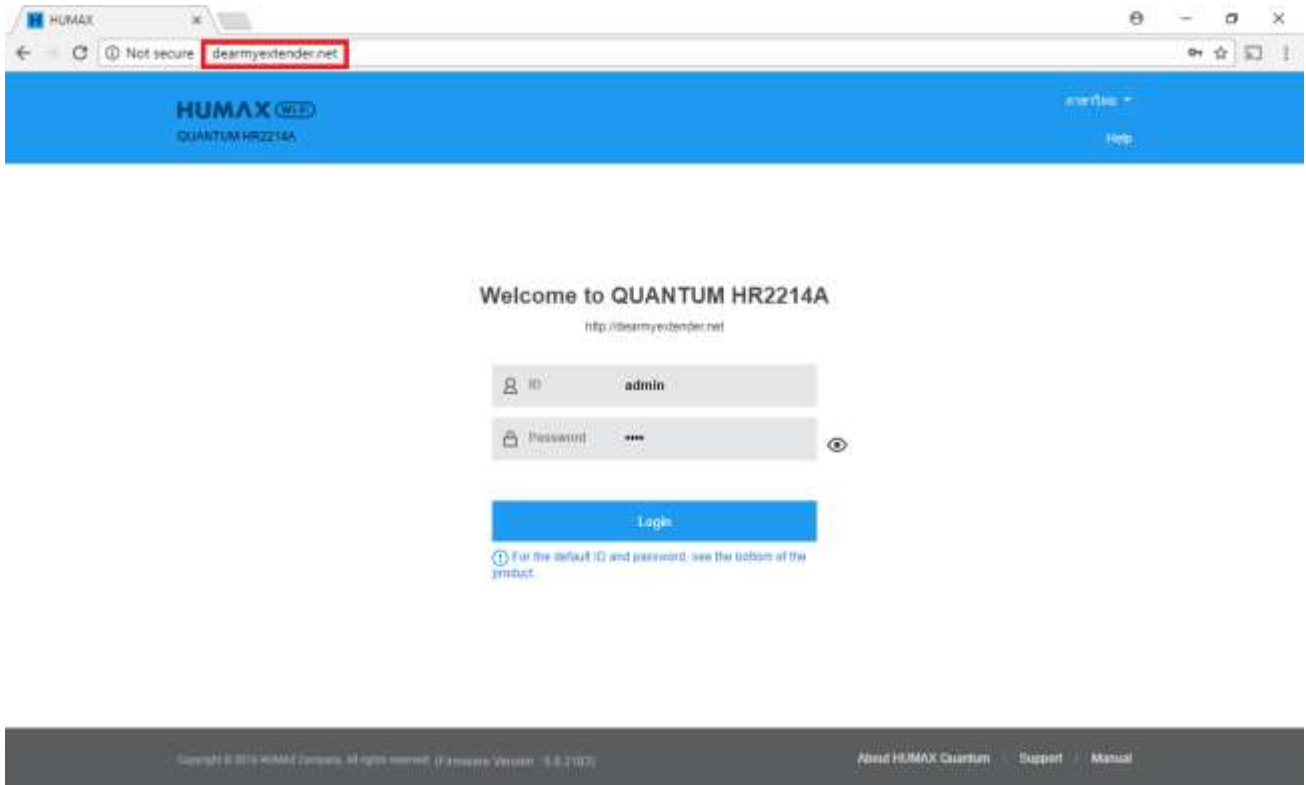


8. At Easy Setup page, choose **Other Products** and then **Next**

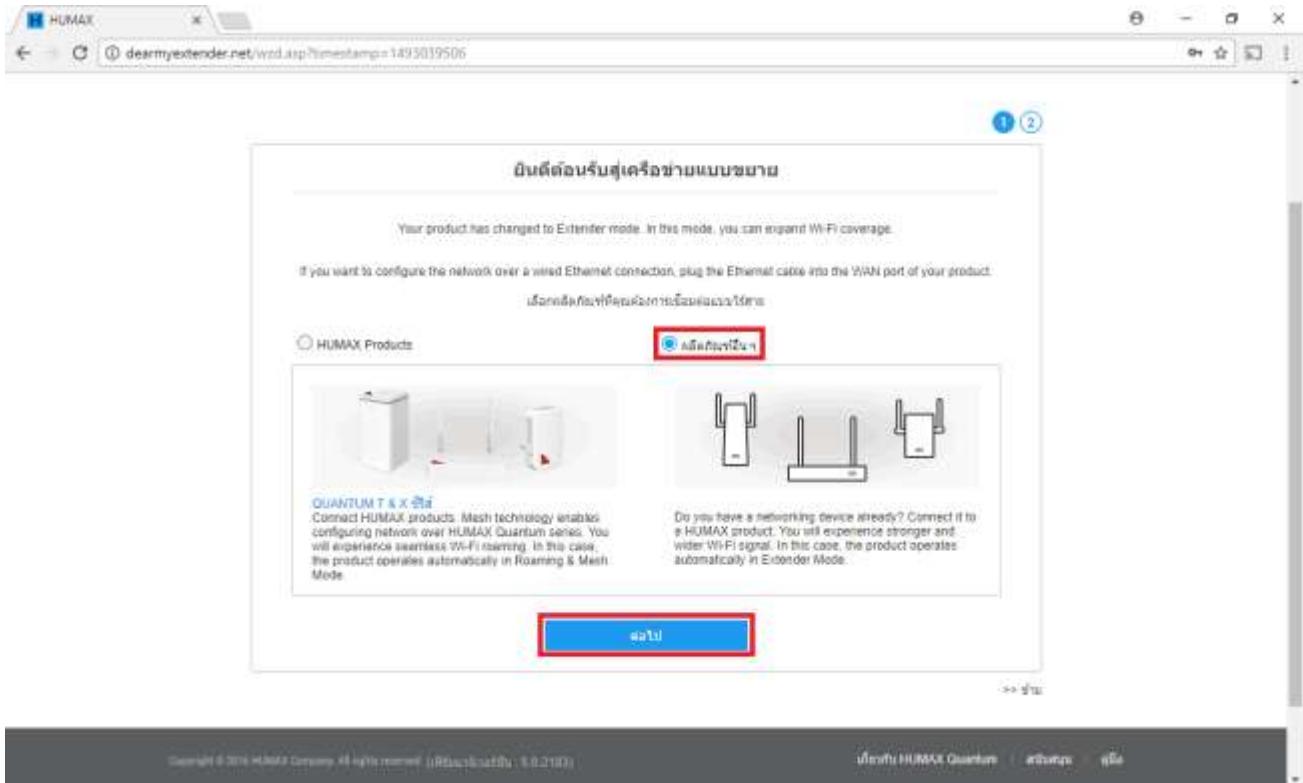


9. Wait a moment, system will show SSID or Wi-Fi network that AP can search

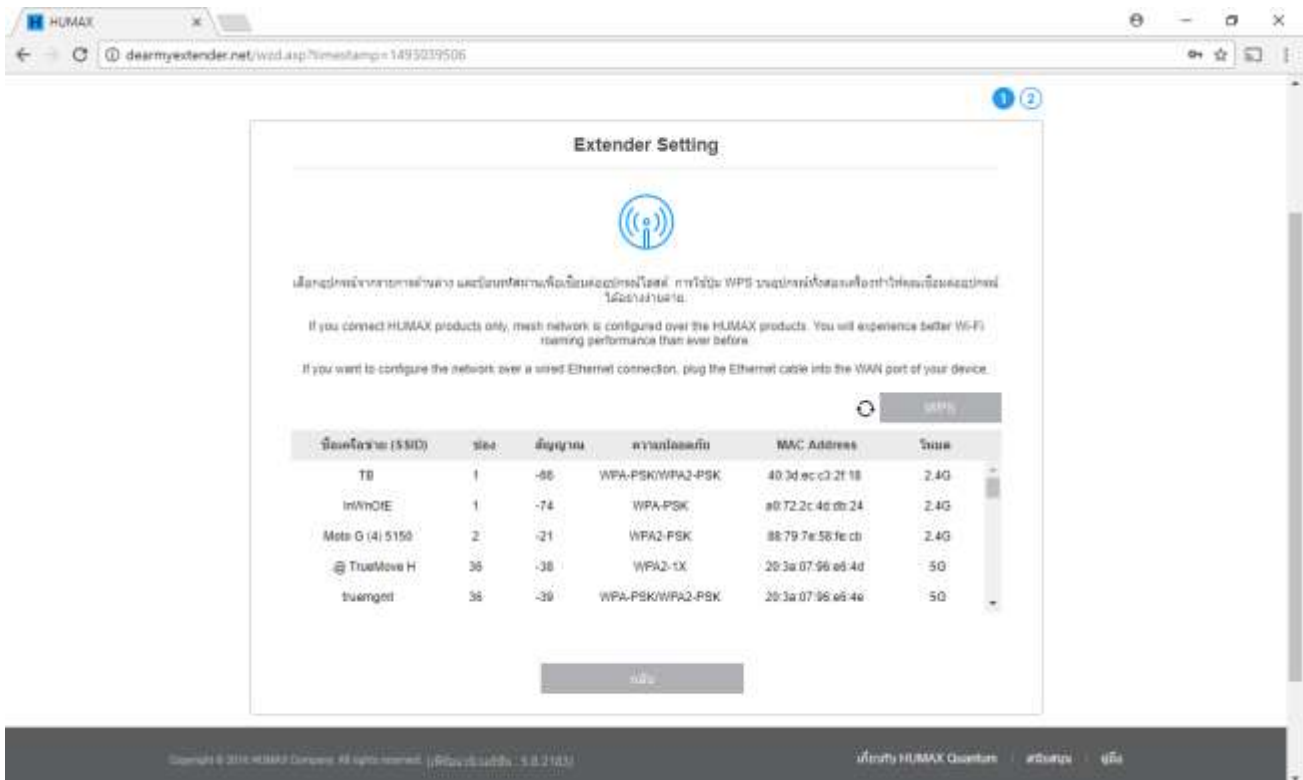


10. Click preferred SSID and enter the password of that network

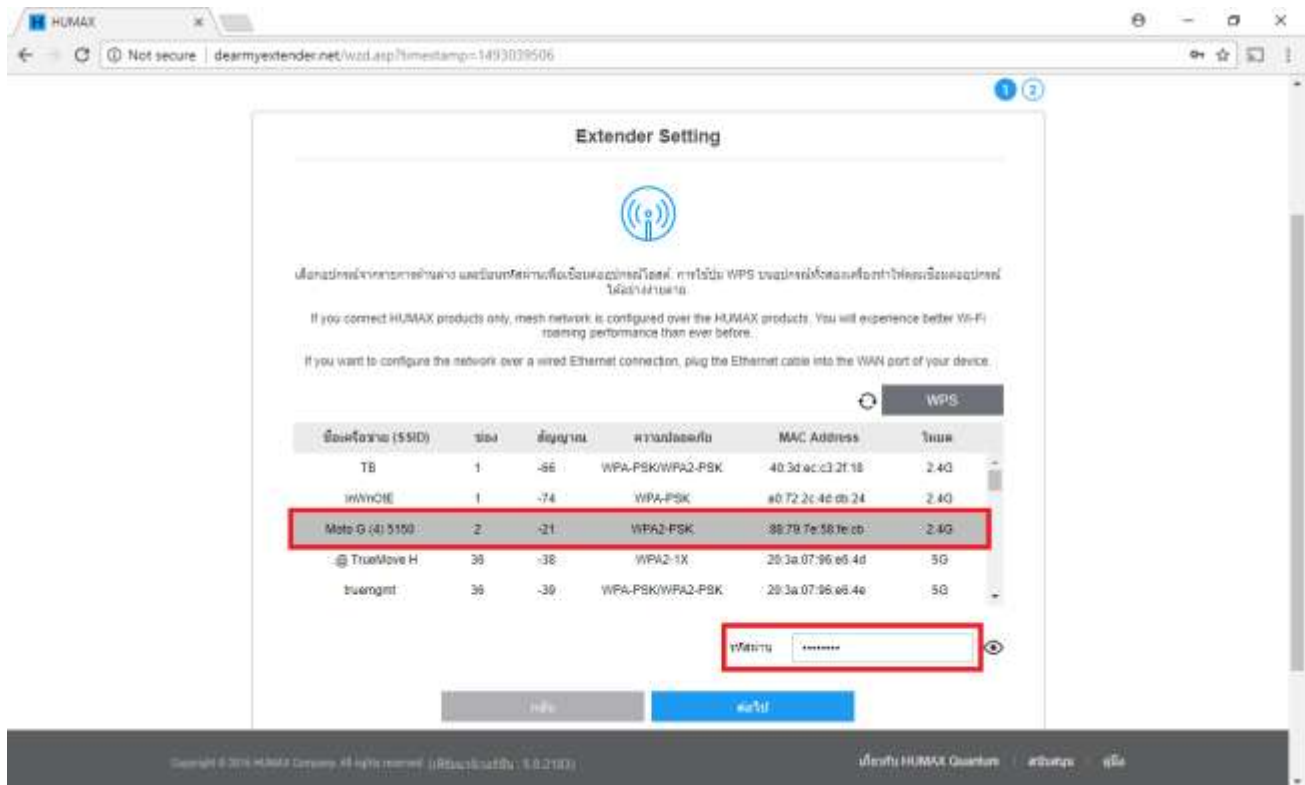

11. Enter the network name which AP will extend network and Password then press Finish

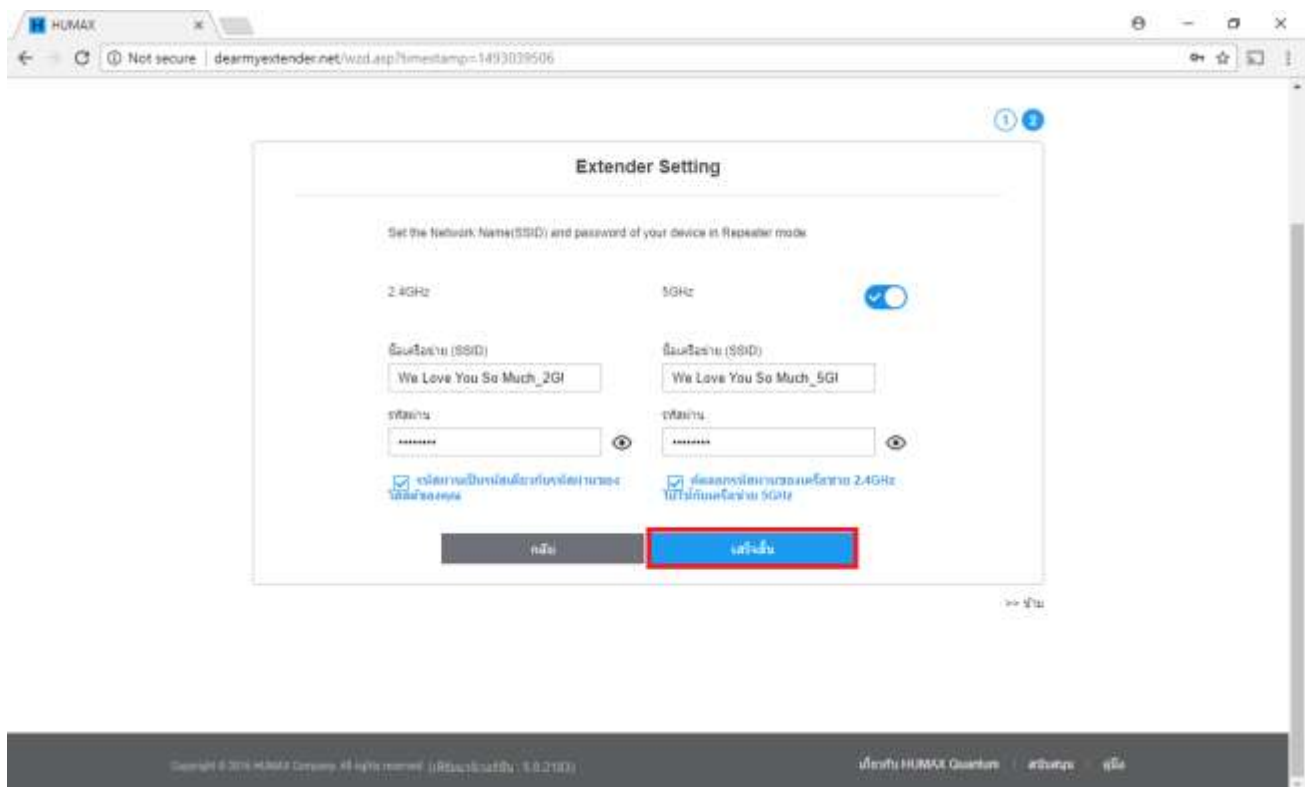


12. Wait for system to restart around 1 minute

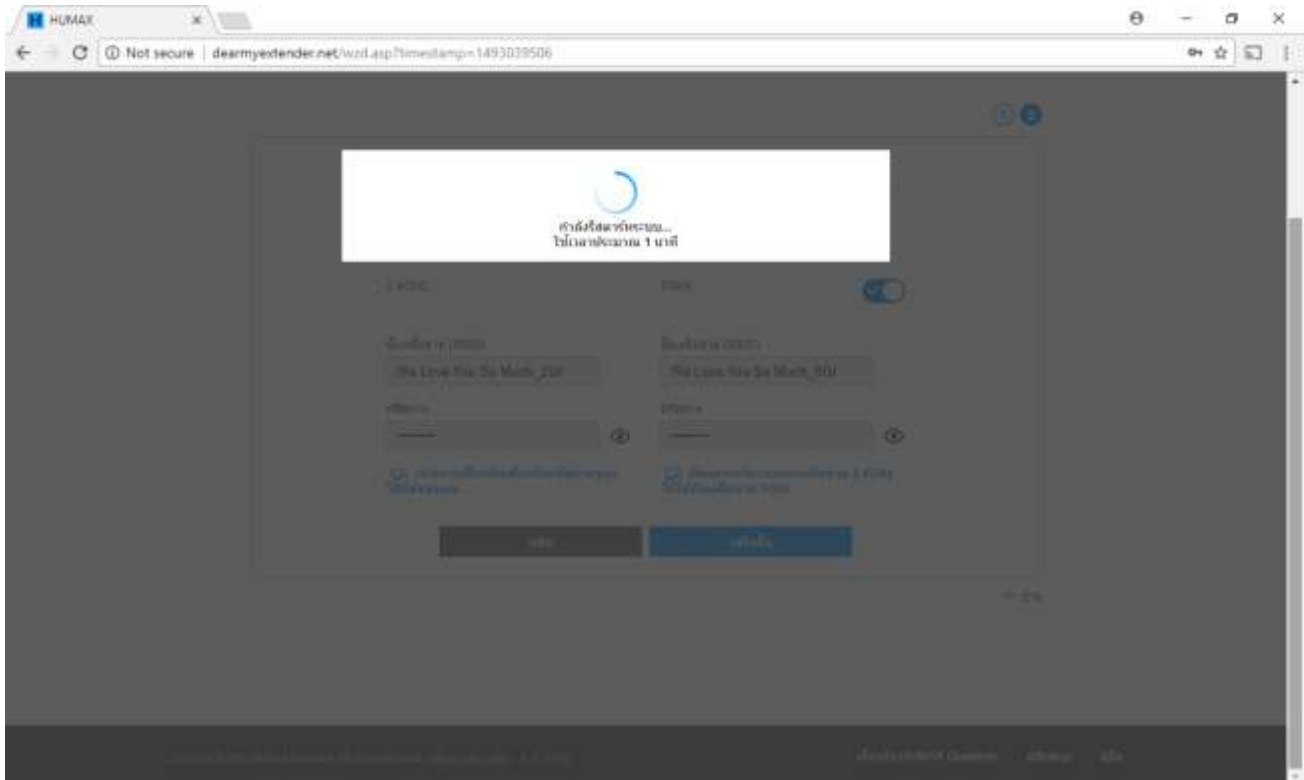


13. A Browser will redirect to Login page again

ID: **admin** / Password: **enter last 4 digits of serial number**

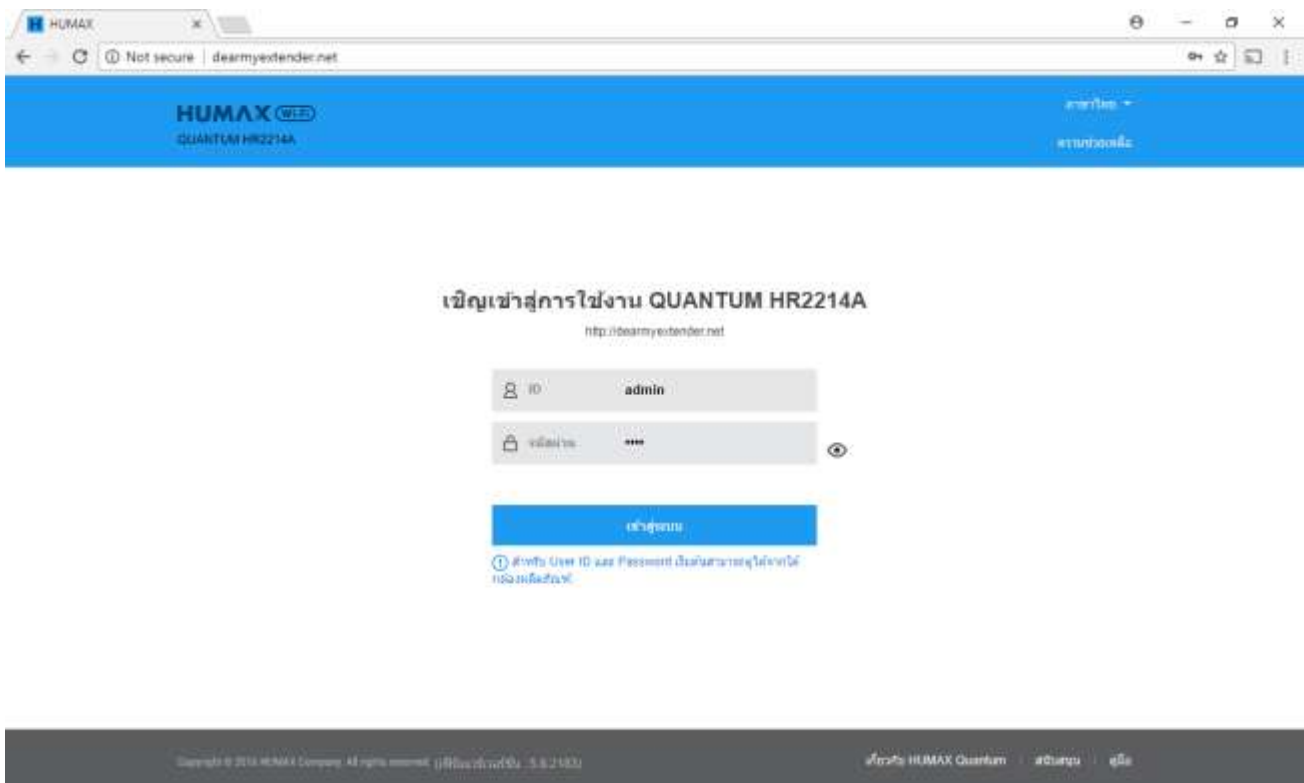

14. To check status, at Home page a globe sign will show a green check and “Connected”

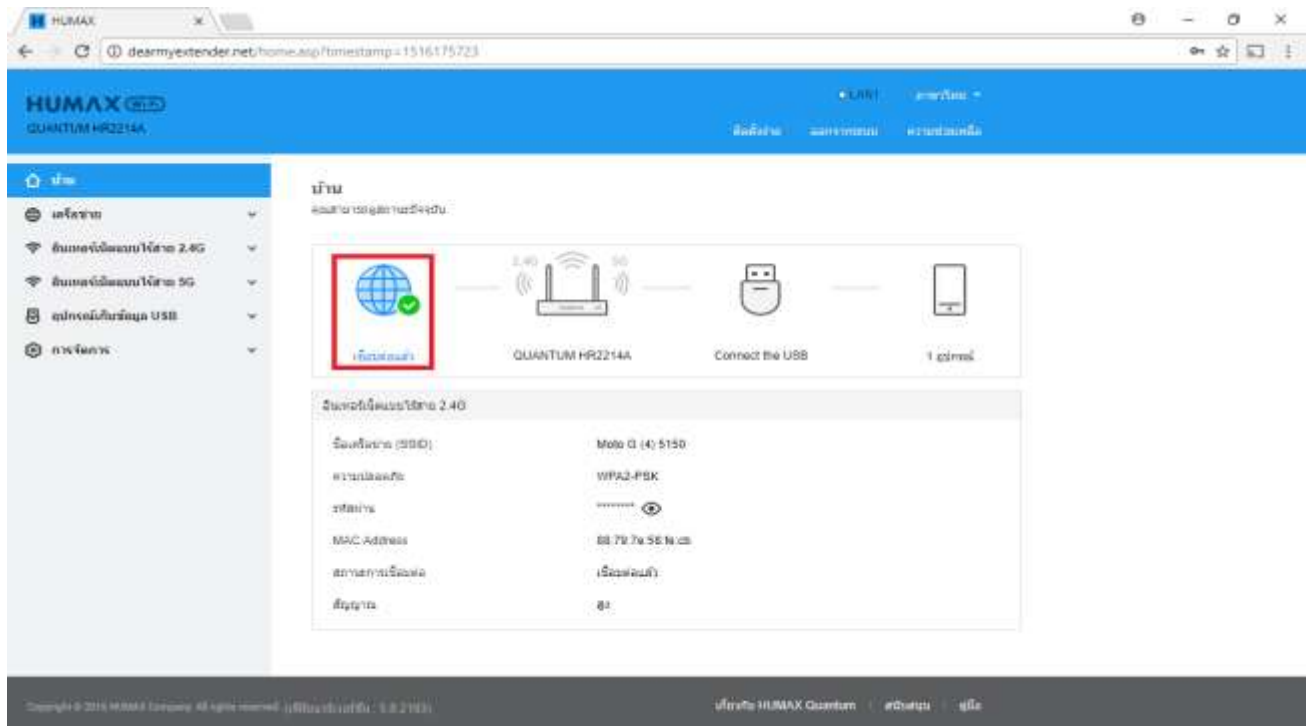

15. Click AP Sign (next to Globe sign), it'll show IP address of main Router

