


## First time installation for HUAWEI HG8247W5


1. Type 192.168.1.1 then press Enter

- User Name = admin
- Password = enter letters as shown in Default Password
- Press Log In

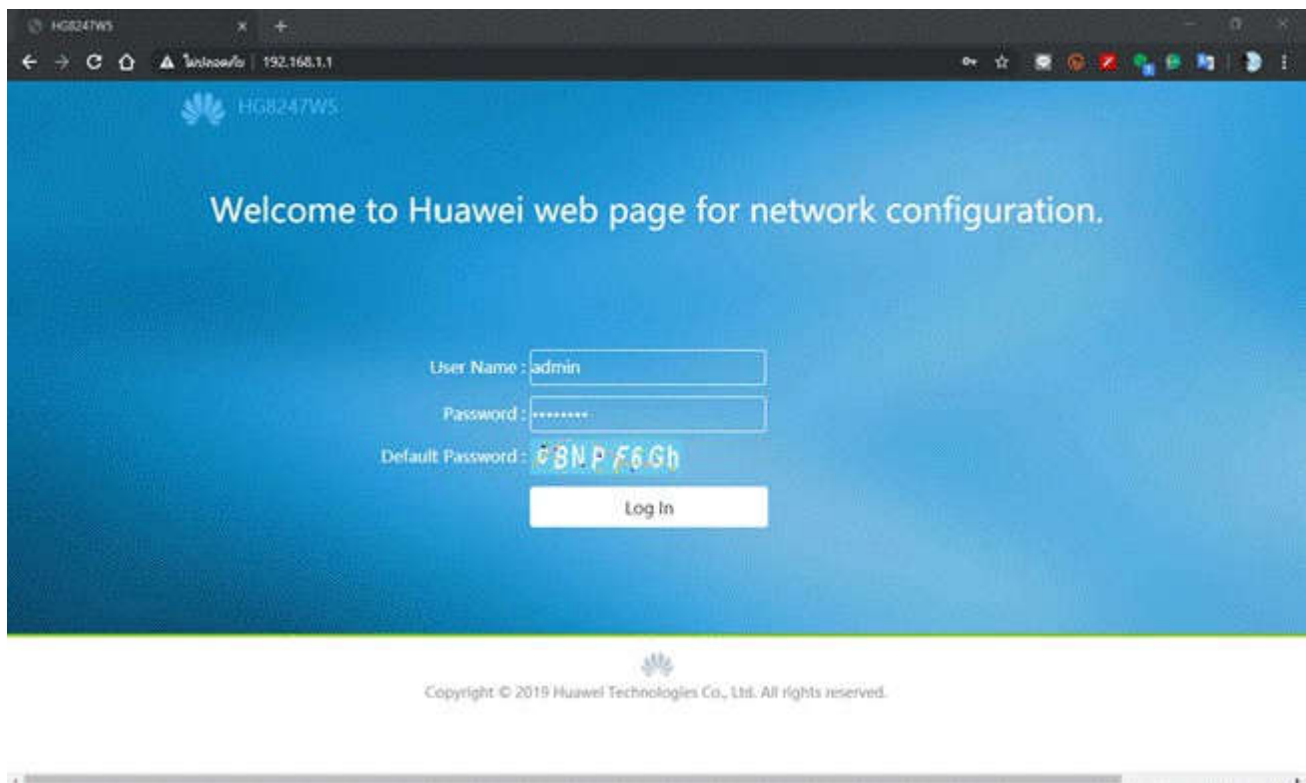

2. For first time Login, the password must be changed and it should not repeat with Default Password, conditions to set new password as follows:

- Set password contains at least 6 characters
- Password should align with at least 2 conditions:
  - Contain digits
  - Have uppercase letter
  - Have lowercase letter
  - Have special character e.g. ! @ # \$ % ^ & \* ( ) - \_ = + \ | [ { } ] ; : ' "
- Cannot be any “user name” or “user name” in reverse order

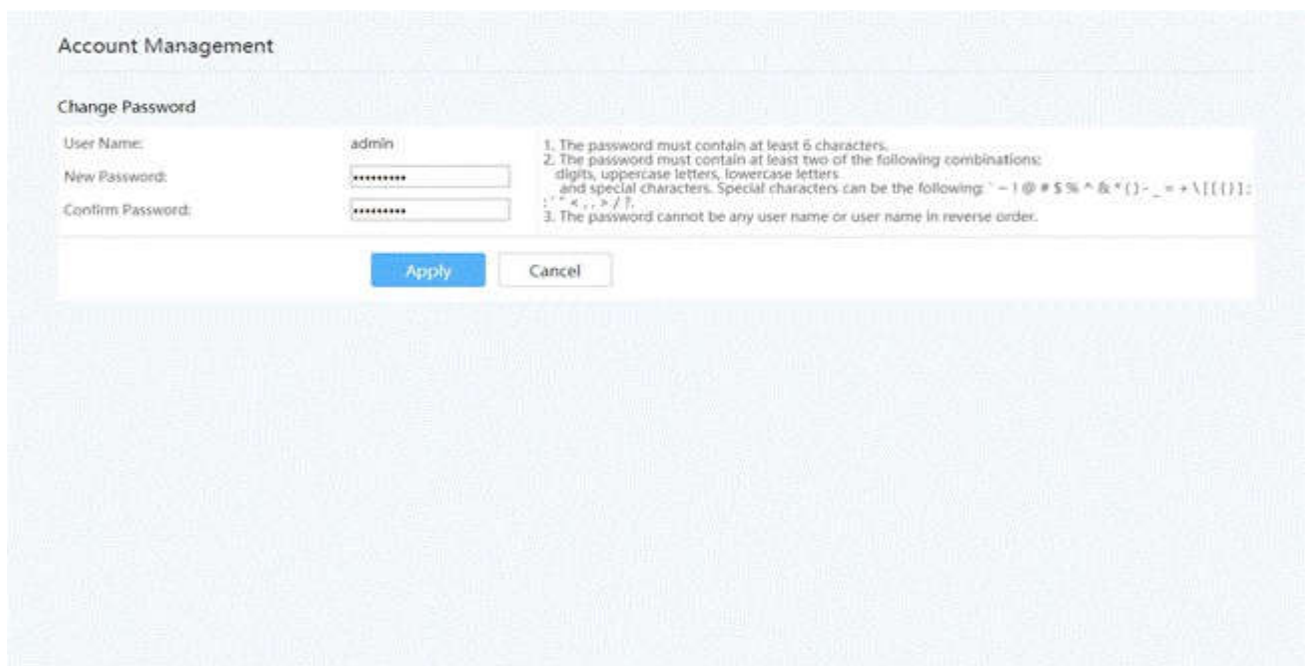

**Account Management**

**Change Password**


User Name:

New Password:


Confirm Password:

1. The password must contain at least 6 characters.  
 2. The password must contain at least two of the following combinations: digits, uppercase letters, lowercase letters and special characters. Special characters can be the following: ` ~ ! @ # \$ % ^ & \* ( ) - \_ = + \ | [ { } ] ; : ' "  
 3. The password cannot be any user name or user name in reverse order.

- When completed, go back to Login page, enter User Name and Password and then press Log In

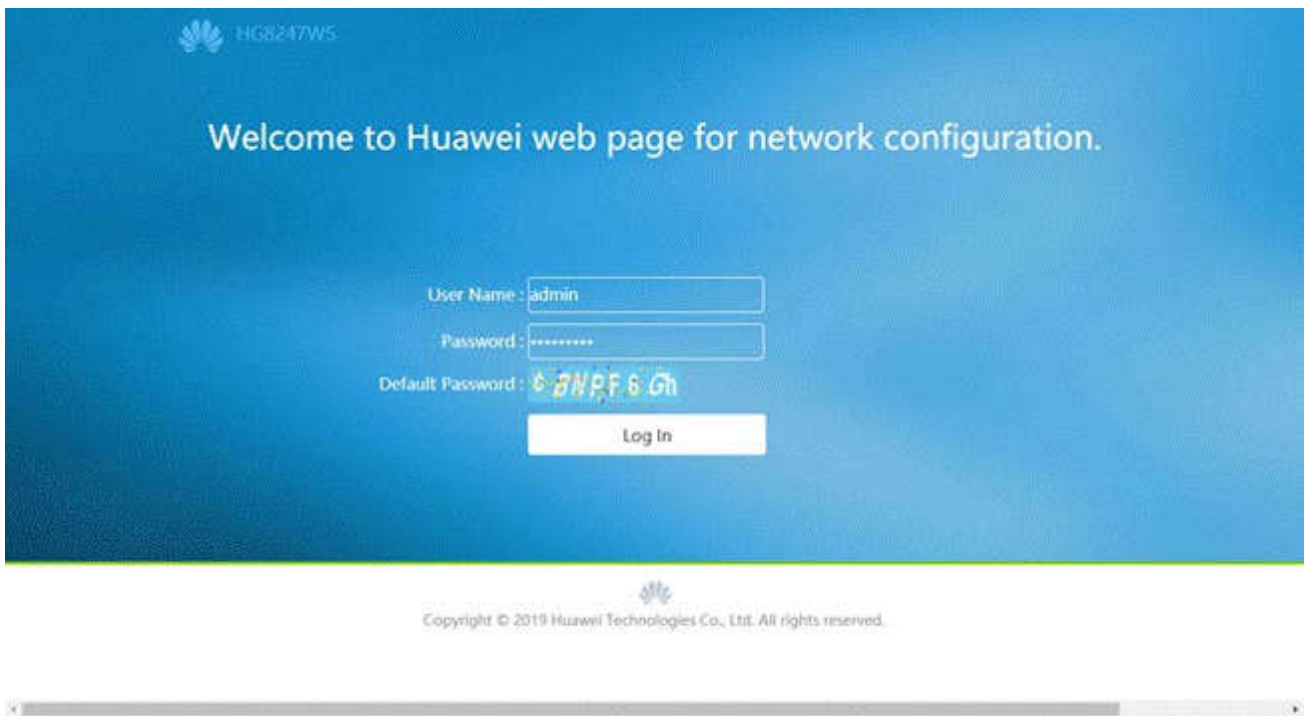

- Wi-Fi configuration : enter name and password of both 2.4G and 5G WiFi then press Next

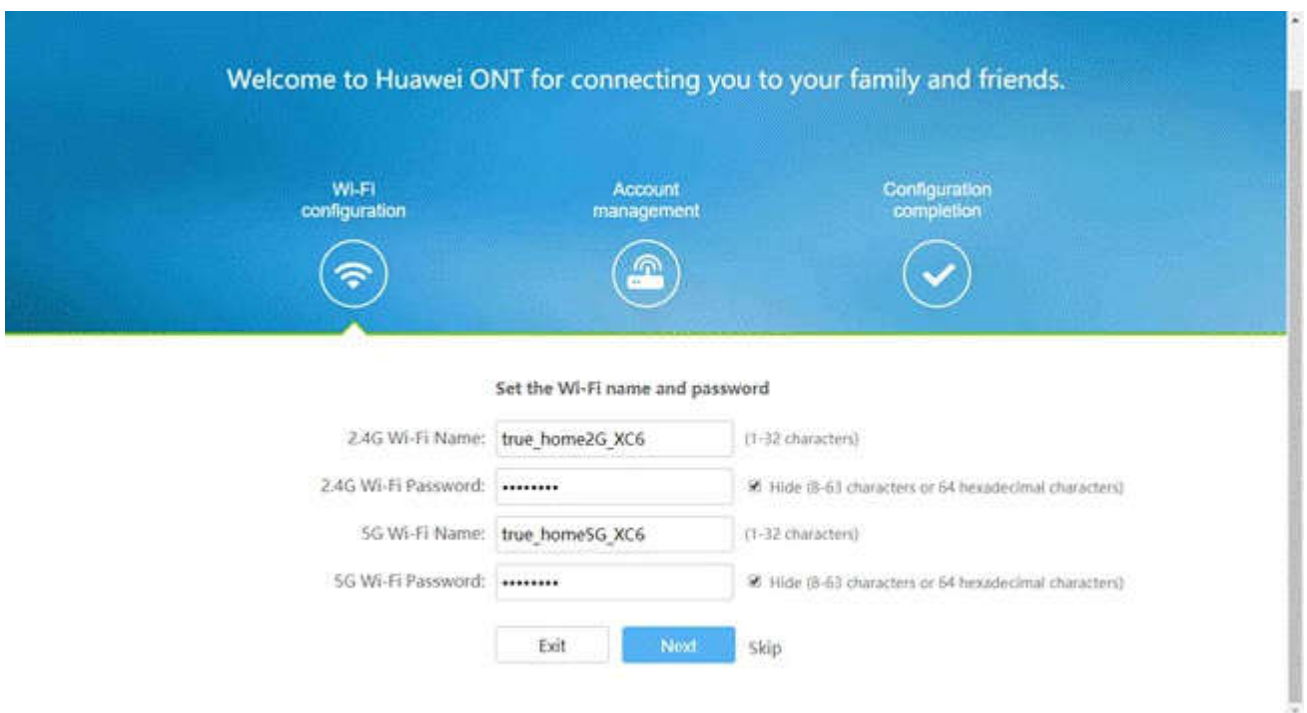

5. Account management : for changing Login password, press Skip



6. Configuration completion : when completed, press Return to Home Page



7. It'll return to Setting main page

