


Set up UPnP on ZTE F688

1. Type 192.168.1.1 at Browser and press Enter

- Username = admin
- Password = enter letters shown in Default Router Password (each ZTE model will vary)
- Press Login

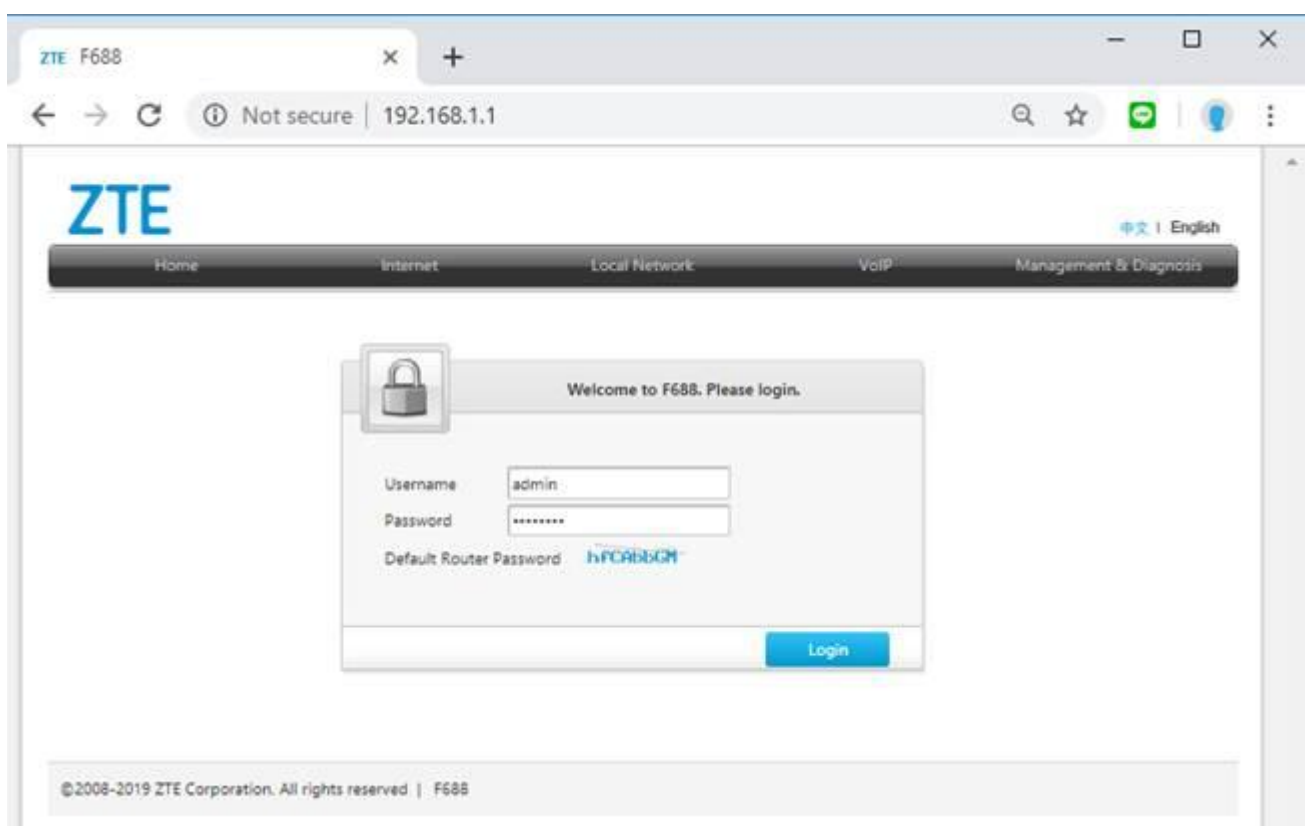

2. Set up as follows:

- Go to Local Network
- Select UPnP
- UPnP : select On to enable
- Press Apply

The screenshot shows the ZTE web interface for configuring UPnP. The top navigation bar includes 'Home', 'Internet', 'Local Network' (marked with a red '1'), 'VoIP', and 'Management & Diagnosis'. The left sidebar has a menu with 'Status', 'WLAN', 'LAN', 'Routing', 'UPnP' (marked with a red '2'), and 'DNS'. The main content area is titled 'Page Information' and contains a section for 'UPnP' configuration. The 'UPnP' checkbox is checked (On), and the 'Apply' button is highlighted (marked with a red '4'). The 'Advertisement Period' is set to 30 min and the 'Advertisement Time To Live' is set to 4 hop. A red '3' is placed next to the 'On' radio button. The footer contains the copyright information: '©2008-2019 ZTE Corporation. All rights reserved | F688 V9.0.10P1T9'.