


Enable Wi-Fi Calling (VoWiFi) on Samsung Galaxy S9+

This manual can be applied to Samsung Galaxy S9+ and Samsung other models with Android 8 or later that support Wi-Fi Calling or VoWiFi through device

1. On main page swipe screen up

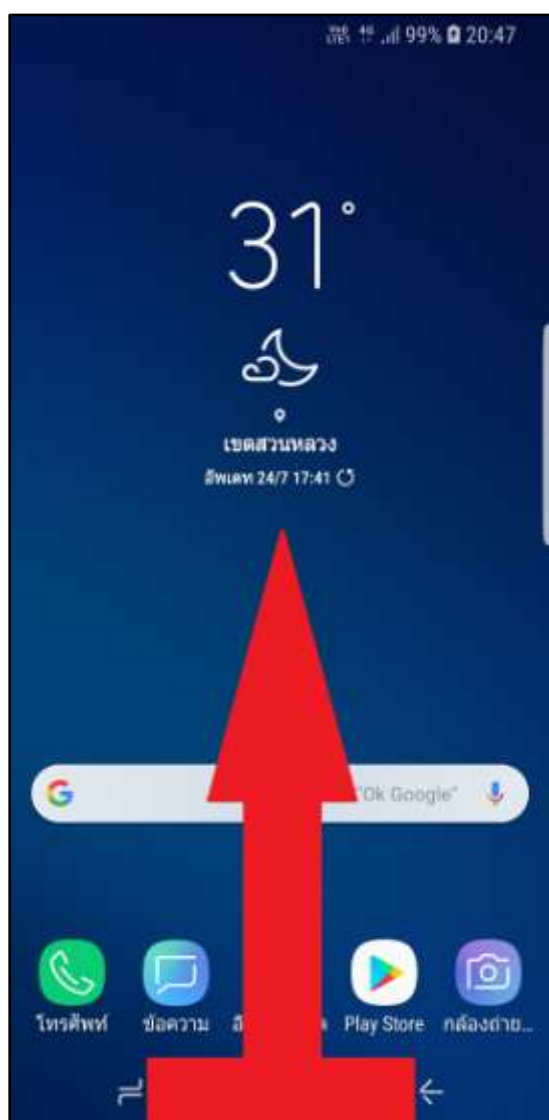


2. Select **(Settings)**



3. Select (Connections)



4. And then (Wi-Fi calling)

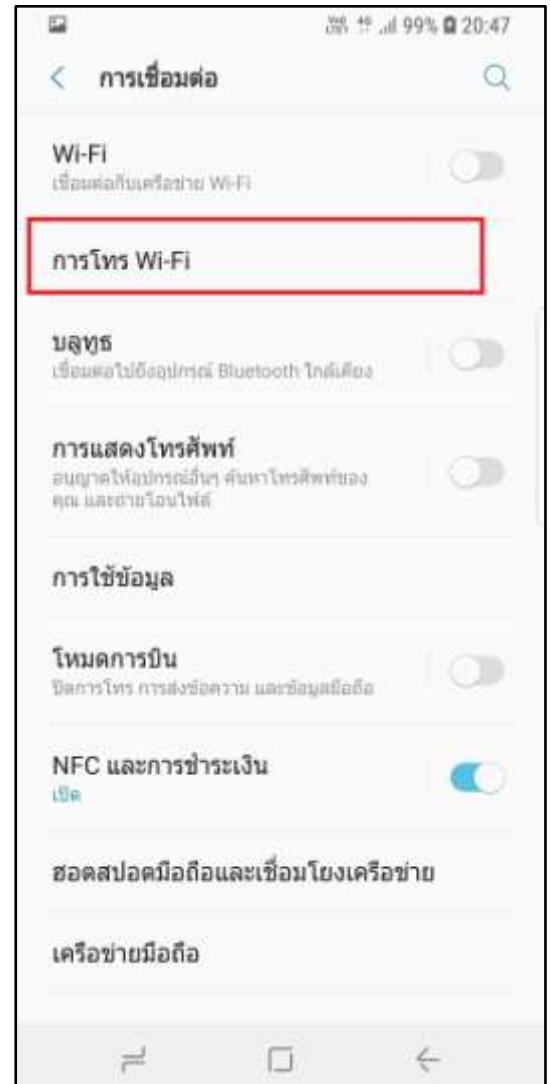

5. On Wi-Fi calling page, tap turn on, a button will turn green, a pop up for selection will appear

- **Wi-Fi preferred** : if device found mobile network and connected Wi-Fi, to make call-receive call will be done via Wi-Fi calling
- **Mobile network preferred** : if device found mobile network and connected Wi-Fi, to make call-receive call will be done via Mobile network, if there's no mobile network, call will be through Wi-Fi network (default setting)



6. Screen example when select Wi-Fi preferred, at top right will have a sign

- Phone + Wi-Fi(fan) +1 or 2 (sim 1/ sim 2)
- Wi-Fi (fan)



7. Screen example when select Mobile network preferred, at top right will have a sign

- VoLTE
- Wi-Fi (fan)



8. Screen example when select Mobile network preferred + Airplane Mode, at top right will have a sign

- Phone + Wi-Fi (fan)+1 or 2 (sim 1/ sim 2)
- Wi-Fi (fan)
- A tiny plane

This mode can make call-receive call via Wi-Fi, if no Wi-Fi connection, the user cannot make call-receive call because Airplane mode is turned on

