true

Set up LAN and WAN for HUMAX HG100RE

1. Type 192.168.1.1 then press Enter, type Username = admin,

Password = password and click Login





2. At Basic menu, on the left select Setup, it will show Basic Setup

LAN

- IP Address > enter IP Gateway to access Config Router Modem page
- DNS Server > is Proxy DNS which can be changed to other DNS e.g.
 DNS Google 8.8.8.8

WAN: show details e.g. received IP Wan, received DNS

UMAX	Basi								
		Ne	twork	Configur	ation				
Setup	LAN		100	400	1.6	1.			
DHCP	IP	Address:	192	. 168		. 1			
	Su	ibnet Mask	255	. 255	. 255	. 0			
DDNS	M	MAC Address 08:eb:74:70:09:11							
SNTP	D	NS Servers	192	. 168	.1	. 1			
	WAN								
Backup	IP	IP Address: 10.89.250.133							
	G	Gateway: 10.89.250.129							
	М	AC Address:	08:eb:74:70:09:0f						
	D	uration	D: 05 H: 19 M: 20 S: 59 Tue Nov 19 10:02:16 2013						
	Ex	pires:							
	Re	emainning Time:	D: 05 H: 19 M: 02 S: 02						
	IP	IPv4 DNS Servers: 203.144.207.29							
		203.144.207.49							
		Release WAN Lease Renew WAN Lease							
		WAN C	Connectio	on Type D	HCP	•			
	In	v4 MTU Size	0	(256-1	500 oct	etc 0 = uc	e det		



 At Basic menu, on the left select DHCP, it will show Basic DHCP You can set DHCP as shown and it will show the Client who's using

Status	Basic	Advanced	Firewall	Parental Control	VPN	Wireless
нимлх	Bas	IC P HELP				
DOWS	DHCP Starting Number Lease T	Server • Yes O N Local Address 192. of CPEs 32 ime 8640	o 168.1.33 0			
SNTP Backup	Apply DHCP C	lients				
	MAG Ad Sc19dd4 Current	ddress IP Address ddd4c 192.168.001 System Time: Wei	Subnet Masi 1 034 255 255 255 1 d Nov 13 15 02 50 :	000 D 01 H 00 M 00 S 00 1 003	Expires Thu Nov 14 14 43	Select 33/2013