


## Change Password to access Configuration Page of HUAWEI HG8247W5

1. Type 192.168.1.1 then press Enter

- User Name = admin
- Password = enter letters as shown in Default Password
- Press Log In

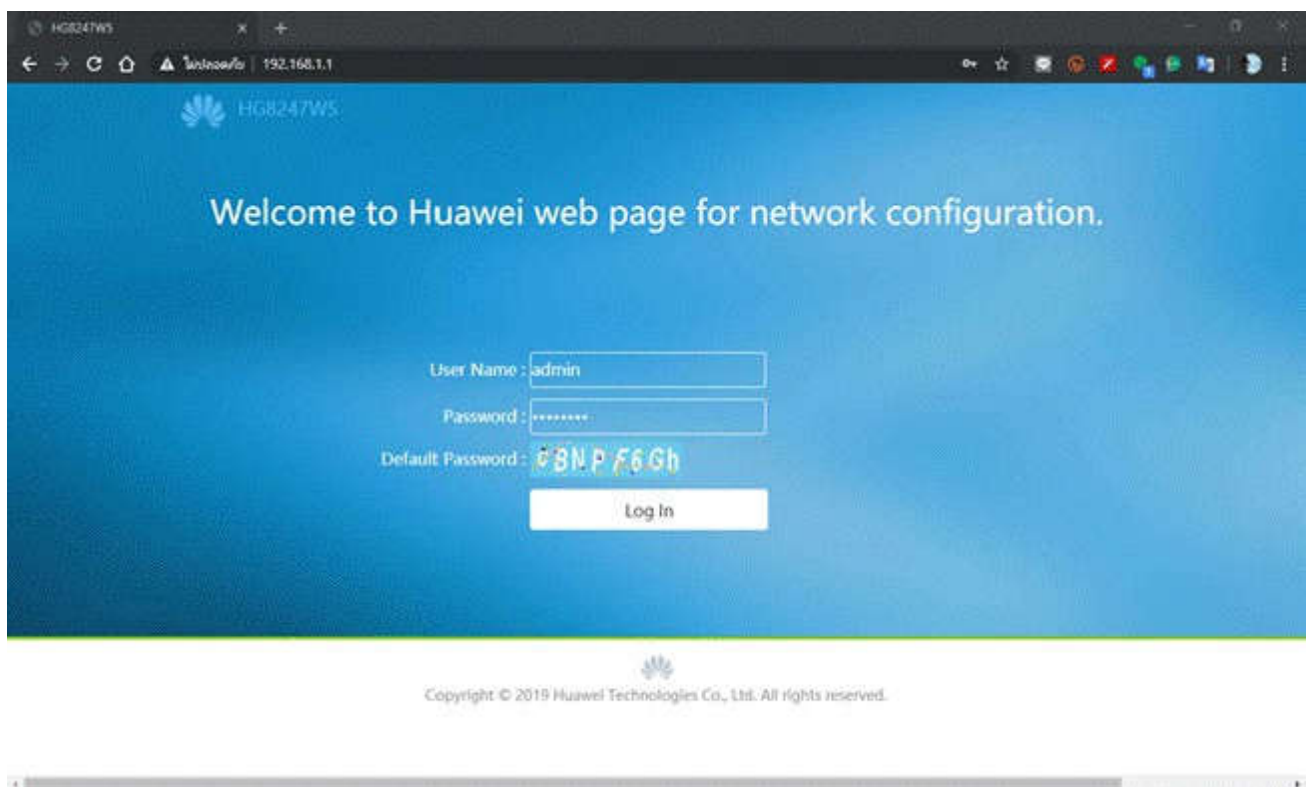

Set up as follows:

- Go to Advanced Configuration
- Select System Management > Account Management
- Old Password : enter old password
- New Password : enter new password
- Confirm Password : enter new password
- When finished, press Apply

Conditions to set password

- Should contain at least 6 characters
- contain at least two of the following combinations:
  - have digits
  - have uppercase letter
  - have lowercase letter
  - have special character e.g. ! @ # \$ % ^ & \* ( ) - \_ = + \ | [ { } ] ; : ' > / ?
- Cannot be any “user name” or “user name” in reverse order

