


## Set up LAN for FiberHome AN5506-04-CG

1. Open a browser e.g. Chrome and type **192.168.1.1** then press **Enter**

- Username = **admin**
- Password = **password**
- Press **Login**

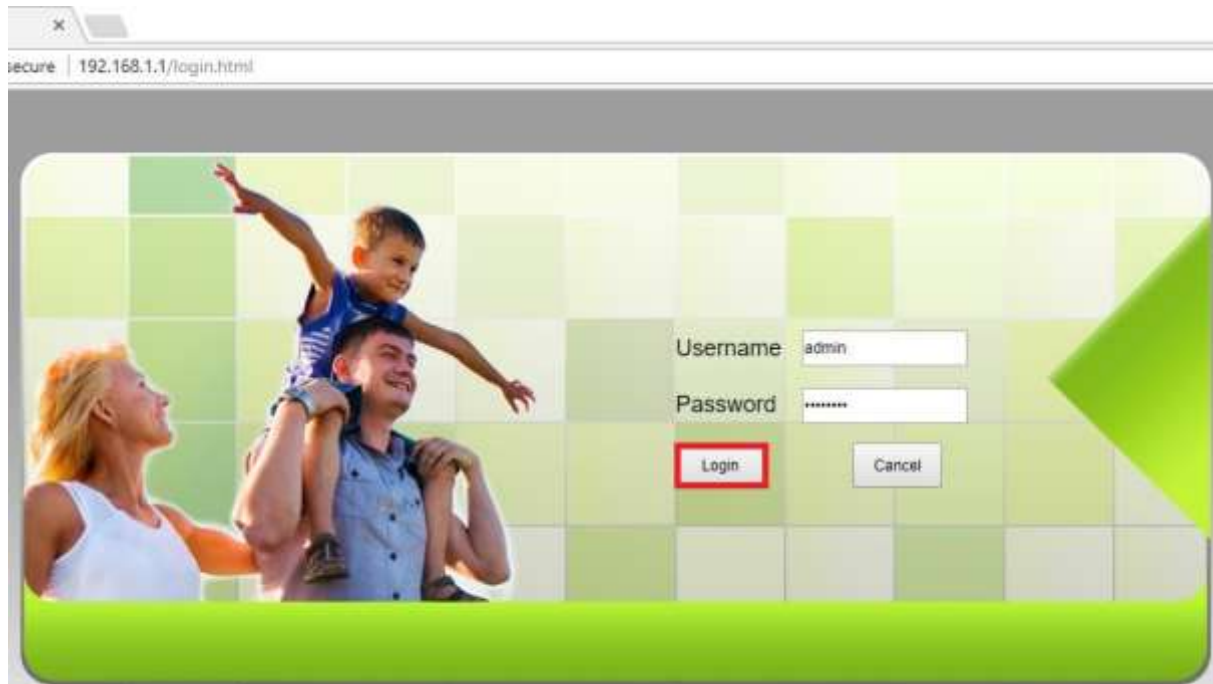

2. It'll lead to **Status** page

secure | 192.168.1.1/login.html Logout

**Status**   Network   Security   Application   Management

Device Information   Status » Device Information » Device Information

On this page, you can query device information.

Device Information	
Software Version	RP2601
Hardware Version	WKE2.134.285C3G
Device Model	AN5506-04-CG
Device Description	GPON
ONU State	O1(STATE_INIT)
ONU Regist State	INIT
LOID	fiberhome
CPU Usage	0.00%
Memory Usage	37.35%
Web Server port	80
CATV Enable	Enable
CATV Received Power	-40.00dBm
CATV RF Power	-4.01dBmV

3. Set up LAN : go to **Network > LAN Settings > LAN Settings**, set up IP router as desired then press **Apply**

4. Set up DHCP : go to **Network > DHCP Server > DHCP Service**

- **Type:** select **Server** (to distribute IP to connected device e.g. computer, etc.)
- **DHCP Start IP :** Start IP (must not be 192.168.1.1)
- **DHCP End IP :** End IP
- **DHCP Lease Time :** 24 Hour
- Press **Apply**