

Set up Wireless for RAISECOM ISCOM HT803G-W-05

1. Type 192.168.1.1 in the Address bar on Browser and press Enter

- **User Administration** (cannot change CH Wireless)
 - **User Name:** useradmin
 - **password:** useradmin
- **Super Administration** (can change CH Wireless)
 - **UserName:** superadmin
 - **password:** q!w@e#



2. After Logging in, it'll lead to Status page

The screenshot shows a web browser window with the URL 192.168.1.1. The page title is "RAISECOM" and the main heading is "Status". The navigation menu includes "Status", "Terminal", "Safety", "Manage", and "Help". The "Status" page is divided into sections: "Device Info", "Wire Info", "User Info", and "Vlog Info". The "Device Info" section is expanded, showing a table of "Device Basic Info".

Device Basic Info	
Device Model	HT801G-W
Device Serial Number	000E1E02BA000E5E4C389
Hardware Version	T.00
Software Version	1.0.10
Version Date	20170123
CPU Usage	18%
Memory Usage	62.99%

3. On the top, select **Internet > Wlan > Wlan Config**

3.1. For **User Administration** (cannot change CH Wireless)

- Enable WLAN Interface: enable-disable Function WLAN
- SSID: enter Wireless name
- BSSID: MAC of WLAN Router
- Hidden AP: hide Wireless

The screenshot displays the RAISECOM web management interface. The browser address bar shows the IP address 192.168.1.1. The main navigation bar includes 'Internet', 'Status', 'Internet', 'Safety', 'Message', and 'Help'. The left sidebar contains 'Internet', 'Wlan Config', and 'Security'. The 'Wlan Config' section is active, showing 'WLAN Basic Settings'. The settings include:

- Enable WLAN Interface
- SSID: USER_84C38A
- BSSID: 00:0e:5e:84:c3:8a
- Hidden AP:

An 'Apply/Save' button is located at the bottom of the settings area.

3.2. For User Super Administration (can change CH Wireless)

- Mode: Wireless Mode
- Enable WLAN Interface: enable-disable Function WLAN
- SSID: enter Wireless name
- BSSID: MAC of WLAN Router
- Country:
- Channel Number: Wireless Channel
- Radio Power: strength level for sending Wireless
- Max Clients: the device connected to Router's Wireless (max 64)
- Hidden AP: hide Wireless name

RAISECOM

Internet | Status | Network | Safety | App | Manage | Diagnostics | Help

WLAN Basic Settings

This page is used to configure the parameters for wireless network.

Enable WLAN Interface

Mode: 2.4 GHz (B+G+N)

SSID: USER_8AC36A

BSSID: 00:0e:54:03:8a

Country: CHINA

Channel Width: 20MHz

Channel Number: Auto Current Channel: 1

Data Rate: Auto

Radio Power (%): 100%

Max Clients: 32 (0-32, 0 indicates max 64)

Client Isolate:

Hidden AP:


SSI: ON OFF

Multiple AP: Multiple AP


Apply/Save

4. On the top, select **Internet > Wlan > Security**


- SSID: select SSID to set up
- Encryption: select preferred Security

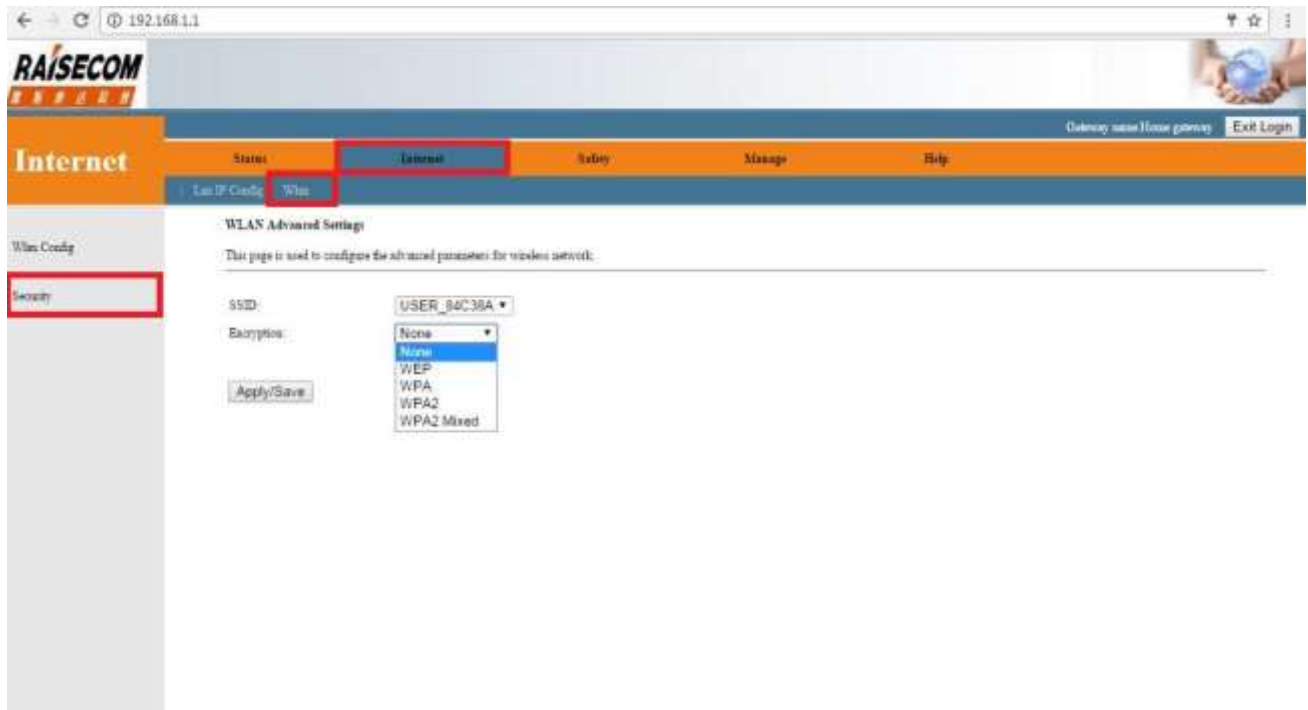


WEP Security screen example

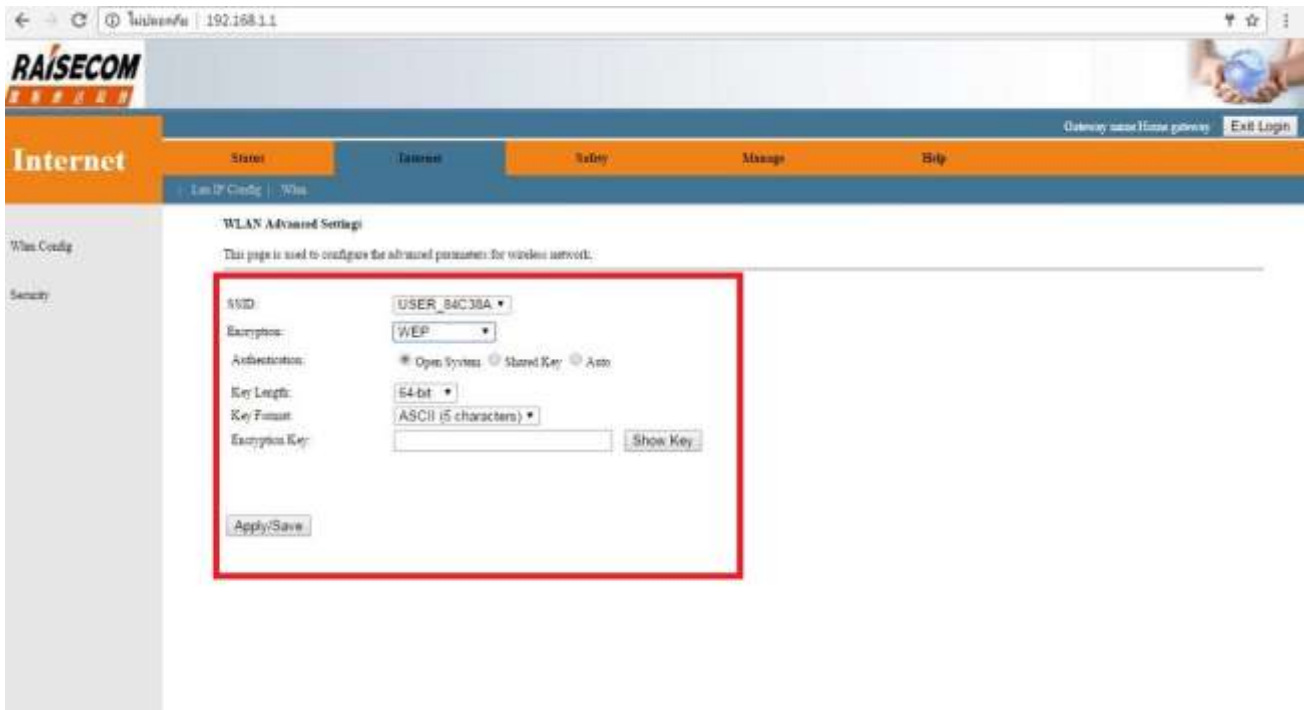

WPA Security screen example

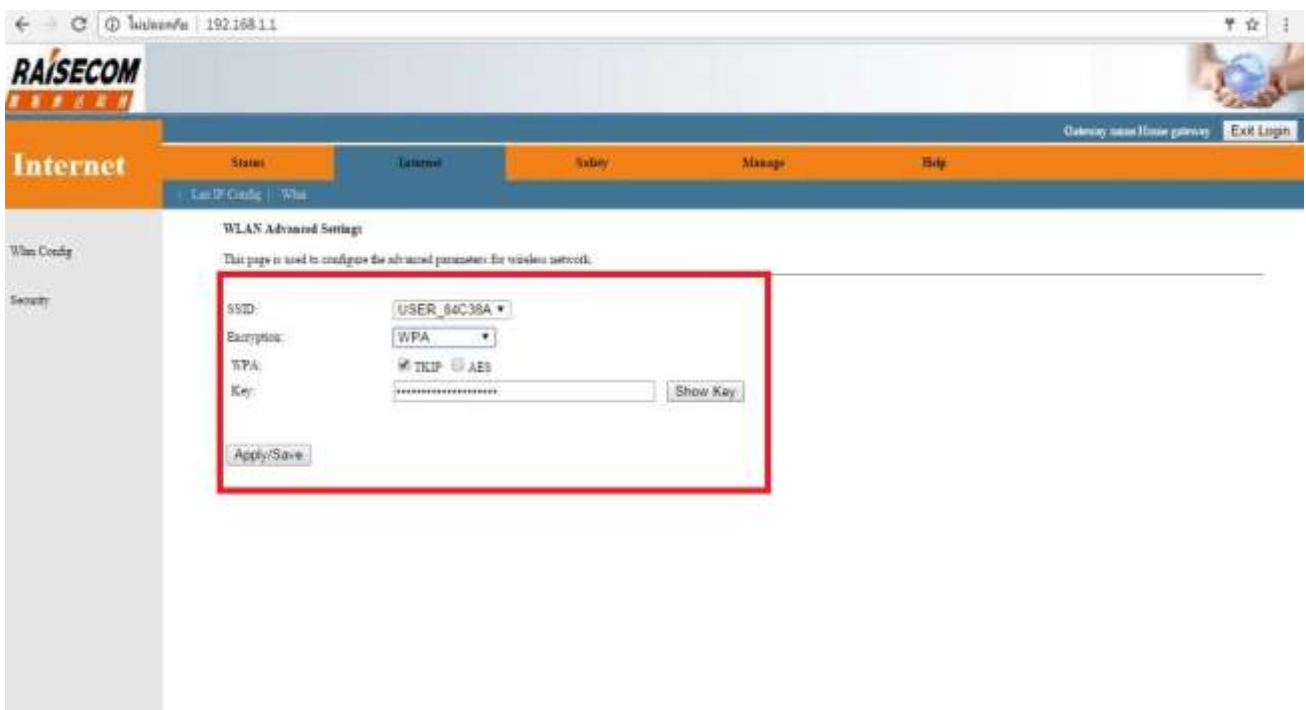

WPA2 Security screen example

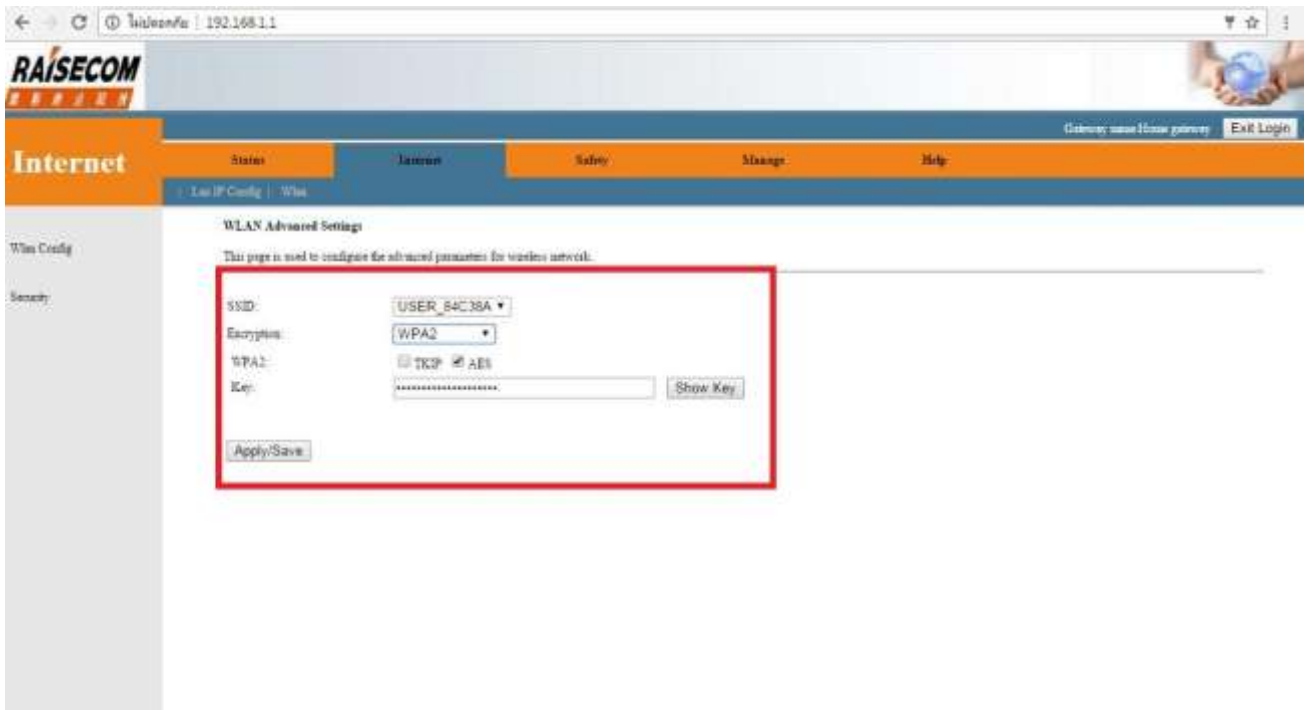

WPA Mixed Security screen example

