

## Activate 4G HD Voice – VoLTE for iOS 9.3

This setting can be applied to iPhone 6, 6Plus, 6s, 6s Plus and iPhone SE which iOS can be updated to iOS 9.3 and able to use VoLTE – 4G HD Voice

More information about VoLTE - 4G HD Voice :

<http://truemoveh.truecorp.co.th/campaign/entry/6613>

1. At Home screen, go to [Settings]



2. Select [Cellular]

\*if menu language is English (U.K.), it will be Mobile Data\*



### 3. Choose [Cellular Data Options]

\*if menu language is English (U.K.), it will be Mobile Data Options\*



### 4. Choose [Enable 4G]



## 5. Sub-menu as follows:


- (Off) = disable 4G, the phone will connect 3G instead
- (Voice & Data) = enable 4G  
LTE – 4G HD Voice
- (Data only) = use 4G only for data usage, for voice usage will connect 3G or 2G




## 6. **First Activate:** choose

[Voice&Data]

- Circling sign behind
- Wait a moment until 4G HD Voice is ready to use
- Wait around 2–4 minutes

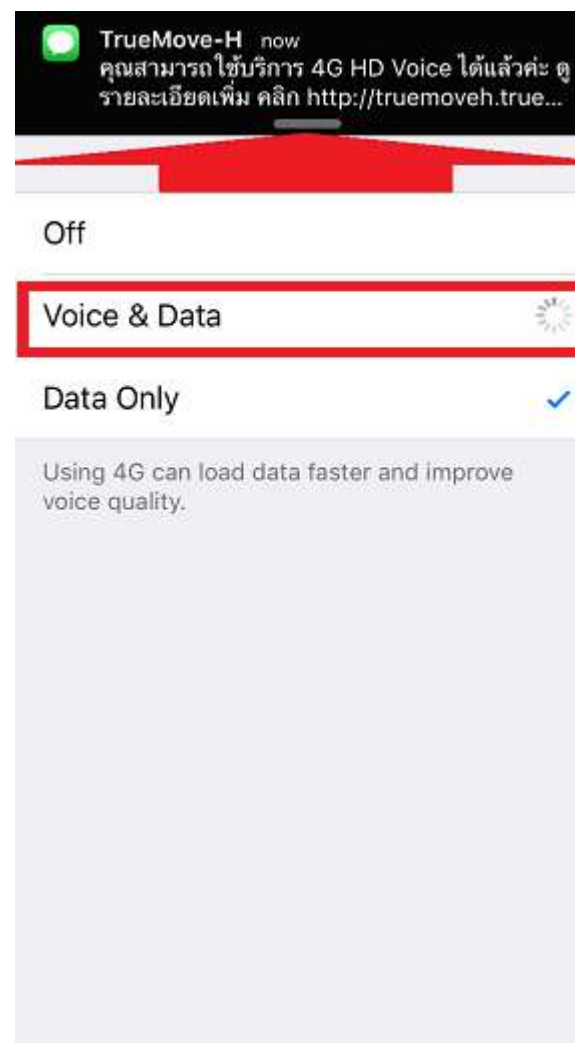

7. Wait a moment, there'll be a check mark behind [Voice&Data]

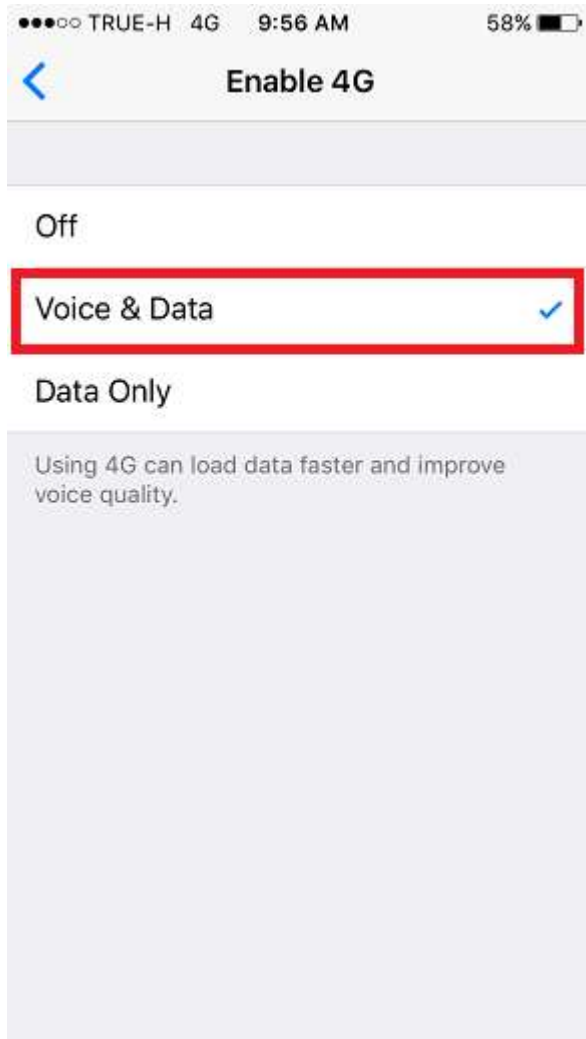

8. Back to [Cellular] page, at [Enable 4G], it'll be [Voice&Data]



### 9. Message received from TMVH

“คุณสามารถใช้บริการ 4G HD Voice ได้แล้วค่ะ ดูรายละเอียดเพิ่มเติม คลิก

<http://truemoveh.truecorp.co.th/iphone/4GVoice.htm>



### 10. Enable 4G again after it

has been activated:

at [Enable 4G] ), a check mark will be at [Data only] = disable 4G HD Voice (VoLTE)



11. To enable 4G HD Voice (VoLTE), select [Voice&Data], 4G sign will disappear = enabling process




12. When 4G is ready to use, 4G sign will appear while selecting [Voice&Data]



### 13. Device information

- Version = iOS 9.2 or up (these are screen examples for iOS 9.3 or up)
- Carrier = 23.1 or up

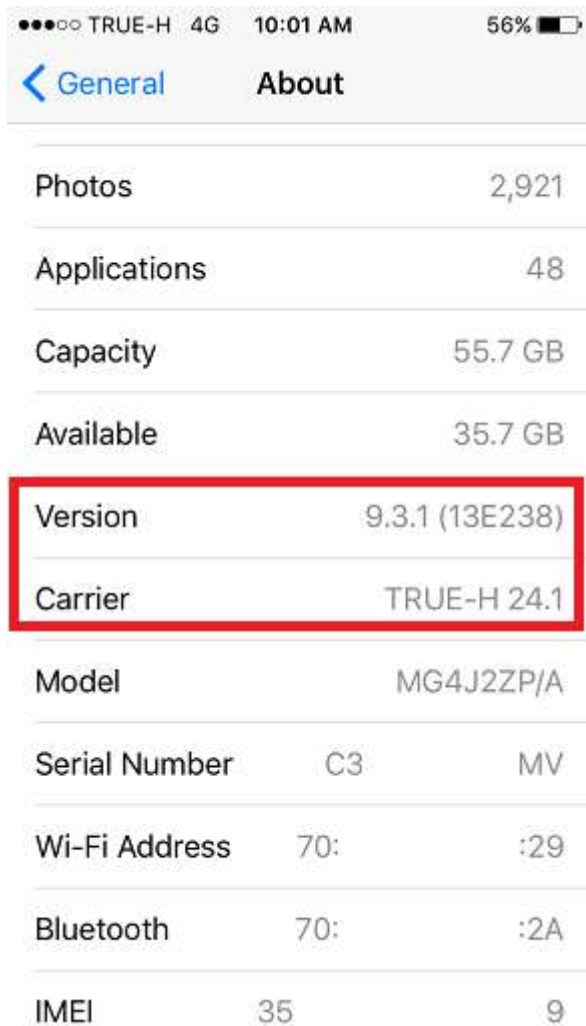

TRUE-H 4G 10:01 AM 56%

[General](#) **About**

Photos	2,921
Applications	48
Capacity	55.7 GB
Available	35.7 GB
Version	9.3.1 (13E238)
Carrier	TRUE-H 24.1
Model	MG4J2ZP/A
Serial Number	C3 MV
Wi-Fi Address	70: :29
Bluetooth	70: :2A
IMEI	35 9