



Set up UPnP for ZTE F612C

1. Open a Browser e.g. IE, Chrome and type <http://192.168.1.1> then press **Enter**

- Username = **admin**
- Password = **password**
- Press **Login**

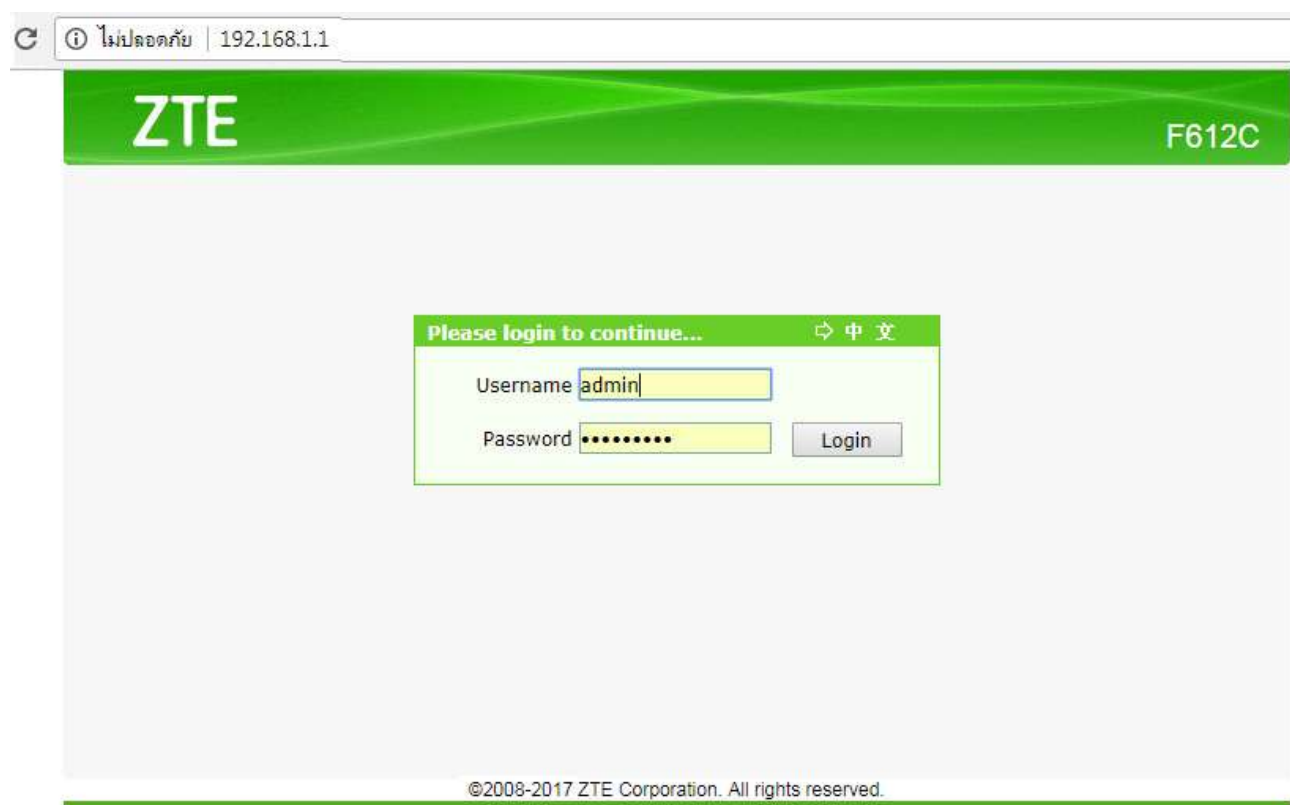

2. Go to **Application > UPnP > Enable** : tick a check (as shown) then press **Submit**

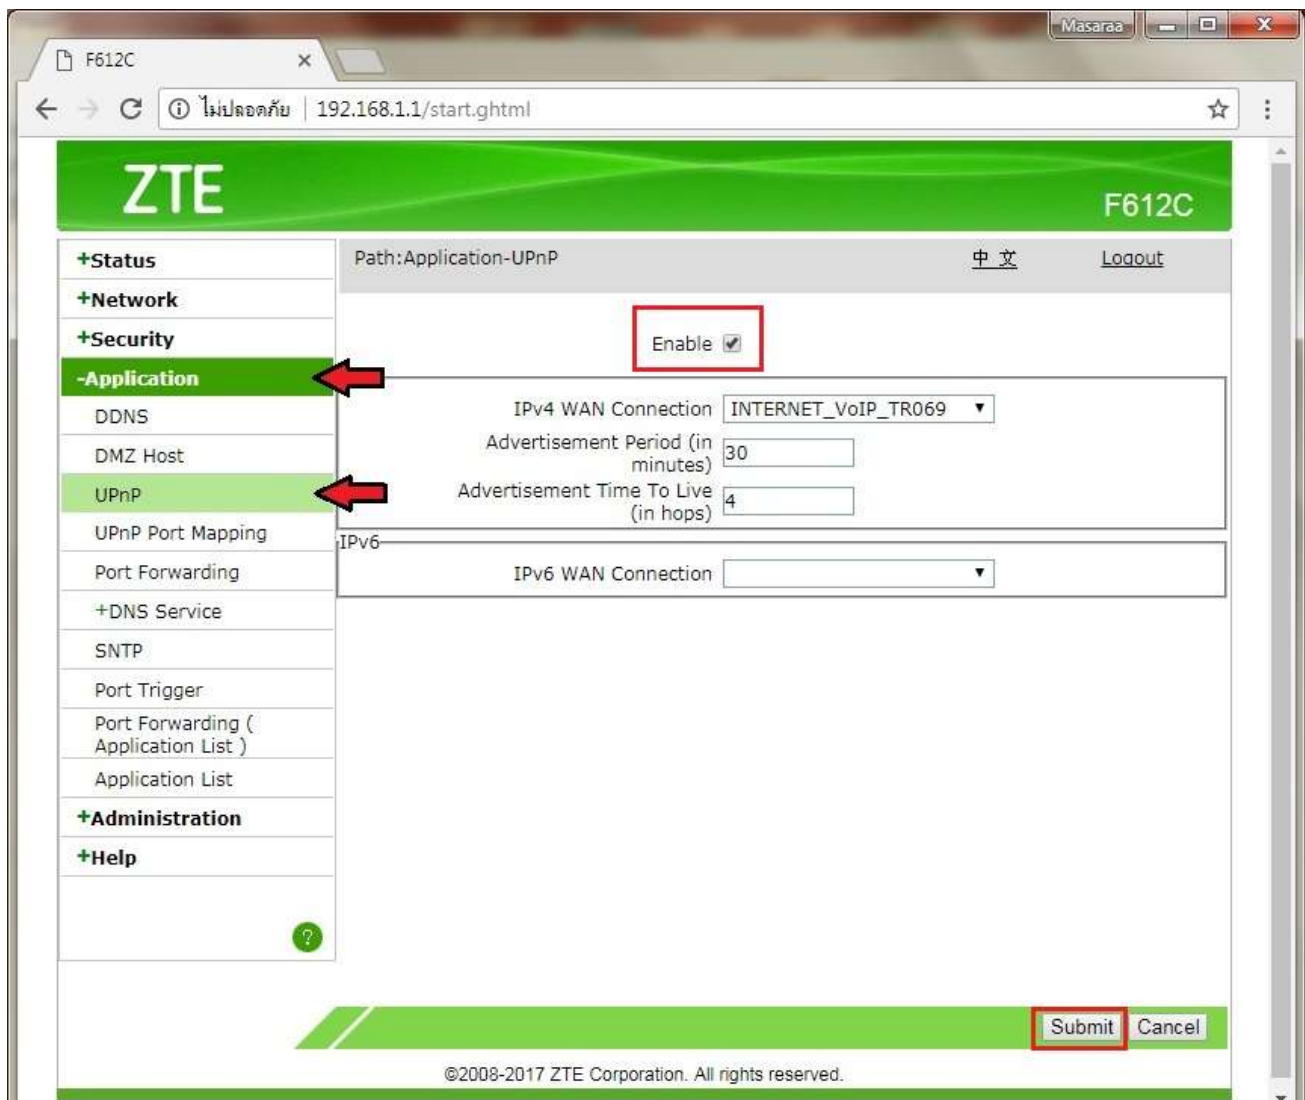

3. At Application > UPnP Port Mapping > if Enable, it'll show which Port that UPnP is using

