

## Set up DMZ for RAISECOM ISCOM HT803G-UA

1. Type **192.168.1.1** and press Enter, Username = **admin**, Password = **password** then press **Login**



User Login



User Name:

Password:

Language Select: English ▾

2. Select **Apply** > **Advanced NAT Configuration** > **DMZ Config**

The screenshot shows the RAISECOM web interface. The top navigation bar includes 'Apply', 'Status', 'Internet', 'Security', and 'Apply'. The 'Apply' button is highlighted with a red box and a red arrow labeled '1'. Below this, the 'Advanced NAT Configuration' menu item is highlighted with a red box and a red arrow labeled '2'. In the left sidebar, the 'DMZ Config' menu item is highlighted with a red box and a red arrow labeled '3'. The main content area shows the 'NAT -- DMZ Host' configuration page, which includes instructions on how to enable or disable the DMZ host and a 'Save/Apply' button.

3. Check the settings as follows:

- **DMZ Host:** choose **Enable**
- **DMZ Host IP Address:** enter IP Address of device  
**remarks :** to set up DMZ can set only 1 IP Address
- Press **Save/Apply**

