 


Set up LAN and DHCP for HUMAX HG100RE (version 1.2.4)


1. Type 192.168.1.1 in the Address bar then press Enter



2. Enter User Name = admin and Password = password then press Login

A screenshot of a login page titled "Login". Below the title is the instruction "Enter username and password to login." There are two input fields: "User Name" with the text "admin" and "Password" with the text "password". Below the fields is a blue "Login" button. A close button (X) is in the top right corner.

3. On left menu, select Basic then go to Setup

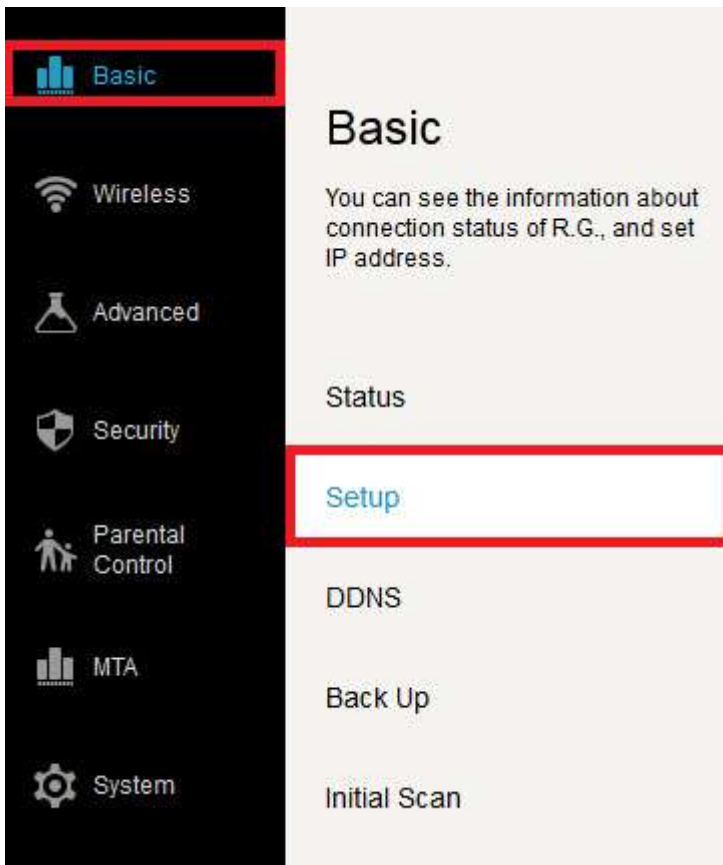

4. Set up as follows:

- IPv4 Address : Modem's IP Address
- Subnet Mask
- DNS Server
- DHCP Server : choose Enabled / Disabled
- Start IP Address : set Client to start with which number
- Allowable Users : set how many users
- Client Lease Time : how long to use (Default 1440 minutes = 24 hours)
- Once completed, press Apply

Setup

Quick

help

LAN Configuration

IPv4 Address

192

168

1

1

Subnet Mask

255

255

255

0

DNS Server

192

168

1

1

MAC Address

08

EB

74

BB

D6

99

DHCP Server Setting

DHCP Server

Enabled

Disabled

Start IP Address

192

168

1

33

Allowable Users

32

1 to 222

Client Lease Time

1440

Minutes

Apply