

Set up LAN for RAISECOM ISCOM HT803G-UA

1. Type **192.168.1.1** and press **Enter**, Username = **admin**, Password = **password** then press **Login**



User Login

User Name:

Password:

Language Select:

2. Select **Internet > LAN IP Config > IP v4 Config** > set up as desired and then press **Apply**

