

Format SD Card on True Super Talkie 4G


1. On main screen, select **(Menu)**



2. Select **(Settings)**



3. Go down to **(Storage)**

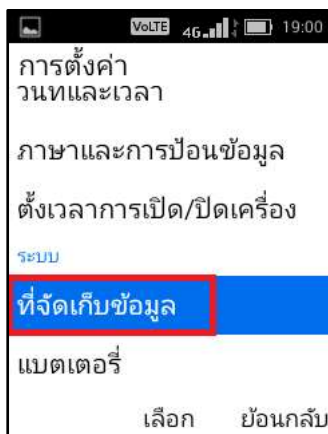

4. Select **(SD card)**



5. SD card:

- SD card : storage used shows in blue tab
- Total space : Micro SD Card storage capacity
- Available : remaining storage




6. Go down and choose (Erase SD card)




7. Confirm to delete data from Micro SD Card?, choose (Options)



8. Then choose (Erase SD card)

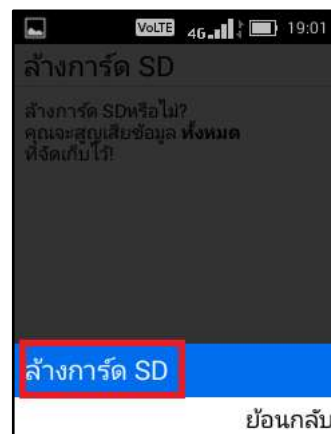

9. Erase SD card, choose (Options)

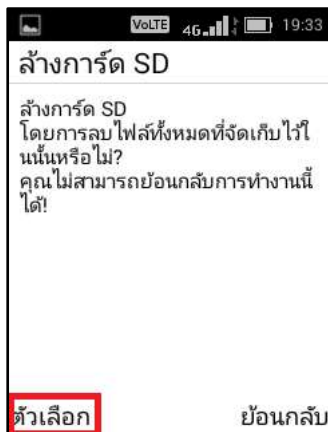

10. And then (Erase everything), wait for the system to erase all data in Micro SD Card

