


## Check SIM card status on True Super Talkie 4G


1. On main screen, select (Menu)



2. Select (Settings)

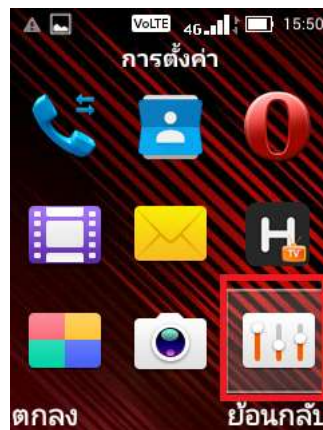

3. Select (About phone)

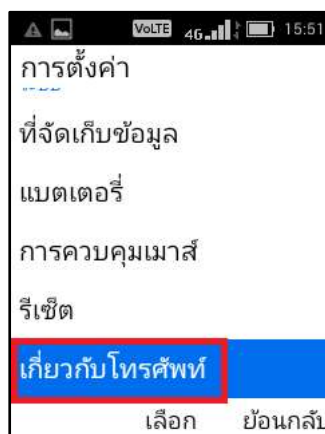


4. And then (Status)



5. Select (SIM status)



6. There's only 1 SIM used : TRUE, choose TRUE

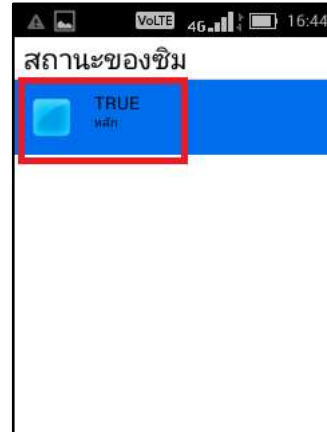

7. TRUE SIM status as follows:

- Network
- Signal strength : signal strength level
- Mobile network type
- Service state : In service
- Roaming : Not Roaming
- Mobile network state : Connected, if connect Wi-Fi, the status is (Disconnected)
- My phone number
- IMEI : device's IMEI number

