

## Set up LAN on AP FiberHome HG180Ev2

1. Type 192.168.2.1 in URL and enter Username : **admin** / Password : **enter letters from below picture** then press **Login**



## 2. Basic Setup > LAN > IPv4 Configuration

- IP Address : Default Gateway and it's used to configure AP
- Set Manually : set DNS values manually (default: Use DNS Server)
- Start(PC) : Start IP that AP share to other device connected to DHCP network
- END(PC) : End IP that AP share to other device connected to DHCP network
- Press Apply to save the settings
- **If want to add more device to get DHCP**, must change numbers at Start and End
  - Example Start : 192.168.2.33 , End : 192.168.2.64 = 32 devices
  - If Start : 192.168.2.33 End : 192.168.2.100 = 68 devices

**FiberHome** **HG180Ev2** Dual Band 802.11ac WiFi Router Logout

Home

▶ Status

▼ Basic Setup

  WAN Service

  ▼ LAN

**IPv4 Configuration**

    IPv6 Configuration

  ▶ WLAN

▶ Advanced Setup

▶ Applications

▶ Management

### IPv4 Configuration

IP Address:  **1**

Subnet Mask:  **2**

Use DNS Relay  Set Manually

Primary DNS Server:

Secondary DNS Server:

Domain Name:

Disable DHCP  Enable DHCP Relay  Enable DHCP Server

Relay IP:

Start(PC):  **3**

End(PC):  **4**

Lease Time:  (Seconds)

**5**

Copyright © FiberHome 2017. All Rights Reserved.