

Log in Configuration page for True IoT Router WiFi


1. Notice at the bottom of True IoT Router WiFi, there'll be a sticker shows data for device connection

- Device Manager Website : <http://192.168.0.1>
- Website User Name : admin
- Website Password : password

remarks : default setting




2. Connect Wi-Fi to True IoT Router WiFi

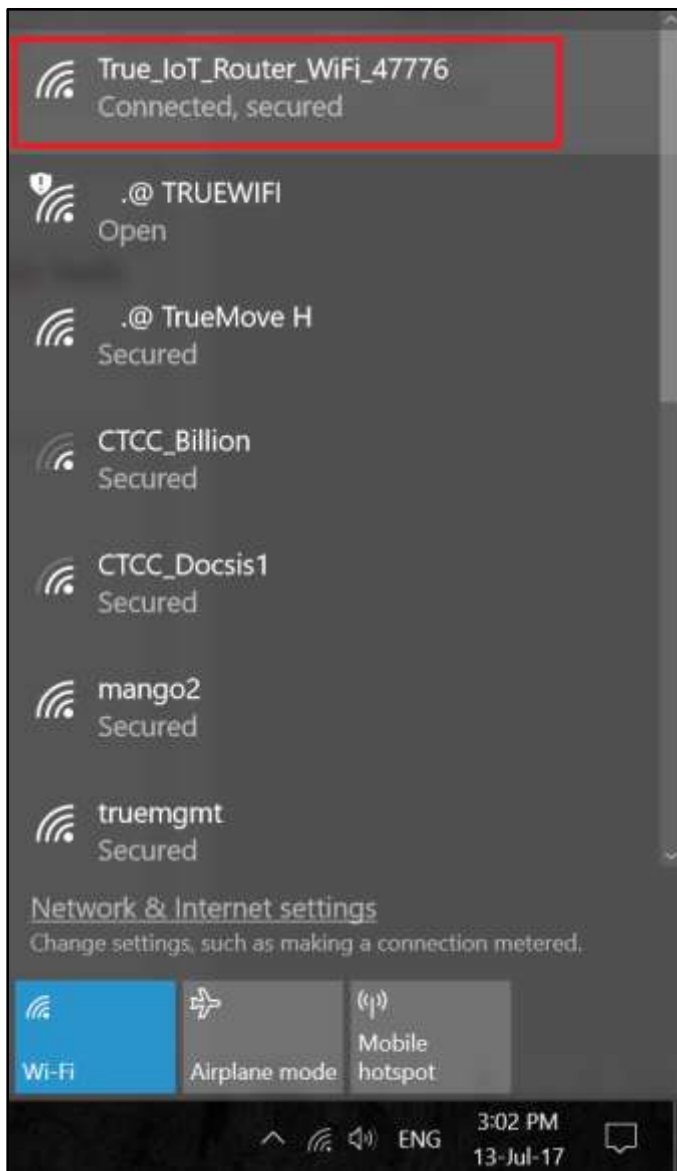


3. Access a Web Browser (example : Google Chrome)




4. Website

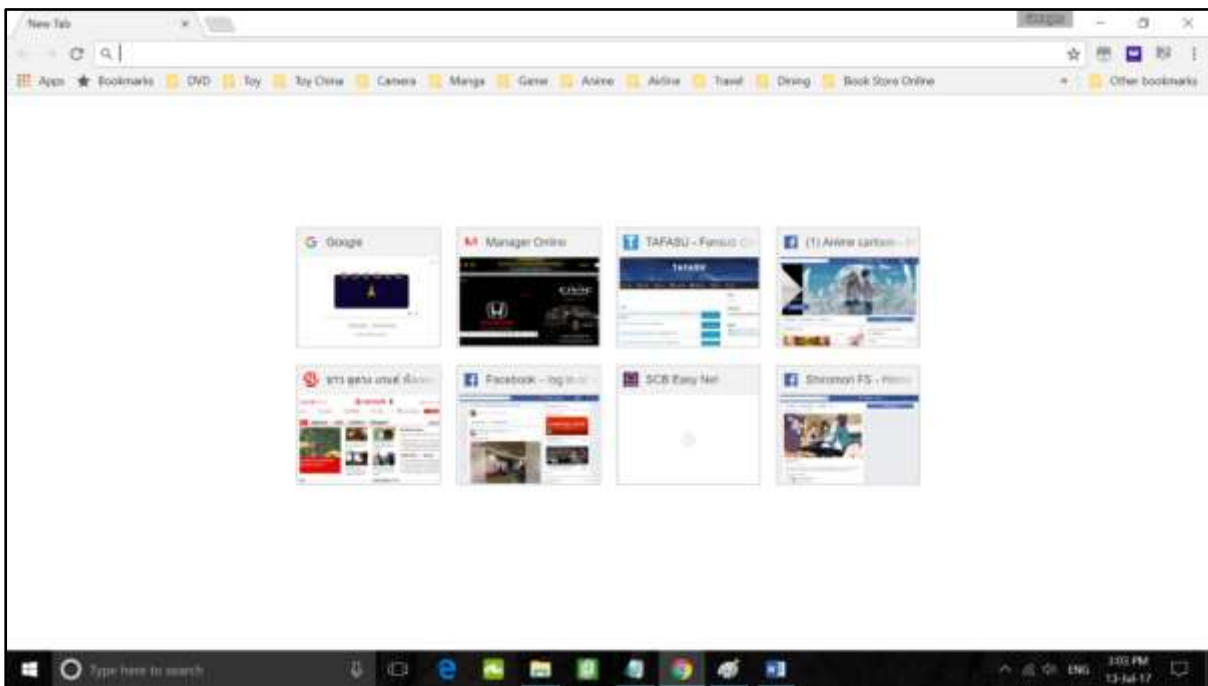


5. Type <http://192.168.0.1> in URL

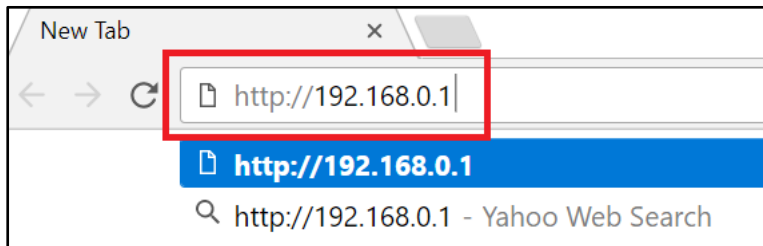

6. Wait a moment, a Login Page will appear

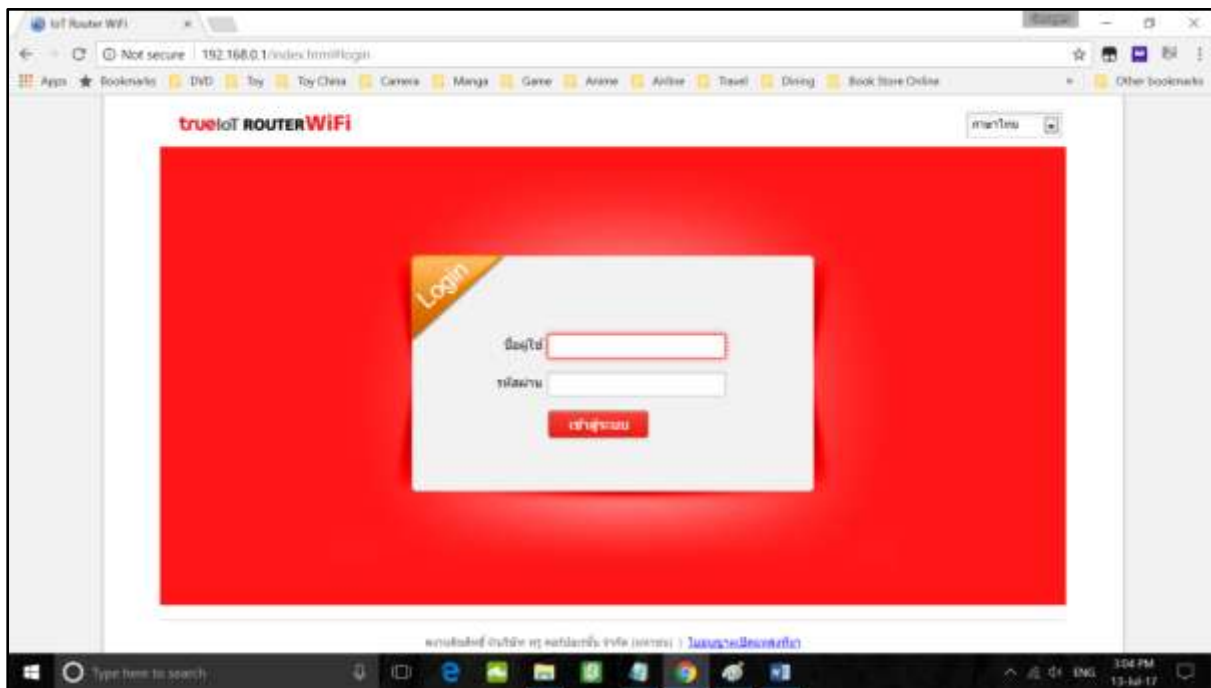


7. To change language, at top right corner click choose Thai or English

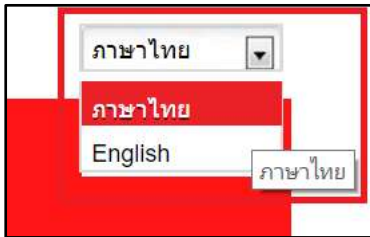

8. Enter Username = **admin** / Password = **password** and press **Login**


A screenshot of a login form. The form has a yellow 'Login' banner in the top left corner. It contains two input fields: 'ชื่อผู้ใช้' (Username) with the value 'admin' and 'รหัสผ่าน' (Password) with a masked value '.....'. A red button labeled 'เข้าสู่ระบบ' (Login) is below the fields. Red numbers 1, 2, and 3 are overlaid on the form to indicate steps: 1 is next to the username field, 2 is next to the password field, and 3 is next to the login button.

9. Configuration Page of True IoT Router WiFi will be at Home page

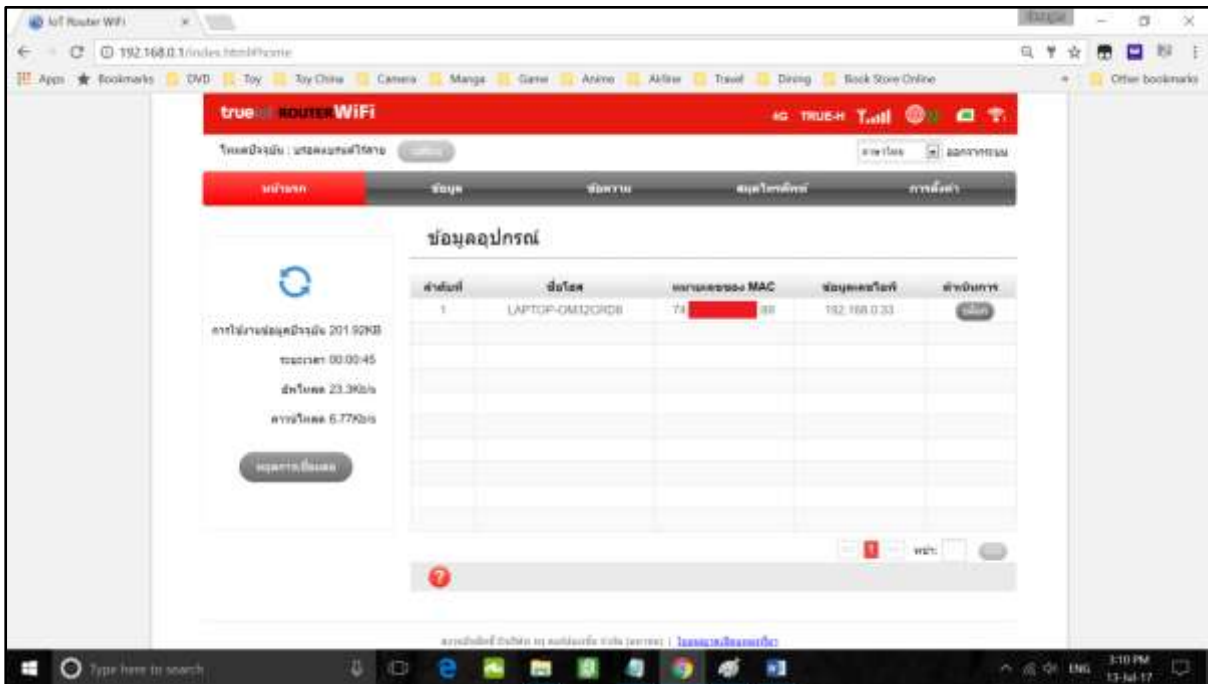


10. At Home page

- Top right : connection status will appear
- Left : show data volume and connection duration and speed to upload and download
- Device Information : show the device connected to True IoT Router WiFi

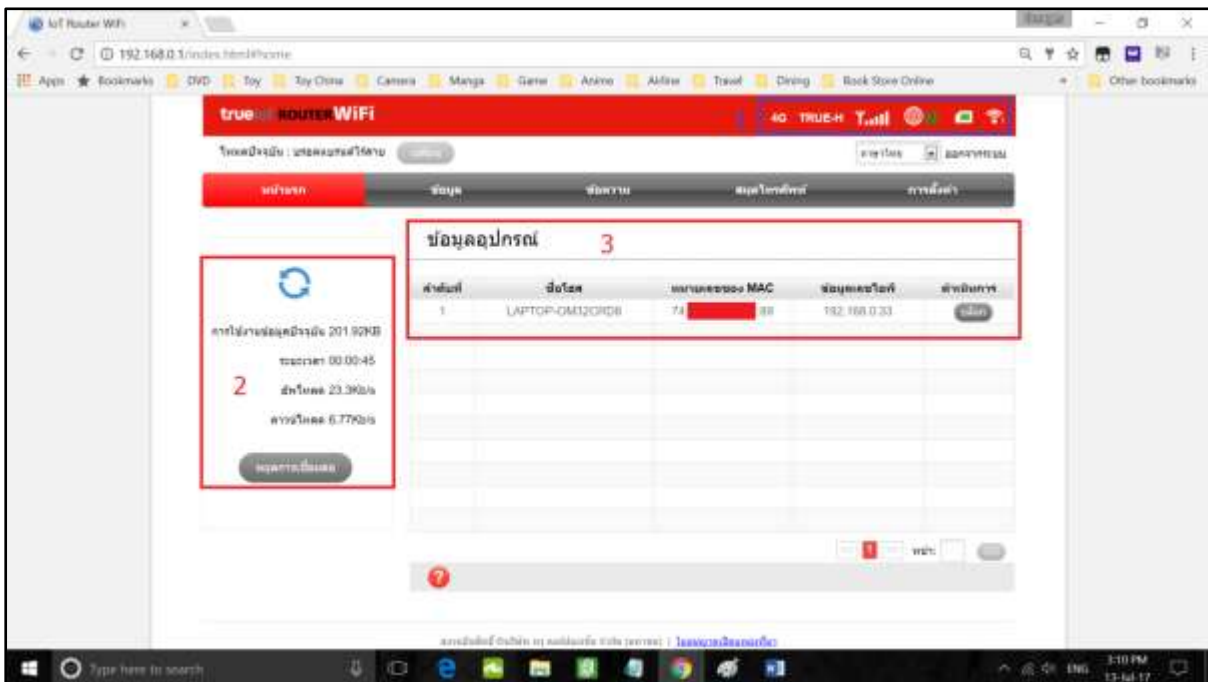

11. To log out : at top right corner, click **Logout**

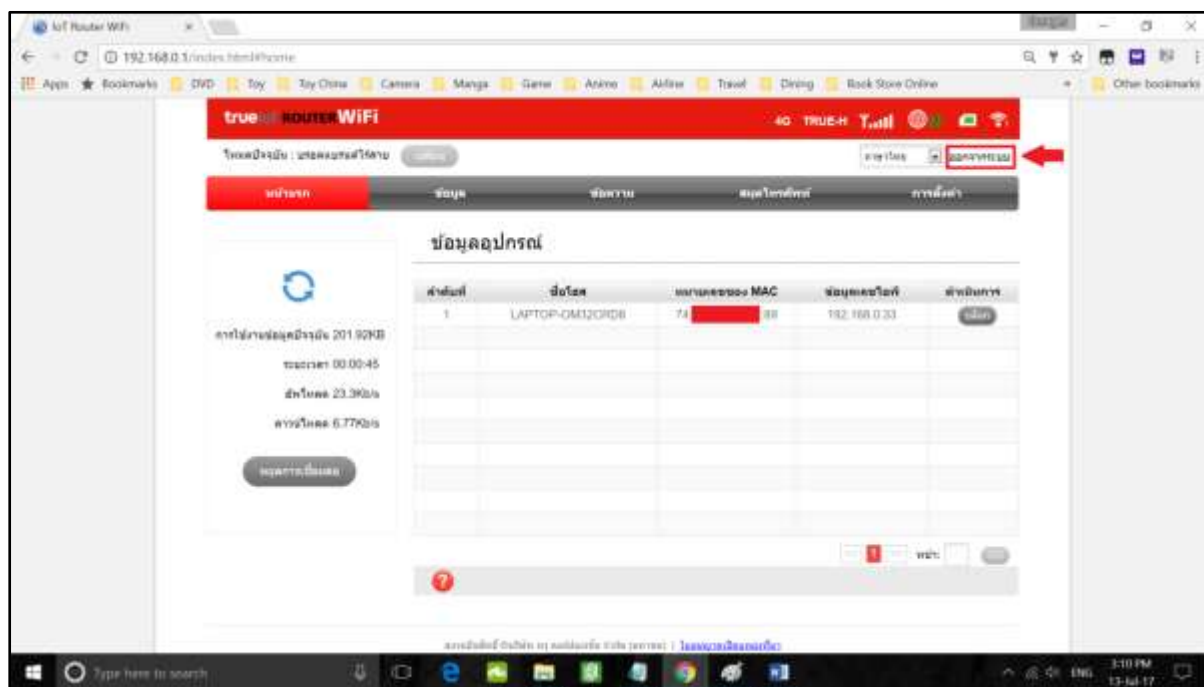

12. A popup to Confirm, choose Yes



13. Back to Login page again

