

## Enable VoWiFi on True Super Talkie 4G


1. On main screen, select **(Menu)**




2. Select **(Settings)**



3. And then **(More)**

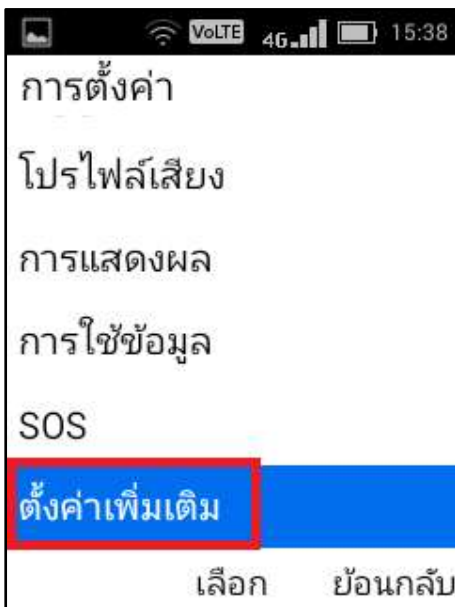

4. Select **(Wi-Fi calling)**

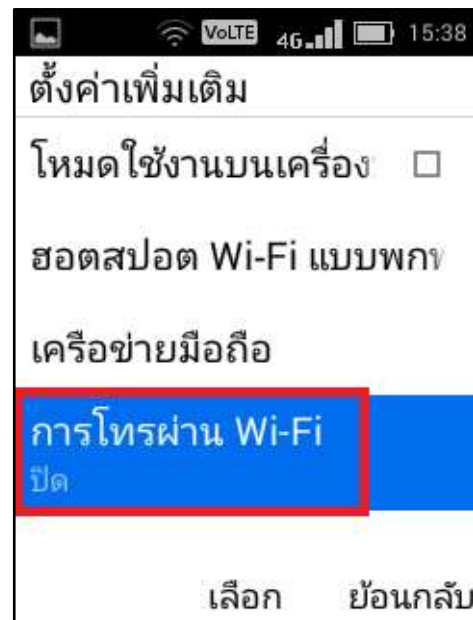


5. Click enable (Wi-Fi calling)



6. Calling preference will appear



7. Select (Calling preference)

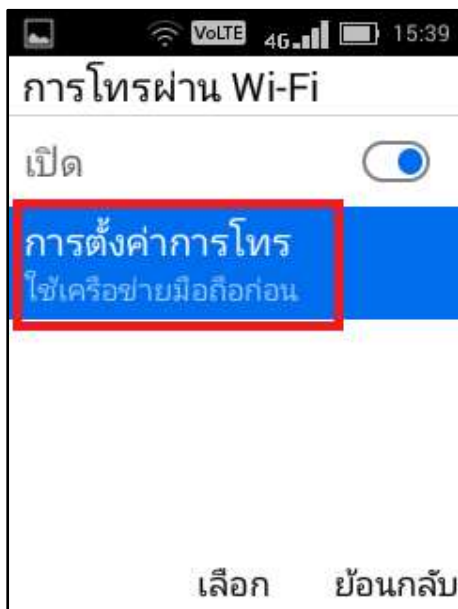

8. Wi-Fi calling preference


- Wi-Fi preferred : prefer to call via Wi-Fi first
- Cellular preferred : prefer to call via Cellular first, if no cellular network, so it will call via Wi-Fi instead




9. Select **(Wi-Fi preferred)** : recommend to choose VoWiFi (Native) as first priority



10. Back to (Wi-Fi calling), notice at (Calling preference), Wi-Fi preferred will appear

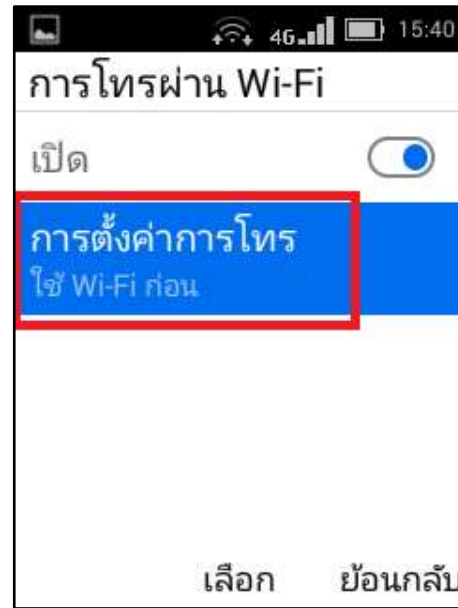

11. Wait a moment, VoWiFi and a green fan sign will appear = VoWiFi is now selected

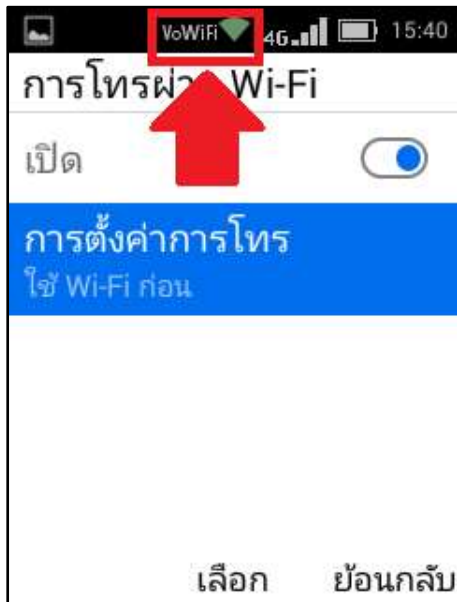

12. When making call or receiving call

- Notice if there's VoWiFi with a fan sign
- On screen (make call-receive call) : a fan and WI-FI CALL: to notify that calling is through VoWiFi



## What should know

- Must activate 4G HD Voice (VoLTE) on SIM Card with network operator
- True Super Talkie 4G supports only TrueMove H SIM, it's ineligible for other service operator's SIM

## Problem that may occur

- If Wi-Fi connection is disconnected and no VoWiFi sign, turn off – turn on VoWiFi once to have VoWiFi sign shows again
- If making call via VoWiFi and then disable, it may result VoLTE is disappear, wait for a while and then turn off – turn on device once, VoLTE will normally appear