

How to set Port Forwarding on Technicolor 7200.20

1. Open a Browser and type <http://192.168.0.1> in the address bar and type “admin” as the password then click OK

Note: you might have a problem when using IE, try using another browser.



2. Click Advanced > Forwarding
 - a. External IP Address = 0.0.0.0
 - b. Select Service Name
 - c. Click Add
 - d. Set up Port as desired
 - e. Click Apply

Note: External IP Address means WAN IP, which is changed every 24 hours. There should be no parameter entered.

Advanced

Forwarding : This page allows for incoming requests on specific port numbers to reach web servers, FTP servers, mail servers, etc. so they can be accessible from the public internet. A table of commonly used port numbers is also provided.

Known Rule Adder

Local IP Address: 192.168.0.12
External IP Address: 0.0.0.0
Service Name: AIM Talk

Port Forwarding

Internal		External			Protocol	Description	Enabled		Remove All
IP Address	Start Port	End Port	IP Address	Start Port					
192.168.0.12	5001	5001	0.0.0.0	5001	5001	BOTH		Yes	Edit Remove

UPNP port mapping

Protocol	Start Port	End Port	Description
----------	------------	----------	-------------