## true

## Set up DMZ on ZTE F688

- 1. Type 192.168.1.1 at Browser and press Enter
  - Username = admin
  - Password = enter letters shown in Default Router Password (each ZTE model will vary)
  - Press Login

ZTE F688	× +	
← → C ① Not :	ecure   192.168.1.1	ବ 🖈 🔂 🌒
7TE		
ZIL		中文 I English
Home	Internet Local Network	Management & Diagnosis
	Welcome to F688. Please login.	
	Usemame admin	
	Password	
	Default Router Password bFCAbbGM	
	Login	
A 1444 MIL 6 144 A		
Grouperation All Corporation. Al	rights reserved   roop	



- 2. Set up as follows: (DMZ is to forward Port to 1 IP Address to make it able to use every Port)
  - Go to Internet
  - On the left, select Security
  - Select DMZ
  - DMZ : select On to enable automatic Port Forwarding
  - WAN Connection : select Auto
  - LAN Host : enter IP Address of device to forward Port
  - Press Apply

Home		Internet 🚺	Loc	al Network	_	VolP	Management & Diagn	osis
Status	•	Local Service C	Control	ALG	DMZ	Port Forwarding	Port Trigger	1
Security 🕗					3			
DDNS	Page	Information						
SNTP	This pi	age provides the fi	unction of DA	AZ parameter	(s) configura	ation.		
Port Binding	<b>v</b> DI	M7						
Port Locating		y14						- 00100
PON Information	DI	ΔZ	⊛On ⊡	Off	0			
	W	AN Connection	Auto	•	6			
	LA	N Host	192.168.1	.108	0			
					-		_	
						🥘 🔼 🐴	oply Cancel	

TRUE CORPORATION PUBLIC COMPANY LIMITED 18 TRUE TOWER, RATCHADAPHISEK ROAD, HUAI KHWANG, BANGKOK10310 THAILAND WWW.TRUECORP.CO.TH



3. After pressing Apply there'll be a message "Your data have been stored!"

Home	Internet	Local Netwo	ork VoiP	N	Aanagement &	Diagnosis
Status	- Firewall	Filter Criteria	Local Service Control	ALG	DMZ	Por
Security						
DDNS	Page Information	ר				
SNTP	This page provides the	function of DMZ paran	neter(s) configuration.			
Port Binding	▼ DM7					
Port Locating						
	Your data l	have been stored!				
	DMZ	🖲 On 😳 Off				
	DMZ WAN Connection	* On © Off Auto				
	DMZ WAN Connection LAN Host	* On © Off Auto 192.168.1.108	×			
	DMZ WAN Connection LAN Host	* On © Off Auto 192.168.1.108	×	400		ancel
	DMZ WAN Connection LAN Host	* On © Off Auto 192.168.1.108	T	Арр	6 C	ancel