

Forward Port for RAISECOM ISCOM HT803G-UA

1. Type **192.168.1.1** and press Enter, Username = **admin**, Password = **password** then press **Login**



A 'User Login' form with the following fields and options:

- User Name:
- Password:
- Language Select:

Buttons: Login, Rewrite


2. Select **Apply** > **Advanced NAT Configuration** > **NAT-Visual Server Settings** and press **Add**

A screenshot of the RAISECOM web interface. The 'Apply' menu is highlighted in the top navigation bar. The 'NAT-Visual Server Settings' page is displayed, showing a table with columns: Server name, External initial port, Protocol, Server IP address, Server port, Server port Number, and Delete. The 'Add' button is highlighted with a red arrow.

Server name	External initial port	Protocol	Server IP address	Server port	Server port Number	Delete
<input type="button" value="Add"/> <input type="button" value="Delete"/>						

3. Check the settings as follows:

- Select **Custom Server**
- A custom virtual server name: enter name as desired
- External initial port: enter Port to Forward
- Protocol: select protocol
- Server IP Address: enter IP Address of device to forward Port
- Server Port: enter Port to forward
- Press **Save/Apply**

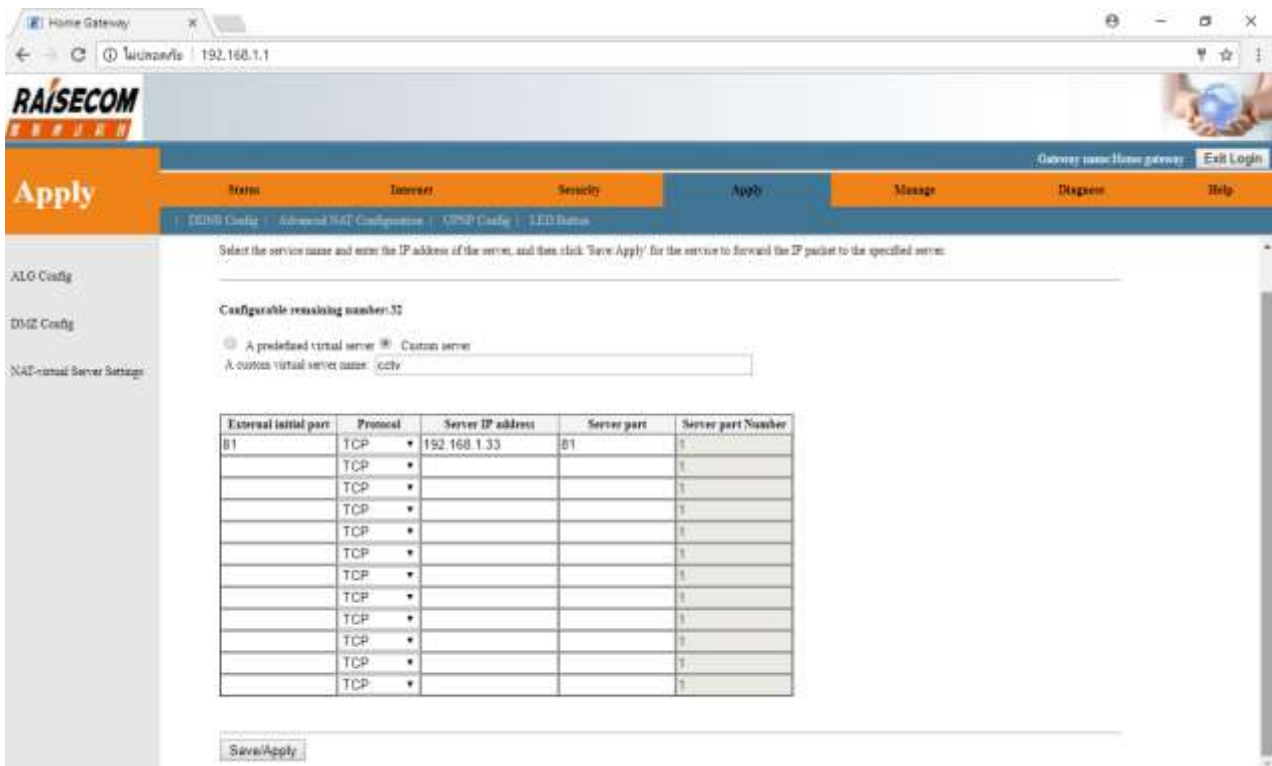

4. Back to NAT-Visual Server Settings, there'll be a table showing setup information

NAT-visual Server Settings

Virtual server is the use of LAN side of a device as a server, remote devices from the WAN side of the direct access to the server, the maximum can only enter the 21 configurations.

Server name	External initial port	Protocol	Server IP address	Server port	Server port Number	Delete
octv	81	TCP	192.168.1.33	81	1	

Add Delete

User Login

User Name:

Password:

Language Select:

Login Rewrite