


How to enable/ disable SSID on Cisco EPC 2325

1. Open Browser and type <http://192.168.0.1> in the address bar




2. Click Setup

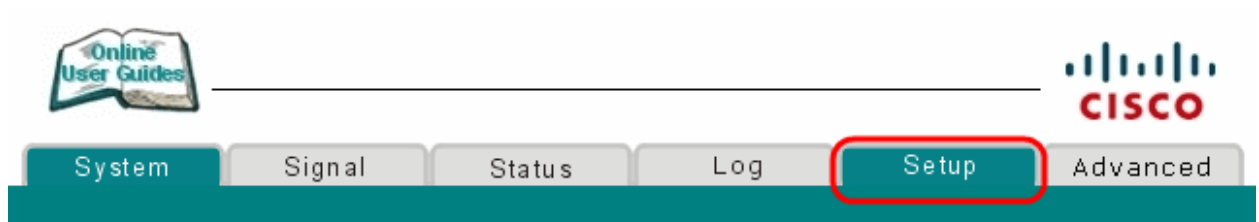


3. Enter **admin** for Username and **W2402** for Password. The “W” must be upper casing then click OK

Note: if typing <http://192.168.0.1> doesn't work, try entering 192.168.1.1 and entering “**admin**” for Username and “**password**” for password

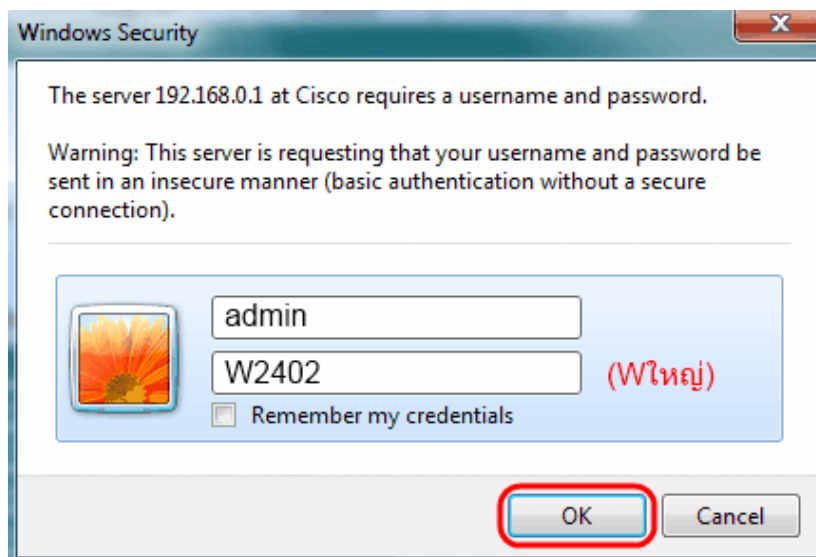

4. Go to **Wireless -Basic** page > **SSID Broadcast**, select Enabled or Disabled

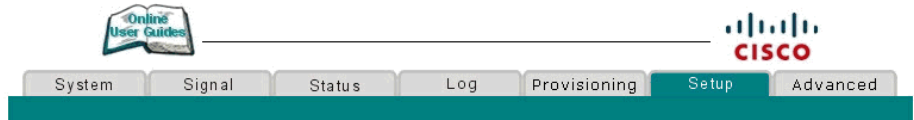

Setup

Wireless - Basic

This page allows you to configure your wireless access point parameters, including SSID and channel number.

Access Point	Enabled ▾
Service Set Identifier (SSID)	@Cisco_D2_
Basic Service Set Identifier (BSSID)	E0:69:95:54:4C:76
SSID Broadcast	Enabled ▾
Country	Worldwide (US) ▾
New Channel	Auto ▾
Channel Width	Standard - 20 MHz Channel ▾
Current Channel	11
Encryption Mode	TKIP+AES

Note: This function limits to below Firmware

Name	Cisco EPC2325
Modem Serial Number	233174182
Cable Modem MAC Address	48:44:87:26:49:2c
Hardware Version	1.0
Receive Power Level	9.3 dBmV
Transmit Power Level	48.2 dBmV
Cable Modem Status	Operational
Vendor	Cisco
Boot Revision	2.1.7IR3

ut the firmware of your cable modem.

Firmware Name	epc2325-v202r1289-110722cs-TRU.bin
Software Revision	epc2325-v202r1289-110722cs-TRU