


## Forward Port Setting on Alpha ASL-74322RT

### 1. Type 192.168.1.1 and press Enter

- User = admin
- Password = enter letters as shown below
- Press Login



### 2. Go to Advanced > Virtual Server

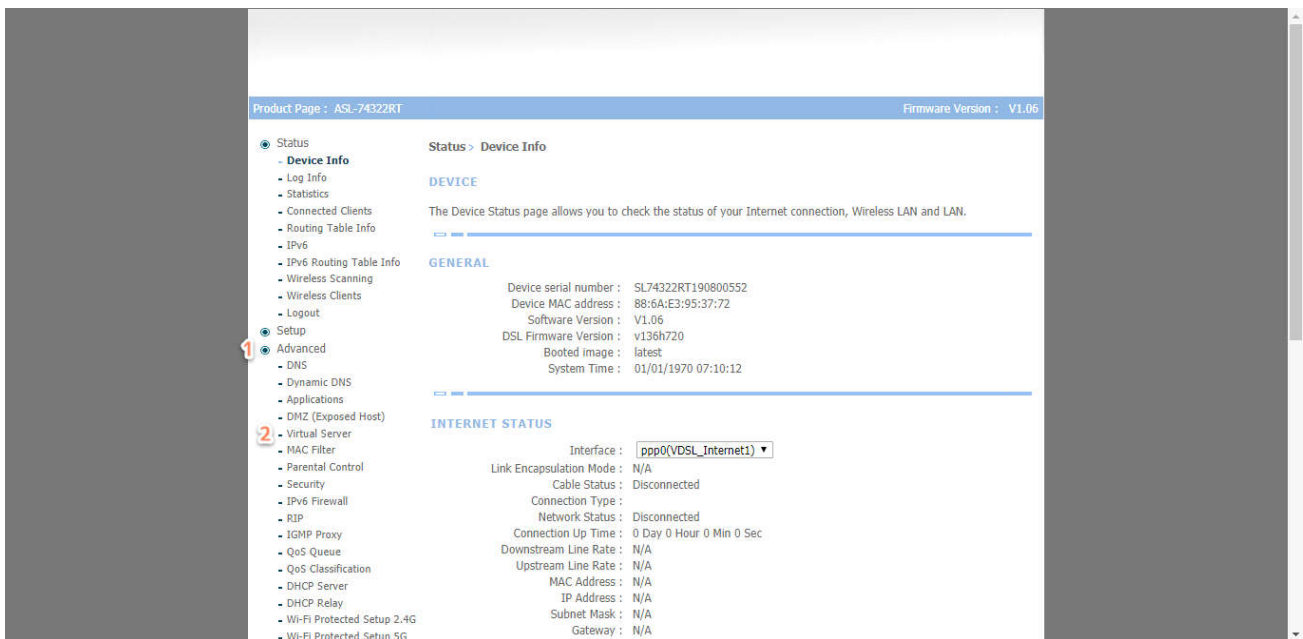

### 3. Set up as follows:

- Enable Virtual Server Rules : click a check to enable
- Name : enter preferred name
- Interface : choose ppp0 (WAN3)
- Internal IP : enter IP Address of device to forward Port
- Internal Start Port / Internal End Port : enter Port number of device or program to forward Port
- External Start Port / External End Port : enter Port that wish to forward
- Protocol Type : choose Both
- When finished, press Add/ Apply to save the setting

