

## Check LAN IP connected to HUAWEI HG8122

### Login

Type 192.168.1.1 at Browser and press Enter, to log in can be 2 types :

### Login first time

#### 1. Enter information

- Account : admin
- Password : password
- Validate Code : enter letters shown below, if they're not clear, press Refresh to change them
- Press Login



HUAWEI HG8122

Account:

Password:

Validate Code:


VJKUH Refresh

Login

Copyright © 2019 Huawei Technologies Co., Ltd. All rights reserved.

## 2. Page to change Password, with following conditions:

- Password : should contain at least 6 letters
- Comply with at least 2 from 4 combinations: number, lowercase letter, uppercase letter and special characters e.g. ` ~ ! @ # \$ % ^ & \* ( ) - \_ = + \ | [ { } ] ; : ' " < , . > / ?.
- Should not repeat with any word in Username
- Press Apply

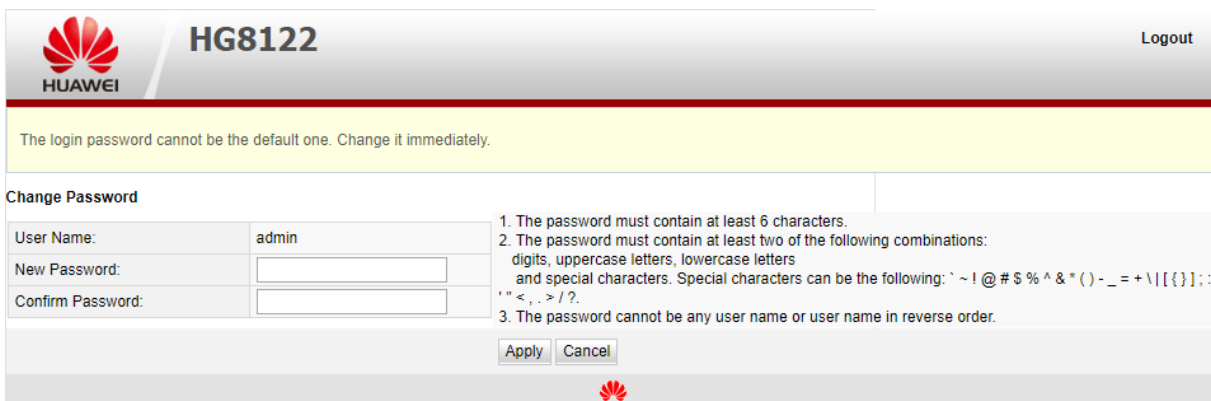

The login password cannot be the default one. Change it immediately.

**Change Password**

User Name: admin

New Password:

Confirm Password:

1. The password must contain at least 6 characters.
2. The password must contain at least two of the following combinations: digits, uppercase letters, lowercase letters and special characters. Special characters can be the following: ` ~ ! @ # \$ % ^ & \* ( ) - \_ = + \ | [ { } ] ; : ' " < , . > / ?.
3. The password cannot be any user name or user name in reverse order.

Apply Cancel

## 3. Go back to Login page, enter the information

- Account : admin
- Password : enter the Password
- Validate Code : enter letters shown below, if they're not clear, press Refresh to change them
- Press Login

HUAWEI HG8122

Account: admin

Password: .....

Validate Code: vrJPE

vrJPE Refresh

Login

Copyright © 2019 Huawei Technologies Co., Ltd. All rights reserved.

If passed first time Login page enter information

- Account : admin
- Password : enter the Password
- Validate Code : enter letters shown below, if they're not clear, press Refresh to change them
- Press Login

HUAWEI HG8122

Account: admin

Password: .....

Validate Code: vrJPE

vrJPE Refresh


Login

Copyright © 2019 Huawei Technologies Co., Ltd. All rights reserved.

## LAN IP Setting

Go to Status > DHCP Information : connected device information will be shown in a table

- Total IP Address : total device that will obtain DHCP IP Address
- Ethernet IP Address : total device that already obtained DHCP IP Address
- Remaining IP Address : remaining DHCP IP Address
- Host Name : name of device connected to Router
- IP Address : IP Address of device connected to Router
- MAC Address : MAC Address numbers of device connected to Router
- Remaining Lease Time : remaining Lease Time (default is 86400 = 1 day)
- Device Type : type of device connected to Router

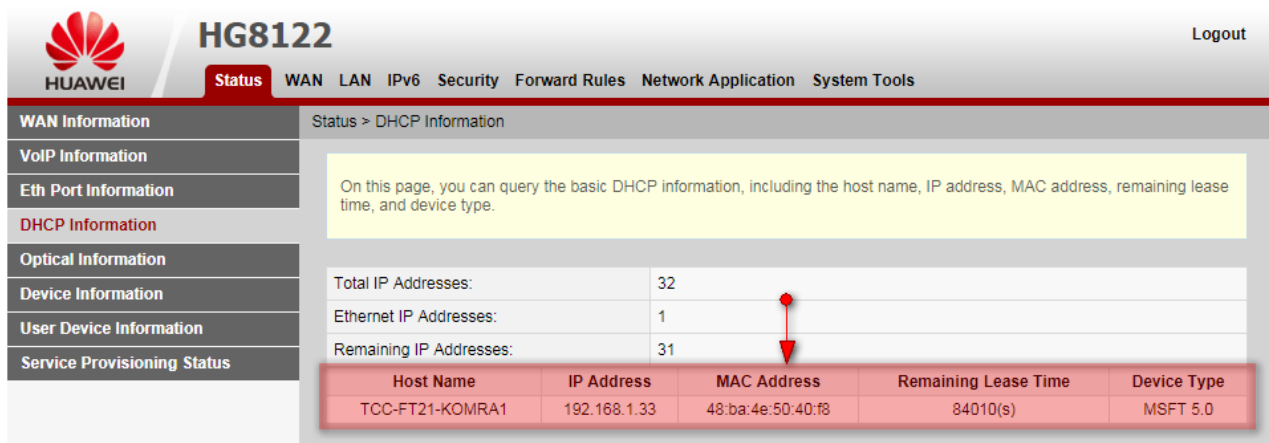

**HUAWEI HG8122** Logout

**Status** WAN LAN IPv6 Security Forward Rules Network Application System Tools

Status > DHCP Information

On this page, you can query the basic DHCP information, including the host name, IP address, MAC address, remaining lease time, and device type.

Total IP Addresses:	32
Ethernet IP Addresses:	1
Remaining IP Addresses:	31

Host Name	IP Address	MAC Address	Remaining Lease Time	Device Type
TCC-FT21-KOMRA1	192.168.1.33	48:ba:4e:50:40:f8	84010(s)	MSFT 5.0