


## การตั้งค่า LAN บน AP FiberHome HG180Ev2

1. พิมพ์ 192.168.2.1 แล้วกด Enter โดยใส่ Username : **admin** / Password : **ใส่ตามตัวอักษรด้านล่าง**  
จากนั้นกดปุ่ม **Login**

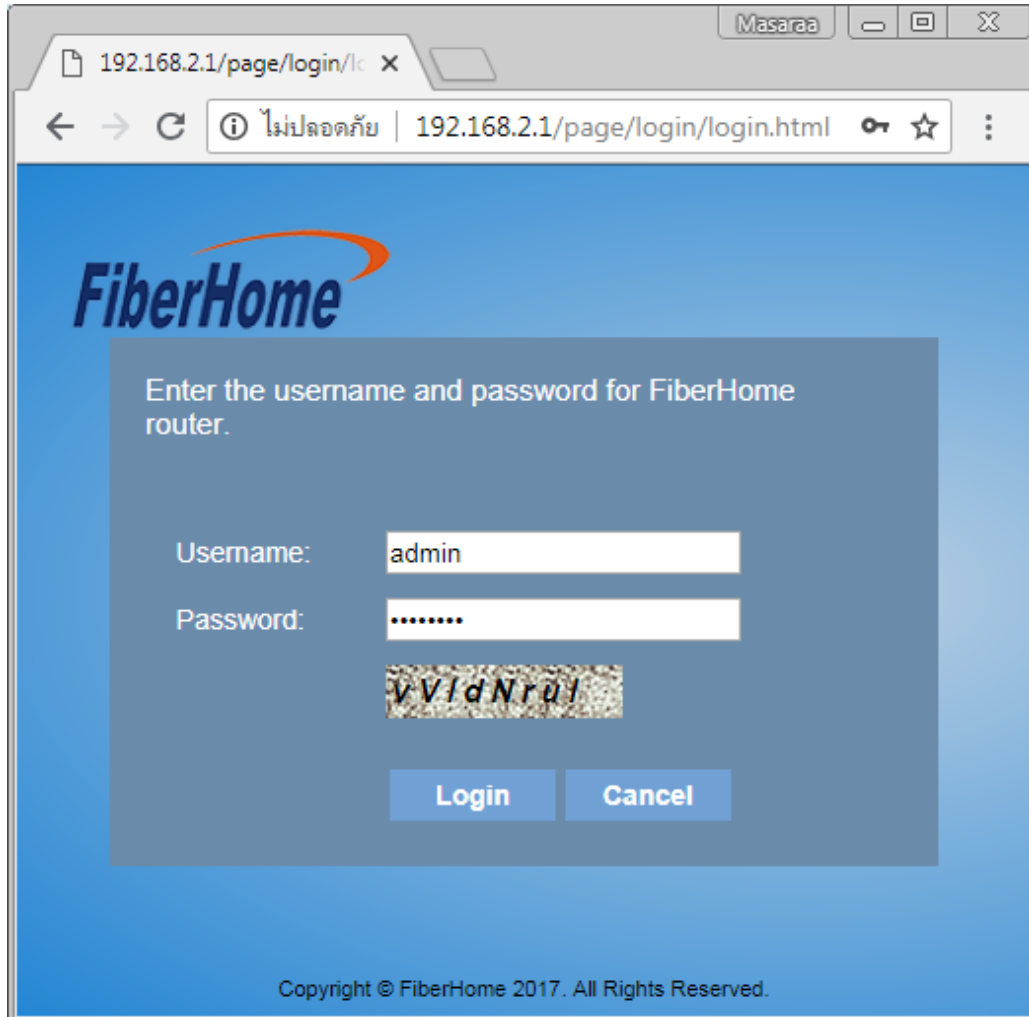

## 2. ไปที่ **Basic Setup > LAN > IPv4 Configuration**

- IP Address : เป็น Default Gateway และ เป็นเลขที่ใช้ในการเข้าถึงค่า AP
- Set Manually : ใช้สำหรับกรณีต้องการกำหนดค่า DNS (ค่าเริ่มต้นจะเป็น Use DNS Server)
- Start(PC) : เป็น IP เริ่มต้นที่ AP จะแจกให้เครื่องที่เข้ามาเชื่อมต่อภายในเครือข่ายแบบ DHCP
- END(PC) : เป็น IP สุดท้ายที่ AP จะแจกให้เครื่องที่เข้ามาเชื่อมต่อภายในเครือข่ายแบบ DHCP
- เสร็จแล้วกด Apply เพื่อบันทึกค่า
- **กรณีต้องการให้ได้จำนวนเครื่องที่รับ DHCP มากขึ้น** จะต้องเปลี่ยนตัวเลขชุดที่ Start และ End
  - ตัวอย่าง Start : 192.168.2.33 , End : 192.168.2.64 = 32 เครื่อง
  - ถ้าเปลี่ยนเป็น Start : 192.168.2.33 End : 192.168.2.100 = 68 เครื่อง

**FiberHome** **HG180Ev2** Dual Band 802.11ac WiFi Router Logout

Home

▸ Status

▾ Basic Setup

    WAN Service

    ▾ LAN

**IPv4 Configuration**

        IPv6 Configuration

    ▸ WLAN

▸ Advanced Setup

▸ Applications

▸ Management

### IPv4 Configuration

IP Address:  **1**

Subnet Mask:  **2**

Use DNS Relay  Set Manually

Primary DNS Server:

Secondary DNS Server:

Domain Name:

Disable DHCP  Enable DHCP Relay  Enable DHCP Server

Relay IP:

Start(PC):  **3**

End(PC):  **4**

Lease Time:  (Seconds)

**5**

Copyright © FiberHome 2017. All Rights Reserved.